



Mandis VAR002 Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis VAR002 Replacement Remote Control Instructions 

Contents

- [1 Mandis VAR002 Replacement Remote Control](#)
- [2 Product Information](#)
- [3 Product Usage Instructions](#)
- [4 Product Overview](#)
- [5 Remote Using Instructions](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



Mandis VAR002 Replacement Remote Control



Product Information

Specifications

- **Aspect Ratio:** 16:9 / Wide
- **Power:** Original
- **Mute:** 1, 2, 3, 4, 5, 6, 7, 8, 9, 0
- **Function Keys:** F1
- **Smart Functions:** Smart S, Smart P

For more information, please visit the [product page](#).

Product Usage Instructions

Power On/Off

- To power on the device, press the “Power” button. To power off, press the “Power” button again.

Aspect Ratio

- To switch between different aspect ratios, use the “Wide” button on the remote control.

Mute

- To mute the sound, press the “Mute” button. Press it again to unmute.

Smart Functions

- The remote control provides two smart functions: “Smart S” and “Smart P”. Use these buttons to access the smart features of your device.






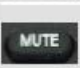

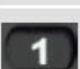
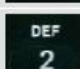
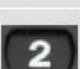

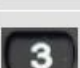


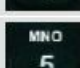
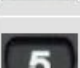
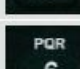
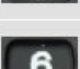

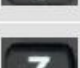





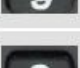


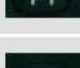





FAQ

- **Q:** How do I change the language on my device?
 - **A:** To change the language, press the “Language” button on the remote control, followed by the corresponding number or arrow keys to select the desired language.
- **Q:** How do I access the EPG (Electronic Program Guide)?
 - **A:** Press the “EPG” button on the remote control to access the Electronic Program Guide.
- **Q:** How do I adjust the volume?
 - **A:** Use the “Vol +” and “Vol -” buttons on the remote control to increase or decrease the volume.

Product Overview



Remote Using Instructions


	Power		Power
	16:9 / Wide		3D
	Mute		Mute
	1		1
	2		2
	3		3
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	F1		Shift + 1
	[:≡]		Shift + Guide
	Smart S		Dual
	Smart P		Smart

	Up		Up
	Right		Right
	Down		Down
	Left		Left
	OK		Ok
	Vol +		Vol +
	Vol -		Vol -
	Menu		Menu
	Source		AV
	CH +		Ch +
	CH -		Ch -
	Info		Info
	Sleep		Sleep
	Recall		Back
	L / R		Options
	Index / Play		Shift + Info
	Index / Play		Play

	Zoom / Pause		Format
	Zoom / Pause		Pause
	Reveal / Stop	 + 	Shift + Text
	Reveal / Stop		Stop
	TTX		Text
	Hold / I<<	 + 	Shift + Pause
	Hold / I<<		I<<
	List / >>I		List
	List / >>I		>>I
	Language / <<	 + 	Shift + Dual
	Language / <<		<<
	Save / >>		Media
	Save / >>		>>
	Red / Radio / Rec		Red
	Red / Radio		TV/R
	Red / Radio / Rec		Rec
	Green / Subtitle		Green
	Green / Subtitle		Subt
	Yellow / Fav		Yellow
	Blue / EPG		Blue
	Yellow / Fav		Pre Ch
	Blue / EPG		Guide

<https://all-remote-controls.co.uk/en/1058735-89933-replacement-remote-control-for-ALCD161041.html>

Documents / Resources



[Mandis VAR002 Replacement Remote Control](#) [pdf] Instructions
VAR002 Replacement Remote Control, VAR002, Replacement Remote Control, Remote Control

References

- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.