



Mandis VT-727G Replacement Remote Control Instructions

[Home](#) » [Mandis](#) » Mandis VT-727G Replacement Remote Control Instructions 

VT-727G Replacement Remote Control
Instructions

[Toshiba VT-727G \(!\[\]\(d66ff64371a51729ac8c1cdaa685ba6f_img.jpg\) \)](#)

Contents

- [1 VT-727G Replacement Remote Control](#)
- [2 Documents / Resources](#)
 - [2.1 References](#)

VT-727G Replacement Remote Control






Original		Replacement		Original		Replacement	
	Power		Power				
	Source		AV / Input / RDS				
	1		1				
	2		2				
	3		3				
	PR+		CH+ / Page+				
	4		4				
	5		5				
	6		6				
	PR-		CH- / Page-				
	7		7				
	8		8				
	9		9				
	Vol+		Vol+				
	0		0				
	Vol-		Vol-				



Documents / Resources

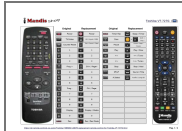

[Mandis VT-727G Replacement Remote Control](#) [pdf] Instructions

VT-727G Replacement Remote Control, VT-727G, Replacement Remote Control, Remote Control

References

- [M Replacement remote control for TOSHIBA VT-727G](#)
- [User Manual](#)