



MANTA RDI910WC Radio Bluetooth with Wireless Charging User Manual

[Home](#) » [MANTA](#) » MANTA RDI910WC Radio Bluetooth with Wireless Charging User Manual 

Contents

- [1 RDI910WC Radio Bluetooth with Wireless Charging](#)
- [2 SAFETY INSTRUCTIONS](#)
- [3 Playing Mode Selection/Switching](#)
- [4 Handsfree for Calling / Redial Phone Call](#)
- [5 Aux in Connection](#)
- [6 Music playback from Micro SD /TF card](#)
- [7 FM Radio and Manual Preset](#)
- [8 Wireless Charging](#)
- [9 Charging the Speaker](#)
- [10 Packing Accessories](#)
- [11 Documents / Resources](#)
- [12 Related Posts](#)

RDI910WC Radio Bluetooth with Wireless Charging



User Manual

www.manta.com.pl

SAFETY INSTRUCTIONS

WARNING

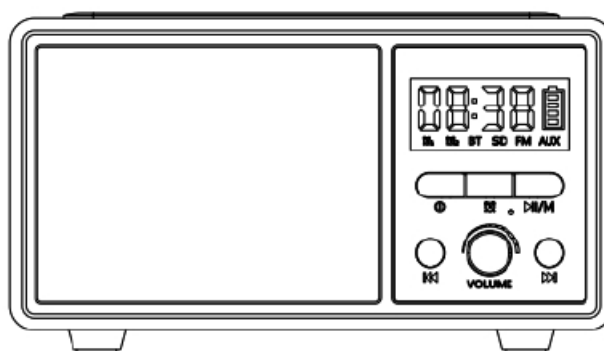
- Never remove the casing of the clock radio.
- Never lubricate any part of the clock radio.
- Never place this clock radio on top of other electronic devices.
- Never expose the clock radio to sunlight, naked flames or heat.
- Make sure you have easy access to the power cord, plug, or adapter to disconnect the clock radio from the power.
- Read this manual
- Heed all warnings.
- Follow all instructions.
- Do not block any vents.
- Install the device in accordance with the manufacturer's instructions.
- Do not install the device near any heat sources, such as radiators, warm air inlets, stoves and other appliances (including amplifiers) that produce heat.
- If a foreign object or a liquid accidentally gets inside the device, disconnect the power cord and have the device checked before re-use.
- Secure the power cord so that it cannot be walked on or pinched, particularly at plugs, convenience receptacles, and the point where the cord exits from the clock radio.
- Use only attachments and accessories specified by the manufacturer.
- Unplug the device from the power source during lightning storms and when not in use for long periods.
- Have the device repaired by qualified service personnel. Servicing is required when the apparatus has been

damaged in any way, such as the power cord is damaged, liquid has been spilled on the apparatus, or an object has been dropped, exposed to rain or moisture, does not operate properly, or has been dropped.


- This clock radio shall not be exposed to dripping or splashing.
- Do not place potentially dangerous objects (eg, pots filled with liquids, lighted candles) on the clock radio.
- If the device is connected to a wall socket with the mains adapter, the plug must be easily accessible


Welcome.....

Thank you for purchasing the new Portable Wireless Speaker RDI91 owe. Please read this manual carefully before operating your product and pay close attention to the precautions, which are mentioned below.






Playing Mode Selection/Switching

1. Long press  button to power on the Bluetooth speaker
2. The default mode is the playing mode when last time power off.

Attention: The speaker has two modes: Speaker mode and Clock mode, Short press  button to switch Clock and Speaker mode. Clock mode only shows the clock, can not play music.

Clock Setting







1. Short press  button to enter clock setting, "number" flashing .Turn right or turn left the "Volume Knob" to adjust the hour and minute, short press  button to switch the hour and minute, short press  or ► 11/M button to confirm the hour and minute.

Note: Time is 24H.


 
Timing Playing

1. Confirm the device is in Clock mode.
2. Short press ► 11/ M. button to set standby time (00-90 minutes). For example: If you set 10 minutes, the speaker will enter into standby after 10 minutes in any modes.

Alarm Setting

1. Long press  button to enter into setting,  icon and “number” flashing , turn the “Volume Knob” to adjust the hour and minute, short press  button to switch the hour and minute, turn on/off alarm. alarm parameters, ring count, alarm tone modes, short press  button to confirm.
2. Alarm on/off: “on” means alarm on; “off” means alarm off. 
3. Ring count: “one” means alarm only one time; “all” means alarm every day.
4. Alarm tone modes:
“bU” means alarm with the tone from speaker system;
“Sd” means alarm with the latest playing song of TF card (should keep the TF card into speaker if select this tone).
“Fn” means alarm with the latest playing FM radio.
5. When all is setting , the alarm is setting.
6. When the clock alarms, short press  button to cancel the clock alarm. Or short press other 3 buttons to set snooze time with interval 9 minutes.

Bluetooth Pairing and Connecting/ Disconnecting

1. Confirm the device is in Speaker mode.
2. Bluetooth speaker will automatically enter pairing mode, “BT” icon flashing.
3. Search for “RDI91 0WC” on the pairing device as mobile phone and then connect.
4. Enter password “0000” if required
5. Double click ► II/ M. button to connect or disconnect Bluetooth
6. Turn the “Volume Knob” to adjust suitable volume.
7. Short press ► II/ M button to play and pause the music.
8. Short press  **OR**  button to select previous or next song.


 


Handsfree for Calling / Redial Phone Call

- a. When call is coming, short press ► II/ M button to answer call, during the calling, short press it again to end the call.
- b. When call is coming, long press ► II/ M button to reject the call directly.

 
 
Aux in Connection

- a. Confirm the device is in Speaker mode.
- b. Long press ► II/ M button to AUX mode, “AUX” icon flashing, connect the AUX cable into the aux-in port of the speaker and connect the other end into the audio-out port of your external music device.
- c. Turn right or turn left the “Volume Knob” to adjust suitable volume.
- d. Short press ► II/ M button to be in silence.

Music playback from Micro SD /TF card

- Confirm the device is in Speaker mode.
- Long press ► II/ M. button to TF mode, "TF" icon flashing, insert a Micro SD card.
- Short press ► II /M button to play and pause the music.
- Short press  or  button to select previous or next song.
- Long press  or  button to fast backward or forward the song.

FM Radio and Manual Preset

- Confirm the device is in Speaker mode.
- Long press ► II/ M button to FM mode, "FM" icon flashing
- Short press ► II/ M button to automatic search and save valid station,
- Short press  to next the station number. short press  to previous station .
- Because the strength of the FM signal varies from different place, please plug in Aux cable as antenna so that the FM signal could be better.**

Wireless Charging

- Before wireless charging, make sure the used phone support wireless charging.
- Plug in the SV2A charging cable to use the DC power SV2A for charging,
- Put the phone on the speaker top section of "WI RELESS CHARGING" to charge.

Charging the Speaker

- Please fully charge the battery before using the device for the first time.
- Connect the SV 2A USB cable to the unit and the other end to AC adapter or P C in order to commence charging. The Red LED will turn on indicating that the unit is now charging. Once the light goes off, this means that the units completely charged and ready to use.

Packing Accessories

- 1 pc 80cm 5V2A charging cable
- 1 pc 80cm Aux in cable
- 1 pc User Manual

Documents / Resources

 <p>MANTA Radio Bluetooth z ładowaniem bezprzewodowym Radio Bluetooth with wireless charging RDI910WC</p> <p>PL - instrukcja obsługi EN - User's Manual ES - Manual de instrucciones IT - Manuale da consultare</p>	<p>MANTA RDI910WC Radio Bluetooth with Wireless Charging [pdf] User Manual RDI910WC, Radio Bluetooth with Wireless Charging, RDI910WC Radio Bluetooth with Wireless Charging</p>
--	--