



# MARATHON BA030019-EU Berlin Weather Station with Colour Display User Manual

[Home](#) » [MARATHON](#) » MARATHON BA030019-EU Berlin Weather Station with Colour Display User Manual 



**Berlin**  
**Weather Station with Colour Display**



**Need a replacement part?**

Remote Temperature Sensor (Part No. BA030017-RS)

Visit: [www.MarathonWatch.com](http://www.MarathonWatch.com) to order a replacement!

**Contents**

- [1 Exploring the features](#)
- [2 What's in the box](#)
- [3 Getting started](#)
- [4 The weather forecast](#)
- [5 Setting your thermometer and hygrometer](#)
- [6 Setting the time and setting an alarm](#)
- [7 Documents / Resources](#)
  - [7.1 References](#)
- [8 Related Posts](#)

## Exploring the features



### Weather forecast

- There are totally 5 different weather status animations in the weather forecast. Sunny, Slightly Cloudy, Cloudy, Rainy and Snow



### Time

- Radio Controlled Time
- Perpetual Calendar Up to Year 2099
- Day of week in 8 languages user selectable
- Daily Alarm Function



### Humidity

- Indoor measurable range: 20 ~ 99%
- Outdoor measurable range: 0 ~ 99%
- Outdoor Humidity Record from Start-Up/Reset, and the corresponded time
- 24 Hours Min/Max Display for Outdoor Humidity



### Temperature

- Indoor & Outdoor temperature display
- Measures °C / °F user selectable
- Outdoor Temperature Record from Start-Up/Reset, and the corresponded time
- 24 Hours Min/Max Display for Outdoor Temperature
- Comfort Indicator Bar



### Wireless outdoor sensor

- Low-battery indicator for Outdoor Sensor
- Wall Mount or Table Stand
- One Wireless outdoor sensor Included
- 433MHz RF transmitting frequency
- 70 meter transmission range in an open area

## What's in the box

### Weather station front LCD screen

A1: Weather forecast

A2: Radio control icon

A3: Time

A4: Day of week/Second

A5: Date

A6: Alarm icon

A7: Outdoor temperature

A8: Outdoor temperature memory

 
A9: Outdoor Humidity

A10: Outdoor humidity memory

A11: Indoor temperature

A12: Indoor humidity

A13: Comfort indicator

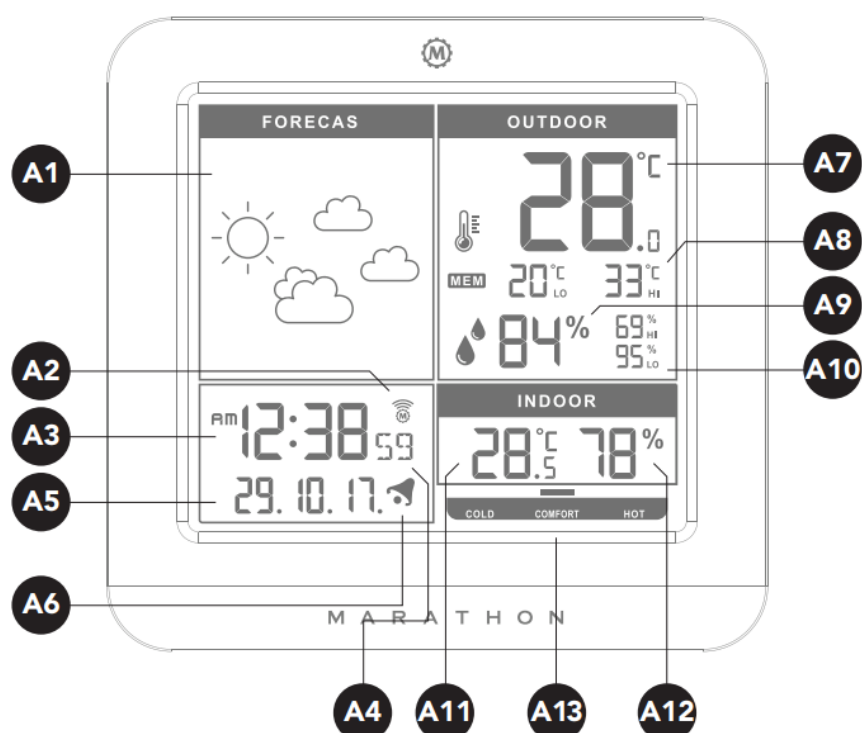

## Weather station backing

B1: SNOOZE/DIMMER button

B2: MODE/SET button

B3: MEMORY button

B4: +/ ALARM ON/OFF button

B5: RESET button

 
B6: - / °C/°F button

 
B7:  button

B8:  button

B9:  button

B10:  button

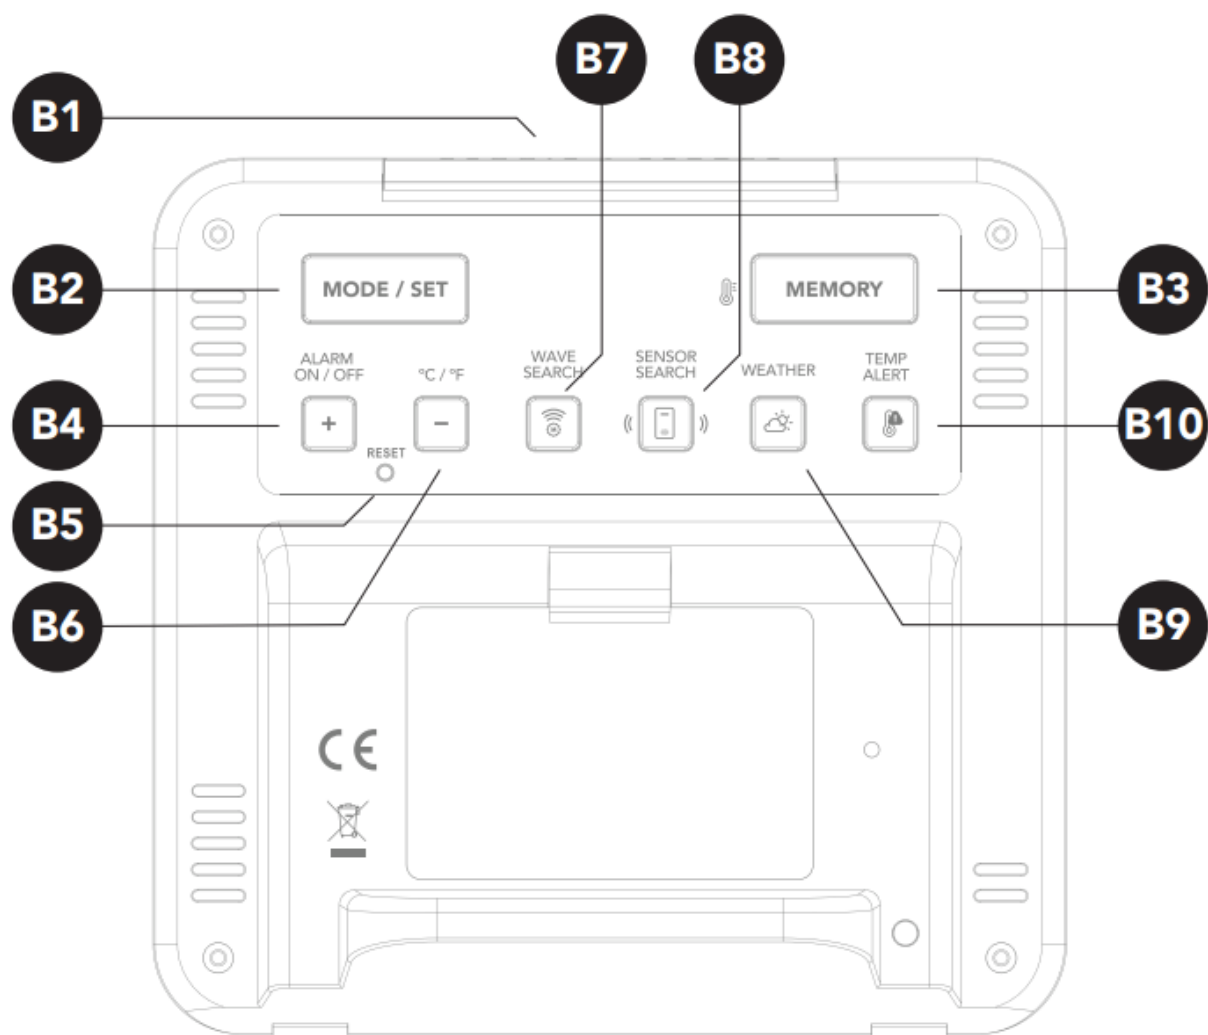

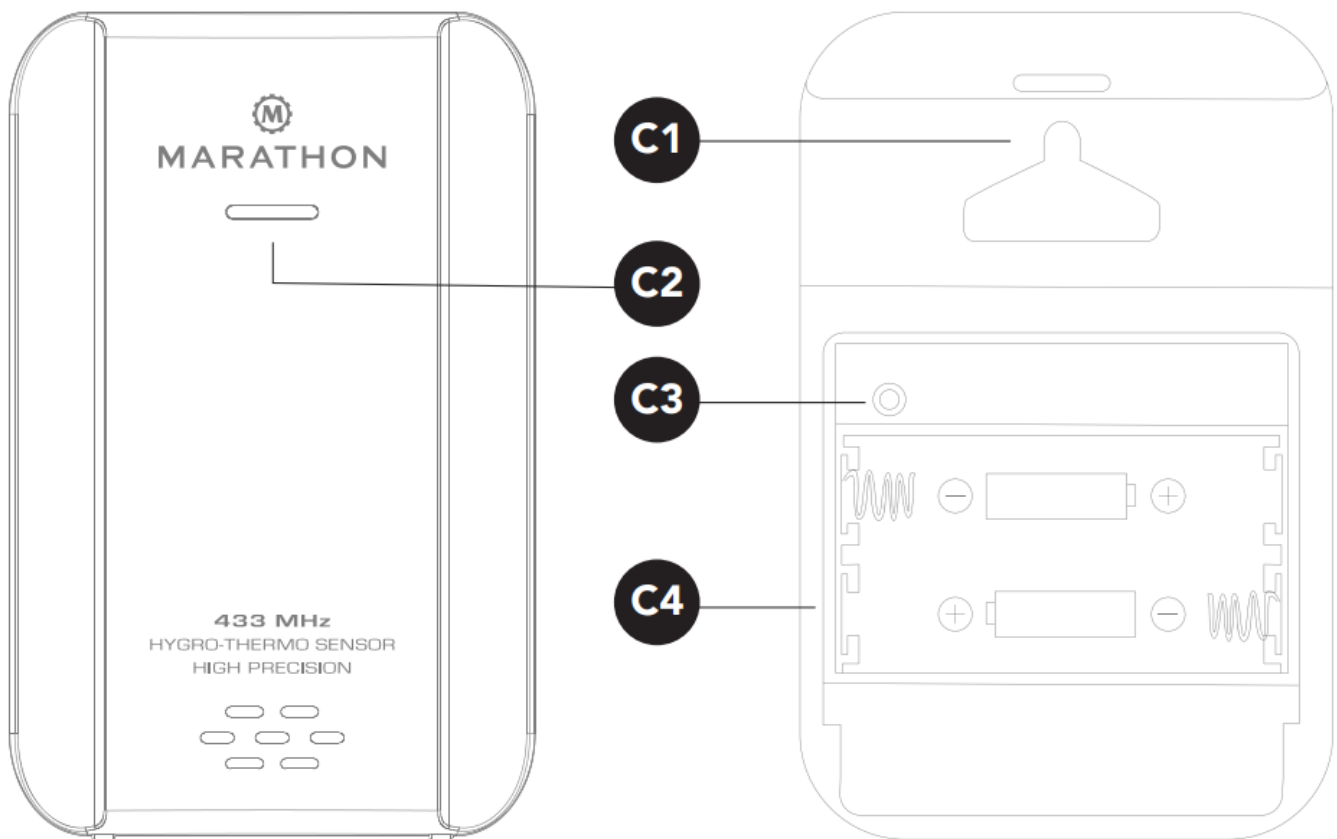

#### Outdoor sensor/transmitter

C1: Wall Mount Hole

C2: Transmission In

C3: RESET button

C4: Battery Compartment

### Getting started

#### Powering up the weather station

Connect the power cord to the wall outlet or remove the battery compartment door and insert 3pcs AAA size battery.

#### NOTE:

- Before connecting the unit to power, make sure your local voltage is the same as marked on the adaptor.
- If solely powered by battery, the backlight will be off. To turn the back light on for 5 seconds, press the SNOOZE/DIMMER button.
- When the power adaptor is connected, the weather station will automatically pull power from the external power supply.

 
#### Powering up the outdoor sensor

Open battery cover, and insert 2 x AA batteries observing polarity [ + and – marks]



#### Proper installation

- Place the main unit on a flat surface.
- The remote sensor should be securely mounted vertically to a surface.
- Transmissions between receiver and transmitter can be reached up to 70m apart in open areas. Open areas refers to areas with no interfering obstacles such as buildings, trees, vehicles, high voltage lines, etc.
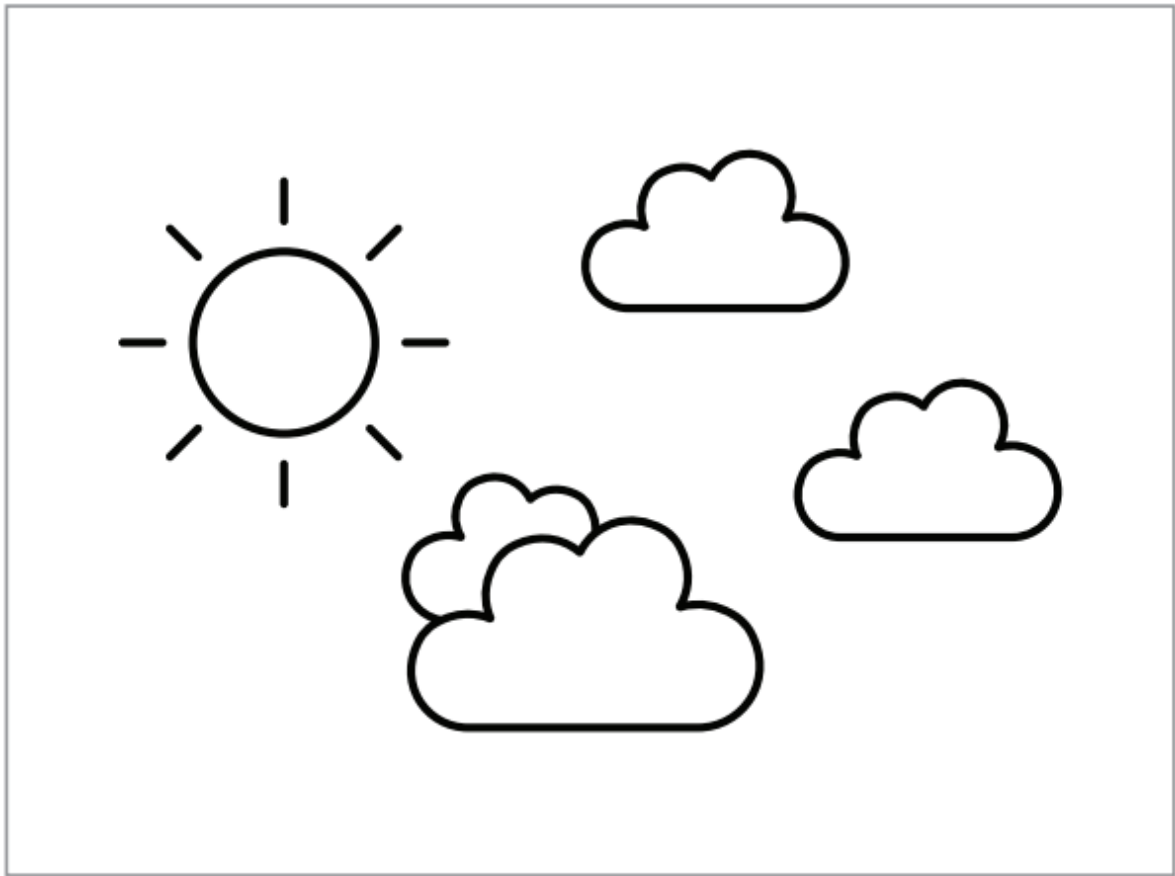
### The weather forecast




### Setting your current weather conditions

 - After holding the  button for 3 seconds, the weather icon will flash on the LCD. Enter the current weather by pressing the – or + buttons. Press the  button to confirm the setting. The weather forecast may not be accurate if the weather entered does not match the current weather. The weather station will start the first forecast 6 hours after the current weather status has been entered.
- The current weather status should be entered again if the altitude of the main unit is changed. (The Barometric pressure is lower at higher altitude location. Therefore, altitude change will affect the weather forecast).

### Weather conditions

There are in total 5 different weather statuses in the weather forecast.

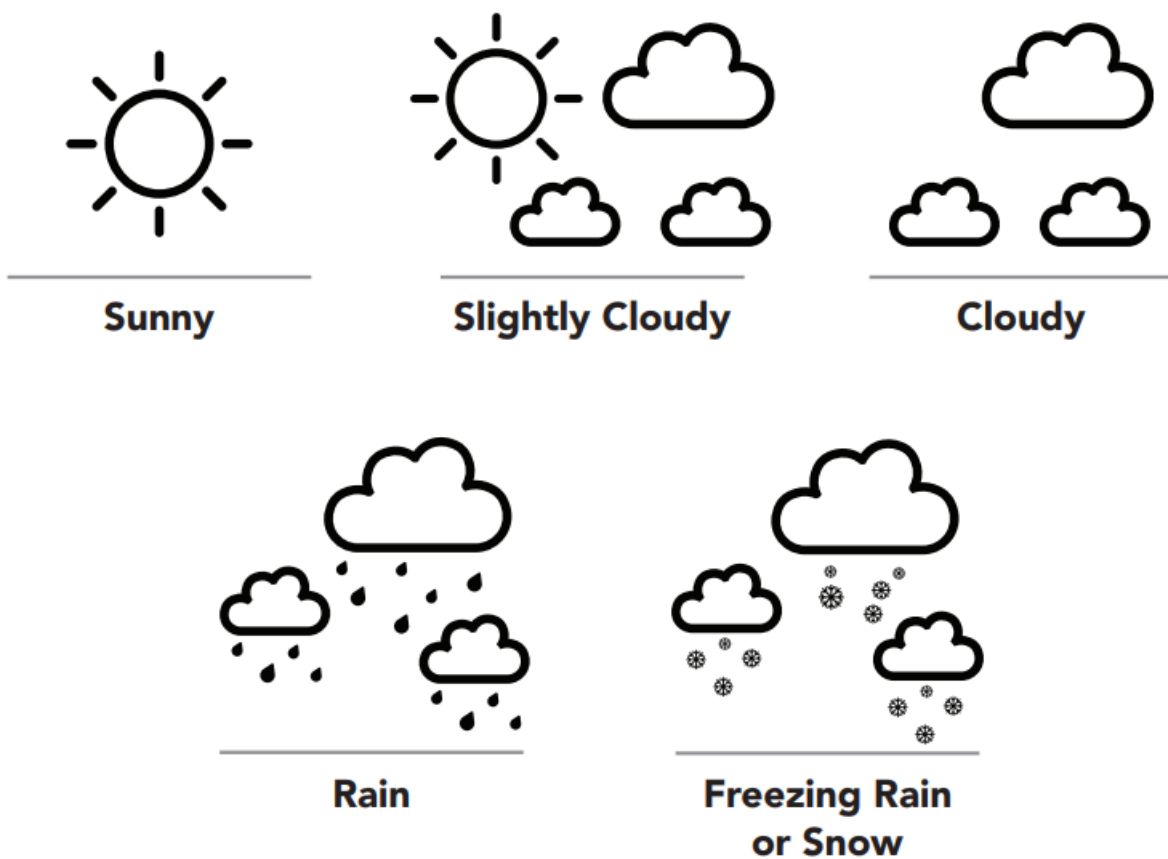

#### NOTE:

- The “Freezing “or “Snow” symbol is shown if there is rain and the current outdoor temperature reads under 0 degrees celsius.





- The Frost Alert: **ICE** is shown if the outdoor temperature is between -2°C ~ +3 °C
- If there are inconsistencies between your Local Weather Station and this unit, please refer to your local weather station’s forecast. The manufacturer does not take responsibility for incorrect forecasting from this unit.

#### Setting your thermometer and hygrometer



### RF transmission procedure

- The main unit will automatically start to receive the outdoor temperature & humidity conditions after the weather condition has been set.
- The outdoor sensor will automatically start to transmit temperature and humidity conditions to the weather station after batteries have been inserted.
- If the weather station is receiving transmissions from the outdoor sensor the RF icon  will display on the LCD
- If the weather station has failed to receive transmissions from the outdoor sensor (" - . - " will display on the LCD). In this case press and hold the button for 3 seconds to reset transmission manually. RF icon  displays on the LCD.

### Temperature & humidity

#### (1) Past 24 hours highest/lowest outdoor temperature and humidity

- The weather station automatically shows the highest outdoor temperature and humidity record over the past 24 hours. For example: display of **30°C HI** & **80% HI** means past 24 hours recorded highest outdoor temperature is 30°C and highest outdoor humidity is 80%.
- The weather station automatically shows the lowest outdoor temperature and humidity record over the past 24 hours. For example: display of **8°C LO** & **20% LO** means past 24 hours recorded lowest outdoor temperature is 8°C and lowest outdoor humidity is 20%.

#### (2) Recorded maximum/minimum outdoor temperature and humidity from powering on/reset

- Press the **MEMORY** button to view the lowest and highest recorded temperature and humidity from point of powering on or reset. **MEM** will flash on the LCD.



- When viewing these saved records, hold the **MEMORY** button for 3 seconds to clear the maximum and minimum record.
- When viewing these saved records, press the **MEMORY** button again to check the corresponding time and date of records. The saved records and corresponding time and date will flash. Press **MEMORY** button select to view:
- Time & date for lowest outdoor temperature memory record, Time and date for highest outdoor temperature memory record, Time & date for lowest outdoor humidity memory record, Time and date for highest outdoor humidity memory record.

### (3) Celsius / fahrenheit






- Press the °C /°F button to select Indoor/Outdoor temperature in Celsius or Fahrenheit.
- The measurable indoor temperature range is -10°C to + 50°C. If the indoor temperature is out of the measurable range, LL.L (beyond the minimum temperature) or HH.H (beyond the maximum temperature) will be shown on the indoor temperature column of the LCD.
- The measurable outdoor temperature range is -20°C~+ 50°C. If the outdoor temperature is out of the measurable range, the display will read LL.L (beyond the minimum temperature) or HH.H (beyond the maximum temperature).

**NOTE:** When outdoor temperature is lower than -20°C, or higher than +50°C, the outdoor sensor unit might not work properly

### (4) Humidity

The humidity measurable range is 20% ~ 99%. It will display 20% if indoor humidity is lower than 20%. The outdoor humidity measurable range is 0 ~ 99%

### (5) Outdoor temperature alert function

- Press  the button to activate or deactivate the outdoor temperature alert function.
- Press  the button to:
  1. Select the active outdoor upper temperature alert. The icon  will appear beside the outdoor temperature digit.
  2. Select the active outdoor upper & lower temperature alert. The  icon will appear beside the outdoor temperature digit.
  3. Select the active outdoor lower temperature alert. The  icon will appear beside the outdoor temperature digit.
  4. Select the to deactivate the outdoor temperature alert. The alert icon will disappear.
- Hold the button for 3 seconds to enter the outdoor temperature alert setting. The or icons beside the outside temperature will flash. Press the + or – buttons to adjust the setting value, press the button to confirm the setting. The setting sequences are as follows: upper limit of temperature, lower limit of temperature.
- When the alarm sounds, the or icons and the temperature digits will flash on the LCD. Press any buttons to stop the alert sound, otherwise, it will sound for 2 minutes, before stopping automatically.


#### (6) Comfort indicator bar : for the display of pleasant/unpleasant climate

It should be better to add the range of temperature and humidity for pleasant and unpleasant climate.

### Setting the time and setting an alarm



#### Radio controlled clock

After the weather station has powered on and completed syncing temperature and humidity from the outdoor sensor, The DCF signal, radio controlled icon  will automatically flash on the LCD, indicating the clock synchronizing the current time and date.



#### Icon Turns on

Indicates signal has been received




#### Icon Flashes

Indicates it is receiving DCF signal

#### Icon Disappears

Indicates signal has failed

#### NOTE:

- The clock will automatically synchronize with the radio wave signal at 3.00 a.m. every day to maintain accurate timing.
- If reception fails, scanning will stop and the  will disappear from the LCD
- The clock can be set to synchronize manually by holding the  button for 3 seconds. (Synchronization can take several minutes.)
- You can stop the DCF synchronization by holding the  button for 3 seconds.
- If the weather station is in daylight savings mode a **DST** will show on the LCD.

## Manual time setting

- To enter the Clock/Calendar setting mode, press and hold the MODE/SET button for 3 seconds until the digits flash.
- Press **+** or **–** button to adjust the desired value and press the MODE button to confirm and move on to next setting.
- Hold down the **+** or **–** button to speed up setting
- Press the MODE button to confirm settings and exit from time setting mode. The time setting mode will automatically exit after 15 seconds if no button is pressed.

### The setting sequence is shown as follow



- 1 Press = **12/24 Hour**
- 2 Presses = **Time Zone**
- 3 Presses = **Hour**
- 4 Presses = **Minute**
- 5 Presses = **Second**
- 6 Presses = **Language**
- 7 Presses = **Year**
- 8 Presses = **Month**
- 9 Presses = **Day**

- The days of the week can be displayed in 8 different languages: German (GE), French (FR), Spanish (ES), Italian (IT), Dutch (NE), Danish (DA), Russian (RU), and English (EN).
- The language and their select abbreviations for each day of the week are shown in a table at the back of this manual.

### NOTE:

- The Second setting is adjusted to zero only.
- Time Zone function: If your area can receive an RC-DCF frequency signal, the time zone function should be set to 0. The Time Zone function is used in areas where a DCF frequency signal can be received but the time zone is different from the German Time.

## Daily alarm function


- Press MODE/SET button to select to view: Time /Time & Day of Week / Alarm Time ( “AL” shown on the LCD)
- When viewing the alarm time, hold the MODE button for 3 seconds to enter the alarm setting mode. Press **+** or **–** button to adjust alarm time. Press the MODE button to confirm the setting.
- Press AL ON/OFF button to activate or deactivate the alarm function. If the alarm is activated, the  icon will appear on the screen.
- Press the SNOOZE button to silence the alarm and enter snooze mode, the alarm will sound again in 5 minutes. During snooze mode the  icon will flash on the LCD.
- Press any button other than the SNOOZE button, to stop the alarm. The alarm sound will continue for 2 minutes before stopping.

**NOTE:** The snooze function can be repeated up to 7 times..

#### Dimmer

Press the **DIMMER** button to adjust the LED brightness (off-med-high), when powered by the adaptor,

#### Low battery indication


The low battery icon  will display beside the outdoor temperature digit indicating the outdoor sensor battery is low and batteries should be replaced.

#### Precautions

- Use a pin to press the reset button, if unit is not working properly.
- Avoid placing the clock near interference or metal frames such as computer and TVs.
- The clock will lose the time when the battery is removed.
- Do not expose to direct sunlight, heavy heat, cold, high humidity or wet areas
- The outdoor sensor must not be set up or installed under water and keep away from direct sunlight and rain
- Never clean the device using abrasive/corrosive materials or products as these may scratch the plastic and corrode electronics
- If there are inconsistencies between your Local Weather Station and this unit, please refer to your local weather station's forecast. The manufacturer will not take responsibility for incorrect forecasting from this unit.



## Documents / Resources

 <p>Berlin Station Météo avec Ecran Couleur Weather Station with Colour Display Stazione Meteorologica con Display a Color Wetterstation mit Farbdisplay Estación Meteorológica con Pantalla en Color Wetterstation met kleurendisplay</p>	<p><a href="#">MARATHON BA030019-EU Berlin Weather Station with Colour Display</a> [pdf] User Manual BA030016, BA030019-EU Berlin Weather Station with Colour Display, BA030019-EU, Berlin Weather Station with Colour Display, BA030019-EU Berlin Weather Station, Berlin Weather Station, Weather Station</p>
-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------	-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------

## References

-  [Marathon Watch Company - Swiss Made Authentic Military Watches – Marathon Watch North America](#)