



# MARS GAMING MCPU44 CPU Cooler User Guide

[Home](#) » [MARS GAMING](#) » MARS GAMING MCPU44 CPU Cooler User Guide 

## Contents


- [1 MARS GAMING MCPU44 CPU Cooler](#)
- [2 PRODUCT OVERVIEW](#)
- [3 INTEL INSTALLATION](#)
- [4 AMD INSTALLATION](#)
- [5 Documents / Resources](#)
- [6 Related Posts](#)

# MARS

## MARS GAMING MCPU44 CPU Cooler




## PRODUCT OVERVIEW

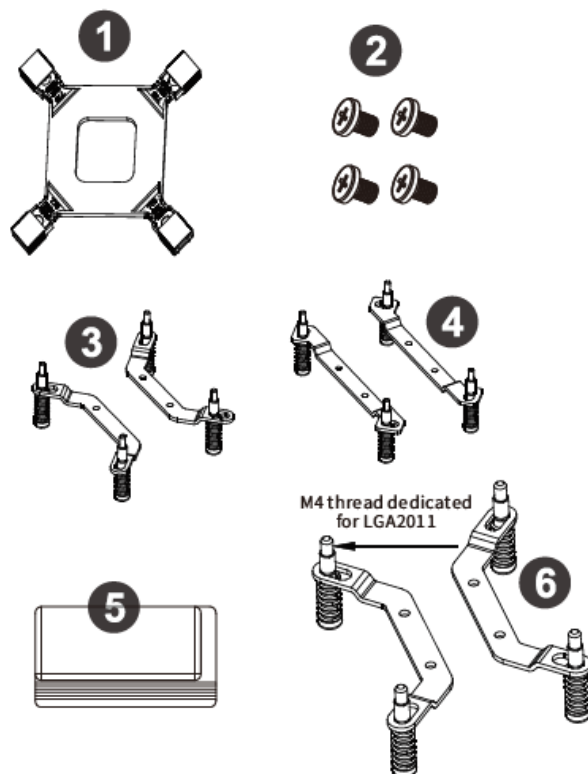


1. Back Plate
2. Bracket Screw
3. Intel Bracket
4. AMD Bracket
5. Thermal Grease
6. LGA 2011 Bracket

## INTEL INSTALLATION


1. **STEP 1:** Please remove the fan before installing radiator by opening the buckles pointed by the arrow.

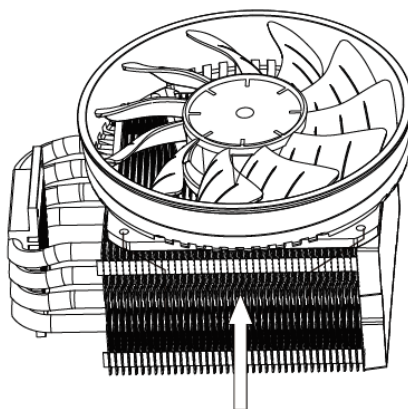


2. **STEP 2:** Install the bracket mount on the cooler base and fasten the Screws.

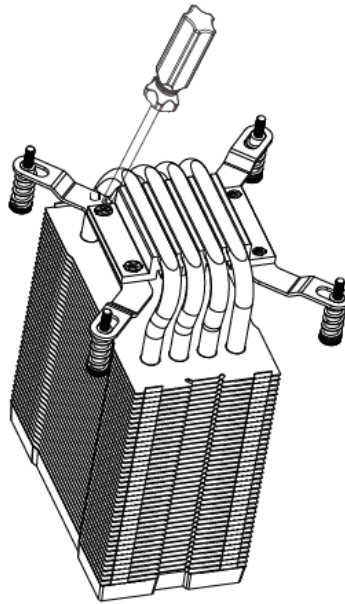

3. **STEP 3:** Evenly spread the heat sink paste on the surface of the CPU and remove the plastic protection.

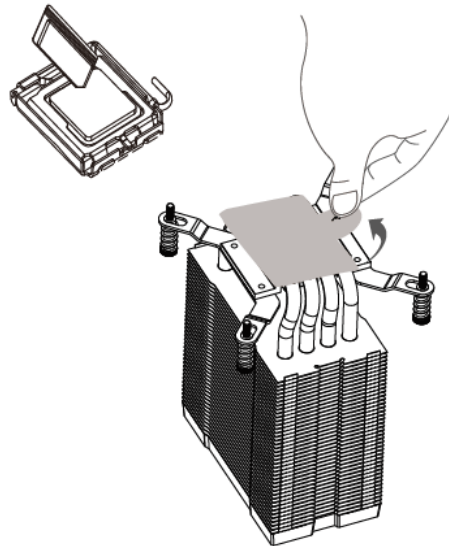


4. **STEP 4:** Move the bracket screw to the corresponding position according to the motherboard socket type.

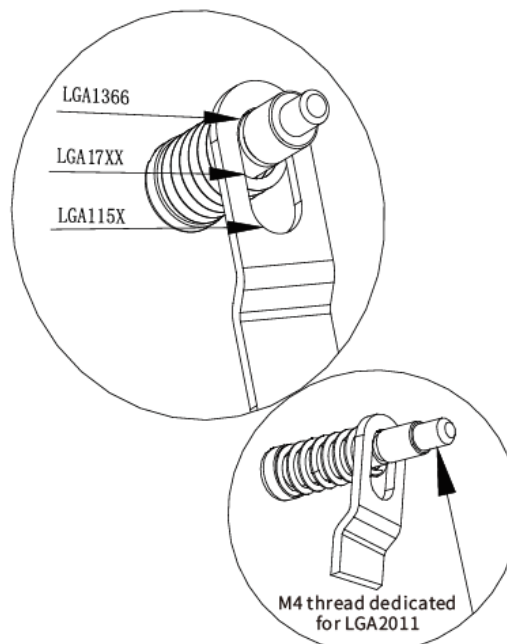


5. **STEP 5:** Move the back plate slider to the corresponding motherboard socket LGA115X/17XX/ 1366, if the


motherboard socket is LGA2011 use the original motherboard back plate.

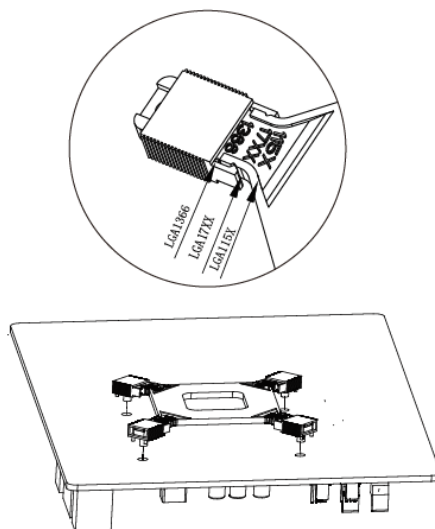

6. **STEP 6:** Place the radiator on the CPU and screw the back plate to the bracket mount.

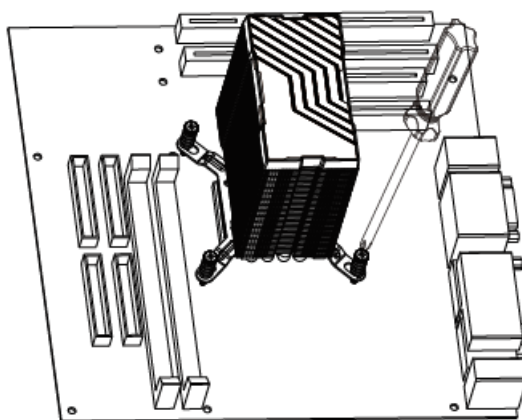


7. **STEP 7:** After installing the fan, connect the PWM cable to the CPU-FAN connector of the motherboard.

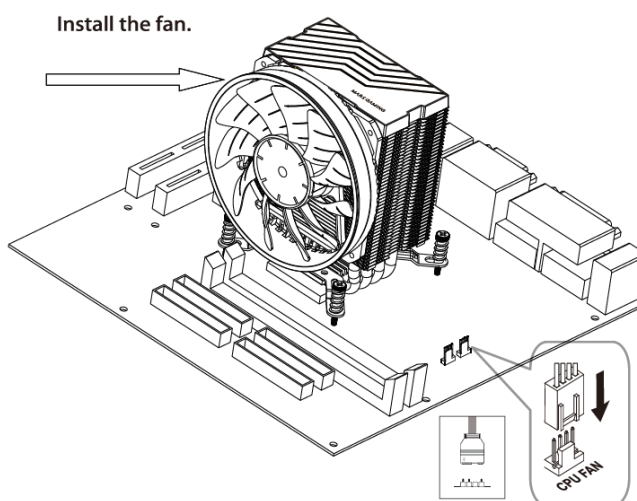


## AMD INSTALLATION


1. **STEP 1:** Please remove the fan before installing radiator by opening the buckles pointed by the arrow.

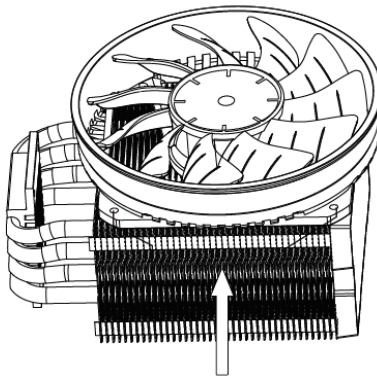


2. **STEP 2:** Install the AMD bracket mount on the cooler base and fasten the screws.

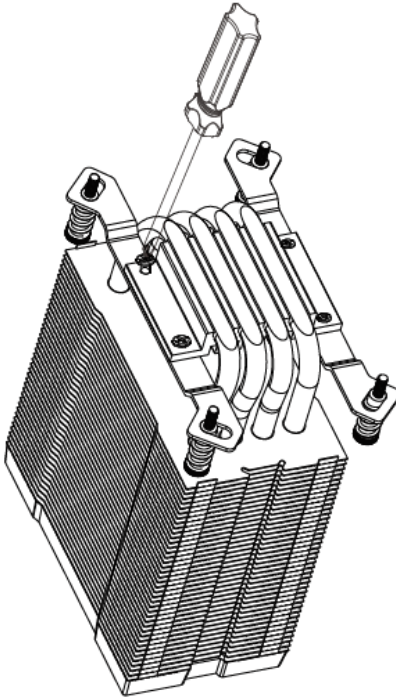


3. **STEP 3:** Remove the upper bracket on the AMD motherboard.

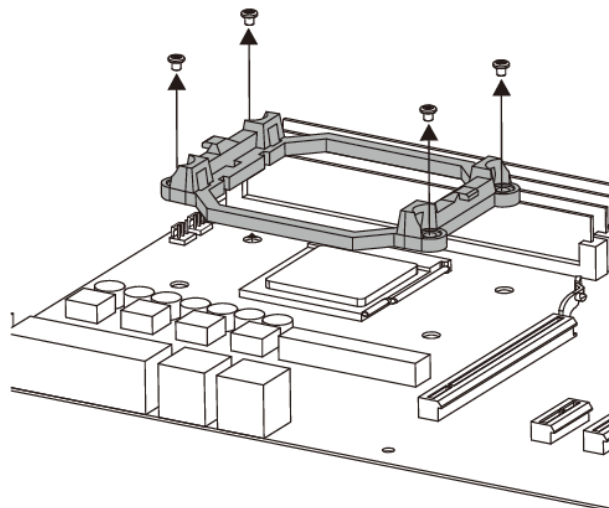


4. **STEP 4:** Evenly spread the heat sink paste on the surface of the CPU and remove the plastic protection.

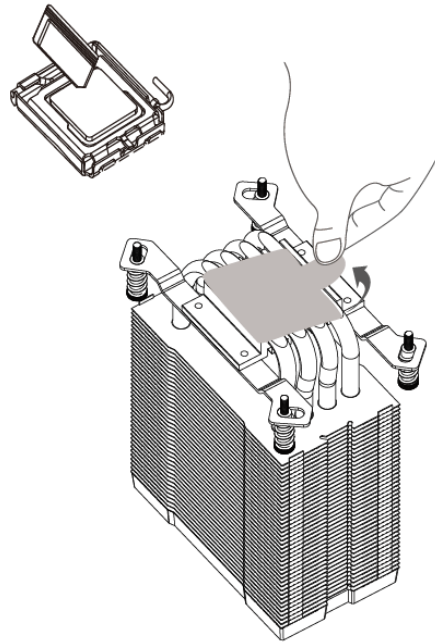

5. **STEP 5:** Move the screw on the bracket to the corresponding position according to the motherboard socket type.

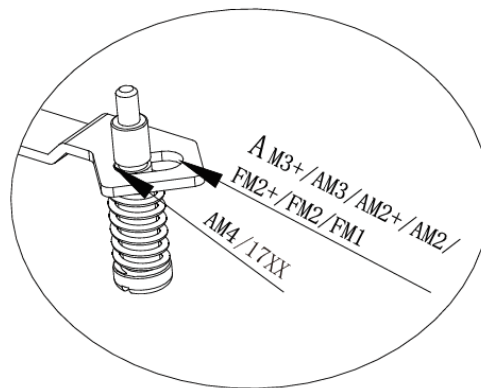


6. **STEP 6:** Place the radiator on the CPU and screw the back plate to the bracket mount.

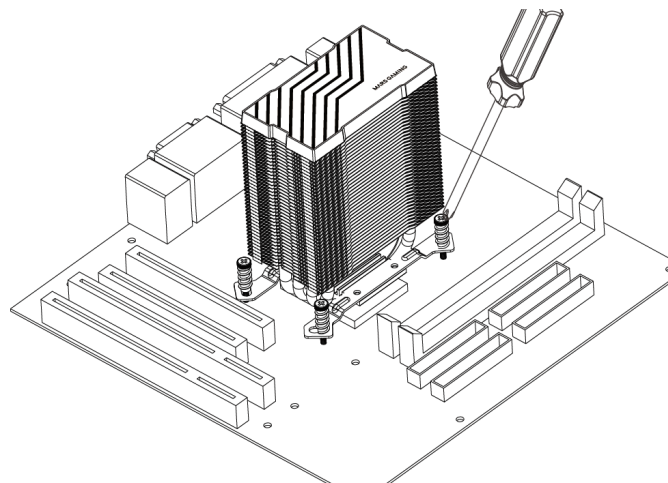

7. **STEP 7:** After installing the fan, connect the PWM cable to the CPU-FAN connector of the motherboard.


Install the fan.

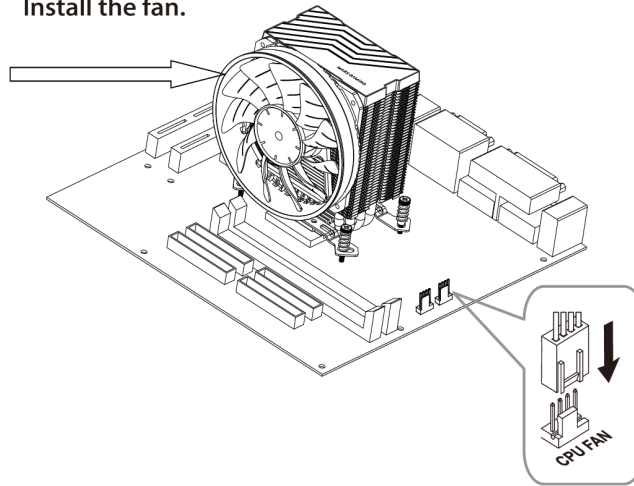

## ARGB CONTROL LIGHTING

Connect the ARGB +5V 3pin connector to the ARGB motherboard/ controller connector. Compatible with: Asus Aura Sync, Mystic Light Sync, RGB Fusion (Aorus) and ARGB controllers

**Note to user:** Check for ARGB compatibilities on your mother- board's user manual. Please keep this sheet for future reference. Visit our website [www.marsgaming.eu](http://www.marsgaming.eu) for more info about your product.

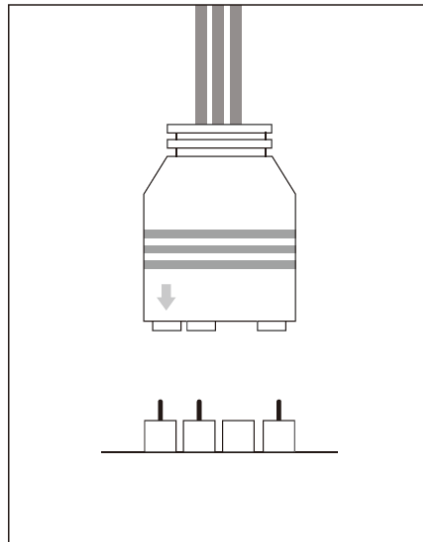

From Mars Gaming team: we want to thank you for the purchase of this product! We try to improve everyday to offer the best service and the best quality on our peripherals. Thank you for your trust! ARE YOU HAPPY WITH YOUR PURCHASE?



Rate us in your marketplace and share your experience in your social media .Please contact our technical support service by sending an e-mail to

 @MarsGaming-

 marsgaming

 MarsGamingOfficial



[support@marsgaming.eu](mailto:support@marsgaming.eu)  
[www.MARSGAMING.EU](http://www.MARSGAMING.EU)

## Documents / Resources



[MARS GAMING MCPU44 CPU Cooler](#) [pdf] User Guide  
MCPU44 CPU Cooler, MCPU44, CPU Cooler, Cooler