




MARS GAMING MSX Speaker User Guide

[Home](#) » [MARS GAMING](#) » MARS GAMING MSX Speaker User Guide



User Guide

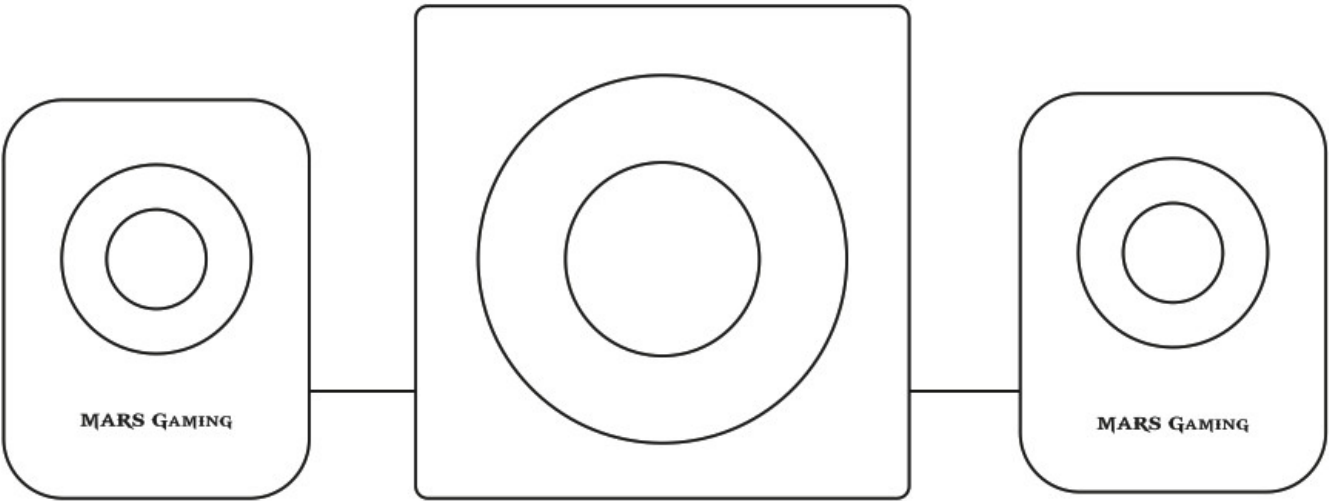

MSX SPEAKER

Bluetooth system that gives the best sound experience for your videogames, movies, series and music. This manual shows all the features of the MSX: please, keep this sheet for future reference.

Contents [[hide](#)

- 1 [A. BUTTONS](#)
- 2 [B. INSTALLATION](#)
- 3 [C. BLUETOOTH MODE](#)
- 4 [D. RADIO FM](#)
- 5 [E. USB AND MICROSD MODE](#)
- 6 [F. AUX MODE](#)
- 7 [FREQUENTLY ASKED QUESTIONS](#)
- 8 [Sound distortion](#)
- 9 [Stuttering music](#)
- 10 [Documents / Resources](#)
- 11 [Related Posts](#)

A. BUTTONS

MODE: Press this button to switch between the different modes: AUX, Bluetooth, USB, MicroSD, FM Radio.

(PREV): Tap this button to change to the previous song. Press and hold to lower volume.

PLAY: Press this button to play the music, press again to pause it. In AUX mode, press it to MUTE.

(NEXT): Tap this button to change to the next song. Press and hold to increase volume.

B. INSTALLATION

To start using the system, follow these steps:

- Connect the USB power cable to your device
- Connect the left speaker to the L port and the right speaker to the R port.

C. BLUETOOTH MODE

MSX Is equipped with a 5.0 Bluetooth system that allows you to connect the speaker with another bluetooth device. Follow these steps to pair your MSx:

- Press MODE to select the Bluetooth feature. A sound notification will Pop up.
- Enable the Bluetooth mode in your device and search the MSX BT in the Bluetooth list.
- The sound notification “Bluetooth device is connected” will pop up when the device is successfully connected.

D. RADIO FM

- Press MODE to select Radio FM mode.
- Press PLAY button twice to start the automatic tuning search. Wait for it to finish.
- Navigate between previously saved radio tunes with PREV / NEXT

E. USB AND MICROSD MODE

Insert the USB or the microSD in the MSX and the audio files in them will play automatically.

F. AUX MODE

- Connect the 3.5mm aux jack to the device

– Use PLAY as MUTE and UNMUTE feature.

Note to the user.

When the speaker is at high volume on AUX mode, a static noise can appear while the device is not playing any music or sound. This may vary depending on your PC build due to electronic interferences being absorbed by the jack connector while the system is running. You can silence the static noise by pressing the PLAY button to MUTE the speakers while not using them.

FREQUENTLY ASKED QUESTIONS

Unsuccessful Bluetooth connection

- Make sure the speaker is in Bluetooth mode.
- Make sure the speaker is not connected to another device.
- Check if there are too many Bluetooth devices working in the area, it can interfere its connection.
- Try to restart the Bluetooth of your device and reconnect to the speaker again.

Sound distortion


- Check the volume of the speaker and the Bluetooth device.
- Check if the speaker is properly connected and reconnect it if necessary.

Stuttering music

- Check if the device is too far from the Bluetooth device.
- Check if there is any obstacle between the speaker and the device.

www.MARSGAMING.EU

Documents / Resources

	<p>MARS GAMING MSX Speaker [pdf] User Guide MARS GAMING, MSX Speaker</p>
---	--