



Marshall Acton III Device Layout Bluetooth Speaker User Manual

[Home](#) » [Marshall](#) » Marshall Acton III Device Layout Bluetooth Speaker User Manual 

Contents

- [1 Marshall Acton III Device Layout Bluetooth Speaker](#)
- [2 DEVICE LAYOUT](#)
- [3 INSTRUCTIONS](#)
- [4 TROUBLESHOOTING](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)




Marshall Acton III Device Layout Bluetooth Speaker



Specifications

- **Device Name:** ACTON III
- **Language:** English

Device Layout

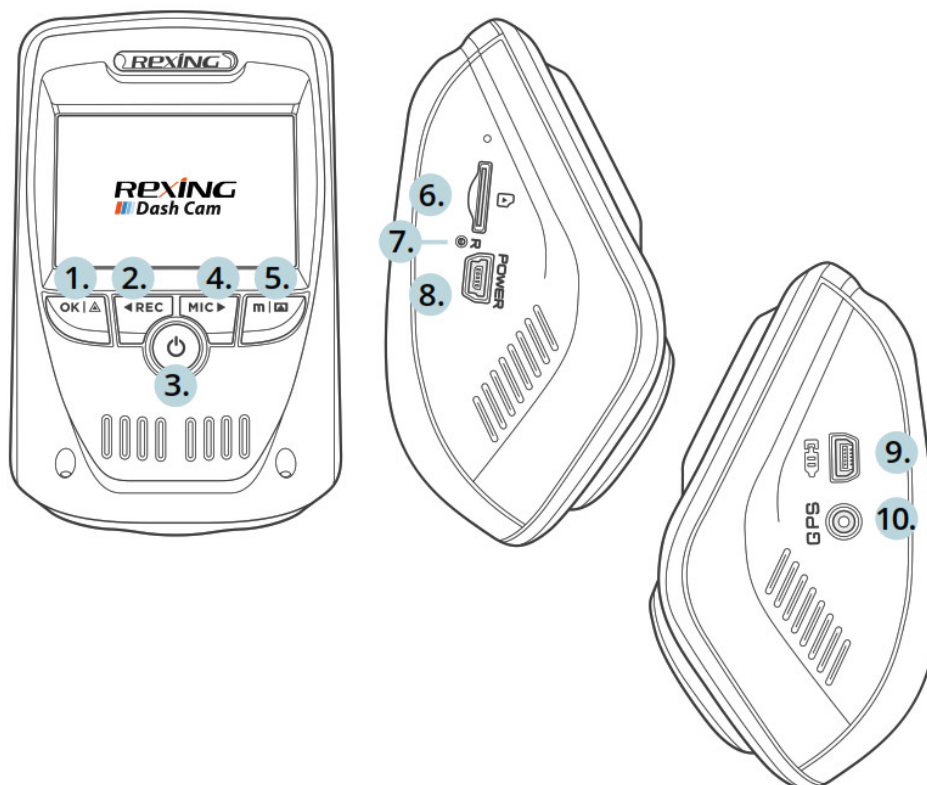

1. 3.5 MM INPUT

Plug in an analogue audio device with a 3.5 mm stereo jack.

2. SOURCE SELECTION

Use the source button to select the desired audio source.

3. AUDIO CONTROLS

Acton III includes three controls for adjusting the audio:

1. Volume control
2. Bass control
3. Treble control

4. MEDIA CONTROL

Control the audio directly from the top panel when playing via Bluetooth:

- Push to play or pause
- Push right to skip forward
- Push left to skip back
- Hold left or right to rewind or fast forward

Playback can also be controlled from the Marshall Bluetooth app.

5. POWER SWITCH

Use the power switch to turn the speaker on or off.

6. POWER INPUT

Use the included mains lead to connect Acton III to the wall socket.

Instructions

Getting Started

1. Connect the mains lead to the mains input on your speaker, then connect the mains plug to the wall socket.
2. Use the power switch to turn the speaker on.
3. Download the Marshall Bluetooth app and follow the in-app instructions to set up your speaker.

Important: Always ensure that the mains lead, plug, and speaker are compatible with your mains supply and wall socket.

Caution: Always unplug the mains lead from the wall socket before disconnecting it from the speaker.

Bluetooth Pairing

1. Use the source button to select Bluetooth.
2. Push and hold the source button until the Bluetooth LED pulses red.
3. Select ACTON III from your audio device's Bluetooth list.

Acton III can be connected to two Bluetooth devices at the same time. If a connected device is playing, a second connected device cannot start playing until the first device is paused.

Connecting an AUX Device

1. Connect a 3.5 mm stereo jack to the AUX input on the top of the speaker.
2. Connect the other end of the lead to the audio output on your audio source.
3. Use the source button to select AUX.

Note: Audio leads are not included.

Network Standby Mode

Acton III will go into network standby if left unused for 10 minutes to save energy. Any connected Bluetooth device will be disconnected. Interact with any control or button on the top panel, reconnect a Bluetooth device, or play anything via the physical inputs to wake up the speaker.

Performing a Factory Reset

A factory reset will return the speaker to its original settings, excluding any firmware updates.

Note: This will delete all user settings and the speaker needs to be set up again.

1. Push and hold the media control for more than 10 seconds and the speaker will reset.
2. Remove ACTON III from your audio device's Bluetooth list before pairing again.

Marshall Bluetooth App

Download the Marshall Bluetooth app to get the most out of your speaker and keep it up to date with the latest software.

Troubleshooting

Problem	Cause	Action
The speaker does not turn on	The speaker is not connected to mains electricity supply.	Connect the mains lead to the speaker and a working wall socket.

FAQ

1. Q: What should I do if the speaker does not turn on?

A: Make sure the speaker is connected to a working wall socket using the provided mains lead.

ACTON III – FULL ONLINE MANUAL

DEVICE LAYOUT



1. 3.5 MM INPUT

Plug in an analogue audio device with a 3.5 mm stereo jack.

2. SOURCE SELECTION

Push the source button to toggle between Bluetooth® and AUX audio sources. A lit indicator shows which source is selected. This can also be selected from the Marshall Bluetooth app.

Caution: Make sure that the volume is set to low on both the speaker and the audio device before using the speaker.

3. AUDIO CONTROLS

Acton III includes three controls for adjusting the audio.

1. Volume control
2. Bass control
3. Treble control

4. MEDIA CONTROL

Control the audio directly from the top panel when playing via Bluetooth.

1. Push to play or pause
2. Push right to skip forward
3. Push left to skip back
4. Hold left or right to rewind or fast forward

Playback can also be controlled from the Marshall Bluetooth app.

5. POWER SWITCH

Use the power switch to turn the speaker on or off.



6. POWER INPUT

Use the included mains lead to connect Acton III to the wall socket.

INSTRUCTIONS

GETTING STARTED

1. Connect the mains lead to the mains input on your speaker, then connect the mains plug to the wall socket.
2. Use the power switch to turn the speaker on.
3. Download the Marshall Bluetooth app and follow the in-app instructions to set up your speaker.

Important: Always ensure that the mains lead, plug and speaker are compatible with your mains supply and wall socket.

Caution: Always unplug the mains lead from the wall socket before disconnecting it from the speaker.

BLUETOOTH PAIRING

1. Use the source button to select Bluetooth.
2. Push and hold the source button until the Bluetooth LED pulses red.
3. Select ACTON III from your audio device's Bluetooth list.

Acton III can be connected to two Bluetooth devices at the same time. If a connected device is playing, a second connected device cannot start playing until the first device is paused.

CONNECTING AN AUX DEVICE

1. Connect a 3.5 mm stereo jack to the AUX input on the top of the speaker.
2. Connect the other end of the lead to the audio output on your audio source.

3. Use the source button to select AUX.

Note: Audio leads are not included.

NETWORK STANDBY MODE

Acton III will go into network standby if left unused for 10 minutes to save energy. Any connected Bluetooth device will be disconnected. Interact with any control or button on the top panel, reconnect a Bluetooth device or play anything via the physical inputs to wake up the speaker.

INSTRUCTIONS

PERFORMING A FACTORY RESET

A factory reset will return the speaker to its original settings, excluding any firmware updates.

Note: This will delete all user settings and the speaker needs to be set up again.

1. Push and hold the media control for more than 10 seconds and the speaker will reset.
2. Remove ACTON III from your audio device's Bluetooth list before pairing again.

MARSHALL BLUETOOTH APP

Download the Marshall Bluetooth app to get the most out of your speaker and keep it up to date with the latest software.




TROUBLESHOOTING

PROBLEM	CAUSE	ACTION
The speaker does not turn on	The speaker is not connected to mains electricity supply.	Connect the mains lead to the speaker and a working wall socket.
The speaker is not responding	A software problem has occurred.	Unplug the mains power plug from the wall socket, wait for 15 seconds, then plug it in again.
There is no audio or audio is too low	The wrong audio source is selected.	Use the source button to select the audio source.
	The audio device is not connected.	Ensure that the device is connected to Acton III.
	Volume is set too low on either the audio source or the speaker.	Slightly increase the volume on your audio source or the speaker.
The audio is distorted	Volume is set too high on the audio source.	Turn down the playback volume on the audio source.
	The volume, bass, or treble is set too high on the speaker.	Lower the volume, bass, or treble on the speaker.
	Bluetooth is not enabled on your device (smartphone, tablet, computer).	Activate Bluetooth on your audio device.

Cannot connect or pair with a Bluetooth device	A Bluetooth device is already connected to the speaker.	Disconnect the connected Bluetooth audio device before setting the speaker in pairing mode.
	The speaker is not in pairing mode.	<p>I. Use the source button to select Bluetooth.</p> <p>II. Push the source button until the Bluetooth LED pulses red.</p>
Bluetooth connection drops out	The two Bluetooth devices are too far apart, or the connection is affected due to obstacles.	Move the devices closer to each other so that they are unobstructed by obstacles such as walls or doors.
Bluetooth connection drops out	There is a strong electric field surrounding the speaker. Items such as microwave ovens, wireless network adapters, fluorescent lights and gas cookers use the same frequency range as the Bluetooth device. This may lead to electrical disturbances.	Move the speaker to another spot or turn off or move the interfering electronic device.
Erratic behaviour	The speaker is not using the latest firmware version.	Download the Marshall Bluetooth app and connect to the speaker. Follow the in-app instructions to ensure that the speaker has the latest firmware version.
	There is a software error.	Perform a factory reset by pressing the media control for more than 10 seconds. The speaker needs to be set up again, see the GETTING STARTED instructions.

Documents / Resources

	<p>Marshall Acton III Device Layout Bluetooth Speaker [pdf] User Manual</p> <p>Acton III Device Layout Bluetooth Speaker, Acton III, Device Layout Bluetooth Speaker, Layout Bluetooth Speaker, Bluetooth Speaker, Speaker</p>
---	--

References

- [User Manual](#)