



## Marshall RS7-HR Control Distribution Box Installation Guide

[Home](#) » [Marshall](#) » Marshall RS7-HR Control Distribution Box Installation Guide

### Contents [ [hide](#) ]

- [1 Marshall RS7-HR Control Distribution Box](#)
- [2 HARDWARE OVERVIEW](#)
- [3 RS7-HR CONNECTION](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

# Marshall

---

## BROADCAST & PRO AV

### Marshall RS7-HR Control Distribution Box



### HARDWARE OVERVIEW





1. Power Indicator
2. Controller Input
3. Connection refresh
4. Output Connection
5. RS232 / RS422 Selector
6. Firmware Service Port
7. DC Power Connection

## RS7-HR CONNECTION

The RS7-HR can be set on a desk top or you can use the included 1RU rack ears to install a rack. Please note the following:

- Before connecting your equipment please select RS232 or RS422 on the back of the unit
- Connect your controller to the Input connection on the front of the RS7-HR using a Cat 5/6 cable
- On the back of the RS7-HR connect your Cat 5/6 cables from the RS7-HR to each camera (you may need optional CV620-CABLE-07 Adapters for RS232)
- You will now connect power to the RS7-HR, you will see a red indicator light appear on the front of the unit, now you will push the refresh button once
- If you disconnect a camera or add a camera you will need to push the refresh button again



	<p><a href="#">Marshall RS7-HR Control Distribution Box</a> [pdf] Installation Guide RS7-HR, Control Distribution Box</p>
	<p><a href="#">Marshall RS7-HR Control Distribution Box</a> [pdf] Installation Guide RS7-HR, Control Distribution Box, RS7-HR Control Distribution Box, Distribution Box, Box</p>