

Marshall
**Stanmore II Wireless
Bluetooth Speaker**



Marshall Stanmore II Wireless Bluetooth Speaker Owner's Manual

[Home](#) » [Marshall](#) » Marshall Stanmore II Wireless Bluetooth Speaker Owner's Manual 

Contents

- [1 Marshall Stanmore II Wireless Bluetooth Speaker](#)
- [2 Product Usage Instructions](#)
- [3 FEATURES](#)
- [4 GETTING STARTED](#)
- [5 TOUCH CONTROLS](#)
- [6 CHARGING THE CASE](#)
- [7 NOISE CONTROL](#)
- [8 PAIRING A NEW DEVICE](#)
- [9 RESETTING THE EARBUDS](#)
- [10 CLEANING YOUR MOTIF ANC](#)
- [11 FAQ](#)
- [12 Documents / Resources](#)
 - [12.1 References](#)

Marshall

Marshall Stanmore II Wireless Bluetooth Speaker



Specifications:

- **Size Options:** S/M/L
- **Language:** English


Product Information:

The Motif A.N.C. earbuds provide a premium audio experience with active noise control for immersive listening. The earbuds come with touch controls for easy operation and a charging case that supports wireless charging.

Product Usage Instructions

- **Getting Started:**
Complete the setup by following the instructions provided in the manual.
- **Touch Controls:**
Use the touch controls on the earbuds for various functions.
- **Charging:**
To charge the earbuds, put them back in the case and close the lid. To charge the case, use a wireless charger or plug it into a USB power source.

FEATURES

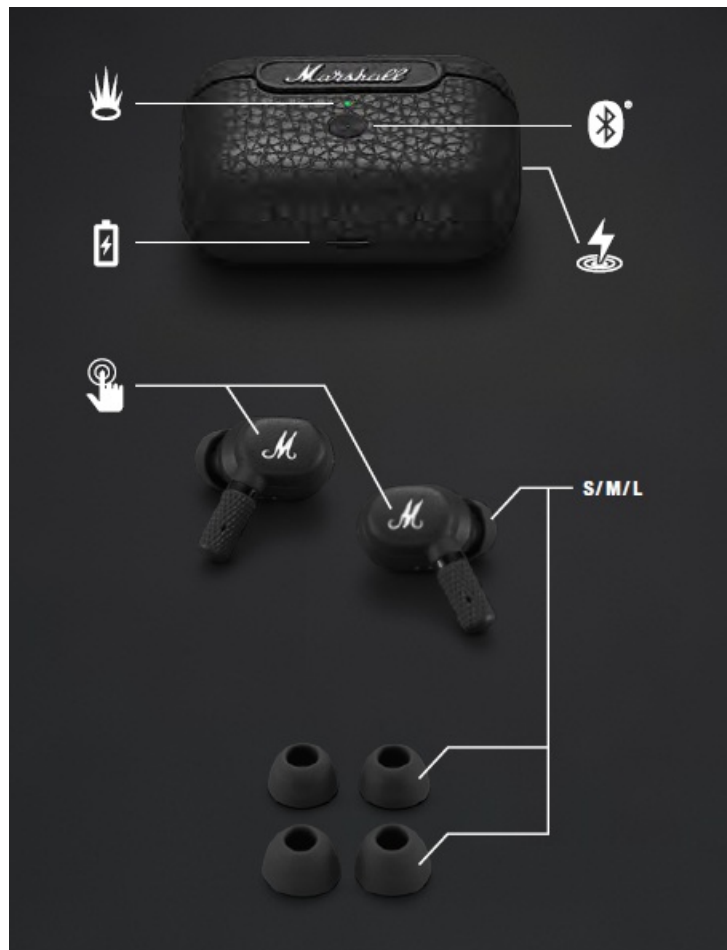

GETTING STARTED

1. Open the charging case.
2. Press and hold the button on the case until the LED turns to a slow blue pulse.
3. Select MOTIF ANC from your sound device's Bluetooth® list.
4. Download the Marshall Bluetooth app and follow the in-app instructions to complete the setup.

TOUCH CONTROLS

Touch the left or right earbud to control your music, phone calls and more. The long touch behaviour can be customised in the app.

- 1 touch to play/pause or receive/end a call
- 2 touches to skip forward or reject a call
- 3 touches to skip backward
- Long touch to toggle noise cancelling, transparency and ANC off

CHARGING THE EARBUDS

Put your earbuds back in the case and close the lid to turn them off and begin charging.

CHARGING THE CASE

Use a wireless charger or plug the case into a USB power source to charge it. The case is fully charged when the front-facing LED is steady green.

To charge the case using a wireless charger, follow the instructions below.

1. Place the charging case with its back flat against the wireless charging pad.
2. Make sure that the front LED lights up to indicate that the case is charging.
3. Once the LED light has turned steady green the case is fully charged.

LED INDICATOR

The LED shows the case battery charge, from red through yellow to green (0–100%). It pulses blue while in Bluetooth pairing mode.

NOISE CONTROL

Long touch either earbud to cycle through the noise control modes.

- **Noise-canceling mode** – blocks out your surroundings and lets you focus on the music
- **Transparency mode** – allows you to hear your surroundings and hold conversations without removing your earbuds
- **Off**—noise control is turned off

The amount of noise cancelling and transparency can be adjusted in the Marshall Bluetooth app.

PAIRING A NEW DEVICE

Motif A.N.C. remembers up to 3 previously paired devices and will try to reconnect with the last connected device.

1. Place the earbuds in the case and keep the lid open.
2. Press and hold the button on the case until the LED turns to a slow blue pulse.
3. Select MOTIF ANC from your sound device's Bluetooth list.

Note: Motif A.N.C. can be connected with one sound device at a time. Make sure to disconnect from the current device before reconnecting with a different device.

RESETTING THE EARBUDS

If your earbuds become erratic or unresponsive, follow the instructions below. Place the earbuds in the case and close the lid to restart the earbuds.

If the problem persists, perform a hardware reset:

1. Place the earbuds in the case and keep the lid open.
2. Press and hold the touch surface on both earbuds for 4 seconds to reset the earbuds. If the problem persists, perform a factory reset.

Note: This will delete all user settings and the earbuds will need to be set up again.

1. Place the earbuds in the case and keep the lid open.
2. Press and hold the the button on the case for 10 seconds, until the LED turns purple, to reset the earbuds to

factory settings.

3. Remove MOTIF ANC from your sound device's Bluetooth list before pairing again.

CLEANING YOUR MOTIF ANC

Earbuds come in close contact with your skin often and sometimes for long periods of time. This will over time cause build-up of dirt and grease that can affect performance and may cause skin irritation. Clean your earbuds regularly to keep them fresh and make them last longer. Unplug any cables before cleaning the case. Make sure everything is completely dry before using the earbuds, putting the earbuds back in the case, or plugging in a USB charger. Remove the silicone ear tips from the earbuds and clean them separately. Use a disinfectant wipe or a lint-free cloth, slightly damp with 70% isopropyl alcohol or 75% ethyl alcohol to gently clean the ear tips, the exterior surfaces of the earbuds and the case. Avoid getting moisture in any openings or in the speaker mesh. Carefully clean those areas with a dry and soft brush, or a cotton swab.

- Do not use any sharp objects.
- Do not use compressed air.
- Do not use products containing bleach or hydrogen peroxide.
- Do not submerge the earbuds in any cleaning agents.

FAQ


How do I reset the earbuds?

If your earbuds are unresponsive, follow the reset instructions provided in the manual. You can restart, hardware reset, or factory reset the earbuds based on the issue.

How do I clean the earbuds?

To clean the earbuds, use a disinfectant wipe or a damp lint-free cloth with alcohol to gently clean the surfaces. Make sure to remove any moisture before using the earbuds again.

Documents / Resources

	Marshall Stanmore II Wireless Bluetooth Speaker [pdf] Owner's Manual Stanmore II, Stanmore II Wireless Bluetooth Speaker, Stanmore II, Wireless Bluetooth Speaker, Bluetooth Speaker, Speaker
---	--

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.