

marta MT-1579 Food Processor with Hand Blender User Manual

marta

Contents

- 1 MT-1565 / MT-1579**
 - 1.1 Food processor with hand blender**
 - 1.2 Description**
- 2 USER MANUAL**
 - 2.1 CAUTION**
 - 2.2 BEFORE THE FIRST USE**
 - 2.3 USING THE DEVICE**
 - 2.3.1 I. SPEED SELECTION**
 - 2.3.2 II. USING BLENDER**
 - 2.3.3 III. USING WHISK**
 - 2.3.4 IV. USING CHOPPER**
 - 2.4 CLEANING AND MAINTENANCE**
 - 2.5 SPECIFICATION**
- 3 Documents / Resources**
 - 3.1 References**
- 4 Related Posts**

MT-1565 / MT-1579

Food processor with hand blender



Description

1. Speed control knob
2. Speed mode button – I
3. Speed mode button – II
4. Handle / Motor block

5. Detachable blender
6. Upper part of the whisk
7. Metal part of the whisk
8. Chopper cover
9. Chopper blade
10. Chopper cup

Real set of the appliance could be different from listed in the User manual. Check once buy.

USER MANUAL

CAUTION

Read this manual carefully before using the appliance and save it for future reference.

- Before the first use, check the device specifications and the power supply in your network.
- It is not intended for industrial use. For indoor use only. Use only for domestic purposes according to the instruction manual.
- Do not use with damaged cord, plug or other injuries. Keep the power cord away from sharp edges and hot surfaces.
- Do not pull the cord. Always take the socket. Do not reel the cord around the device housing.
- Never attempt to frame and repair the appliance by yourself. If you meet problems, please contact the nearest customer service center.
- Using accessories or replacement parts that are not recommended or sold by the manufacturer may cause damage to the appliance.
- Always unplug the appliance and let it cool down before cleaning and removing parts. Keep unplugged when not in use.
- To avoid electric shock and fire, do not immerse in water or other liquids. If this occurs, immediately unplug it and contact service center for inspection.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Do not use the device for grinding solid products such as coffee beans or ice cubes. Switch off the appliance before changing the accessories. Be careful when using sharp blades.
- Avoid any contact with sharp parts of the device while moving. Incorrectly assembled device may cause fire, electric shock or other injury.
- Maximum allowable continuous operating time is 30 sec. Turn off the device and allow the engine cool down for 1 min before continuing. After 4 rounds allow the engine cool down for 15 min before continuing.

BEFORE THE FIRST USE

- Unpack the appliance and remove all packaging materials and labels.
- Clean the motor block with a damp cloth, clean the accessories in soapy water rinse thoroughly and dry.
- Set proper accessory.

USING THE DEVICE

I. SPEED SELECTION

- Press speed mode button I to start operating.
- Then use the speed controller to increase or decrease the speed gradually.
- Choose speed mode, depending on the products. Start using low speed, gradually moving to higher.

CAUTION: speed controller operates with pressed button I only.

- To use maximum speed, press speed mode button II.

II. USING BLENDER

- Set blender accessory.
- Place the accessory in the cup with the product, hold the handle.
- Connect the device to the mains, choose proper speed.
- Move blender in the cup in a circular motion for proper grinding.
- Don't allow any liquid reaching device handle.
- In case cutting blades are blocked, turn off device & unplug the appliance from the mains.
- After use, turn off device by pressing on/off button, remove blender from the mains and disconnect the accessory.

III. USING WHISK

- Fix handle on the upper part of the whisk.
- Place product inside of the cup.
- Connect the device to the mains, choose desired power and speed.
- After use, turn off device by pressing on/off button, remove whisk from the mains and disconnect the whisk.

IV. USING CHOPPER

- Fix chopper blades inside of the chopper cup, add products.
- Place the cover and motor block and fix it tight.
- Connect the device to the mains, choose desired power and speed.
- After use, turn off device by pressing on/off button, remove chopper from the mains and disconnect the chopper.

CLEANING AND MAINTENANCE

- Before cleaning, always unplug the appliance.
- Use wet cloth to clean the motor block. Do not immerse the appliance in water or other liquids.
- Clean accessories in soapy water and dry.
- Do not use chemical and abrasive cleaners for cleaning.
- Recommended to clean the device right after operating to avoid coloring of plastic parts.

SPECIFICATION

Power supply	230 V ~ 50 Hz
Nominal power	500 W
Maximum power	1200 W
Net weight / Gross weight	0,94 kg / 1,07 kg
Package size (L x W x H)	205 x 145 x 210 mm

Producer:

COSMOS FAR VIEW INTERNATIONAL LIMITED


Room 701, 16 apt, Lane 165, Rainbow North Street , Ningbo, China

Made in China

WARRANTY DOES NOT COVER SUPPLIES (filters, ceramic and non-stick coating, rubber seals, etc.)

Production date is available in the serial number located on the identification sticker on the gift box and/or on sticker on the device. The serial number consists of 13 characters, the 4th and 5th characters indicate the month, the 6th and 7th indicate the year of device production. Producer may change the complete set, appearance, country of manufacture, warranty and technical characteristics of the model without notice. Please check when purchasing device. Current information about service centers is available on the website <http://multimarta.com/>

Documents / Resources

	<p>marta MT-1579 Food Processor with Hand Blender [pdf] User Manual</p> <p>MT-1579 Food Processor with Hand Blender, MT-1579, Food Processor with Hand Blender, with Hand Blender, Hand Blender, Blender</p>
---	--

References

-  [Multimarta - интернет-магазин бытовой техники MARTA](#)
-  [Multimarta - интернет-магазин бытовой техники MARTA](#)