



marta MT-1723 Toaster Maker Machine User Manual

[Home](#) » [MARTA](#) » marta MT-1723 Toaster Maker Machine User Manual 

marta MT-1723 Toaster Maker
Machine User Manual

marta

User manual

ТОСТЕР / TOASTER
MT-1723



Parts list:



1. Toasts sections
2. Operating lever
3. Body
4. Controller of toasting modes
5. Cancel button
6. Reheat button
7. Defrost button
8. Tray for crumbs

CAUTION

Read this manual carefully before using the appliance and save it for future reference.

- Before the first use, check the device specifications and the power supply in your network.
- It is not intended for industrial use.
- For indoor use only. Use only for domestic purposes according to the instruction manual.
- Do not use with damaged cord, plug or other injuries.
- Keep the power cord away from sharp edges and hot surfaces.
- Do not pull the cord. Always take the plug. Do not reel the cord around the device housing.
- Never attempt to frame and repair the appliance by yourself. If you meet problems, please contact customer service center.
- Using accessories or replacement parts which are not recommended or sold by the manufacturer may cause damage to the appliance.
- Always unplug the appliance and let it cool down before cleaning and removing parts. Keep unplugged when not in use.
- To avoid electric shock and fire, do not immerse in water or other liquids. If this occurs, immediately unplug it and contact service center for inspection.

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Place the appliance on a stable, horizontal and level surface. Position it far from flammable materials including curtains, walls, and fabric upholstered furniture.
- Do not place the appliance near heat-emitting devices such as heaters, cooktops or electric burners.
- Don't use the appliance near explosive objects.
- Never cover the appliance.
- Operating appliance always needs supervision. Bread inside could inflame!
- Don't touch appliance heating element. You could get burnt!
- Don't place into the toaster slots spread with butter or jam bread.
- Don't insert bread that is too large for the toaster.
- If bread stuck in the toaster, unplug the appliance. When the toaster cool down, take the bread out.
- Never take bread out with sharp utensils. They could damage heating element.
- Don't extract bread while the toaster is in use.
- Operating lever should be in top position when you unplug the appliance.
- Use toaster only with crumb tray. Clean crumb tray regularly.

BEFORE FIRST USE

- Please unpack your appliance. Remove all packing materials. Remove all stickers.
- Heat the toaster at maximum setting two times without bread in order to eliminate residual odour. As all new electric heating elements, a toaster creates a new smell when it is first time switched on. This is quite normal and not a cause for concern.
- The appliance is ready for use.

USING THE TOASTER

- Make sure that operating lever is in top position. Plug the toaster to the power supply.
- Choose required toasting level – from 1 to 5: •1-2 – light toasting or warm up, •3 – medium toasting, •4-5 – maximum level of browning.
- Place bread into the bread slots. Please mind that thin slices are easier to be browned
- Press down the operating lever. The toaster will start running automatically and light indicator will go on.
- Bread slices will be ejected out and the appliance will shut down automatically when toasting is finished.
- Let the toaster cool down 15-20 seconds before next use.
- **DEFROST FUNCTION.** Insert bread slices into the toaster and pull down operating lever. Press button “DEFROST” and indicator of function will light up. Toasting time will increase.
- **REHEAT FUNCTION.** If ready toasts get cold you could use reheat function. Insert toasts into the toaster and pull down operating lever. Press button “REHEAT” and indicator of function will light up. Cold toasts will be reheated in short time without overbrowning.
- **CANCEL FUNCTION.** Toasting could be cancelled anytime during toasting by pressing “CANCEL” button. Indicator light will shut down.
- Before toaster unplugging make sure that operating lever is in top position.

CLEANING AND MAINTENANCE

- Always unplug the appliance before cleaning.
- Let the appliance cool down completely.
- Pull the crumb tray out, empty it and place back.
- Clean the appliance housing if required, using soft material. Do not use chemical and abrasive cleaners.
- Keep the appliance in a dry cool place.

SPECIFICATION

Power supply	Power	Net weight / Gross weight, kg	Package size (L x W x H), mm
230 V ~ 50 Hz	850 W	2,2 / 2,5	326 x 316 x 241

Producer:

Cosmos Far View International Limited
Room 701, 16 apt, Lane 165, Rainbow North Street, Ningbo, China Made in China



WARRANTY DOES NOT APPLY TO CONSUMABLES (FILTERS, CERAMIC AND NON-STICK COATING, RUBBER SEALS, ETC.)

Production date is available in the serial number located on the identification sticker on the gift box and/or on sticker on the device. The serial number consists of 13 characters, the 4th and 5th characters indicate the month, the 6th and 7th indicate the year of device production. Producer may change the complete set, appearance, country of manufacture, warranty and technical characteristics of the model without notice. Please check when purchasing device. Current information about service centers is available on the website <http://multimarta.com/>

Contents

- [1 Documents / Resources](#)
 - [1.1 References](#)
- [2 Related Posts](#)

Documents / Resources

 	marta MT-1723 Toaster Maker Machine [pdf] User Manual MT-1723, Toaster Maker Machine, Maker Machine, Toaster Maker, Toaster Machine, Toaster, Machine
--	--

References

-  [Multimarta - интернет-магазин бытовой техники MARTA](#)

