



## **Contents** [ [hide](#) ]

### [1 Marta MT-CH Series Convection Heater](#)

### [2 Product Usage Instructions](#)

### [3 Assembling:](#)

#### [3.1 Description](#)

#### [3.2 INTRODUCTION](#)

#### [3.3 SAFETY INSTRUCTION](#)

#### [3.4 BEFORE THE FIRST USE](#)

#### [3.5 ASSEMBLING](#)

#### [3.6 CLEANING AND MAINTENANCE](#)

#### [3.7 SPECIFICATION](#)

#### [3.8 WARRANTY](#)

#### [3.9 FAQ](#)

### [4 Documents / Resources](#)

#### [4.1 References](#)

# marta

## **Marta MT-CH Series Convection Heater**



## Specifications

- **Model Variants:** MT-CH2455A, MT-CH2455B, MT-CH2455C, MT-CH2455D
- **Power Supply:** 230V, 50Hz
- **Manufacturer:** Cosmos Far View International Limited Manufacturer Address: Room 701, 16 apt, Lane 165, Rainbow North Street, Ningbo, China

## Product Description

The convection heater features air vents, a power button, wheels, a control panel, indicators, heating mode selection buttons, on/off button, temperature setting button, timer, and display.

## Product Usage Instructions

### Before First Use

1. Unpack the appliance and remove all packaging materials and labels.
2. Clean the device with a damp cloth and clean accessories in soapy water, rinse

thoroughly, and dry.

## **Assembling:**


1. Always unplug the heater from the wall socket and allow it to cool down before cleaning.
2. Clean the outside of the heater by wiping with a damp cloth and buffing with a dry cloth.
3. Do not use detergents or abrasives, and prevent water from entering the heater.
4. Store the heater protected from dust in a clean, dry place if not used for long periods.

## **Cleaning and Maintenance**

1. Clean the device regularly to maintain efficiency and longevity.
2. Avoid using harsh chemicals or abrasive materials on the heater's surface.
3. Ensure the heater is completely dry before reassembling or storing.

## **Description**

1. Air vents
2. Power button
3. Wheels
4. Control panel
5. Indicators
6. Heating mode selection buttons
7. On/off button
8. Temperature setting button
9. Timer
10. Display

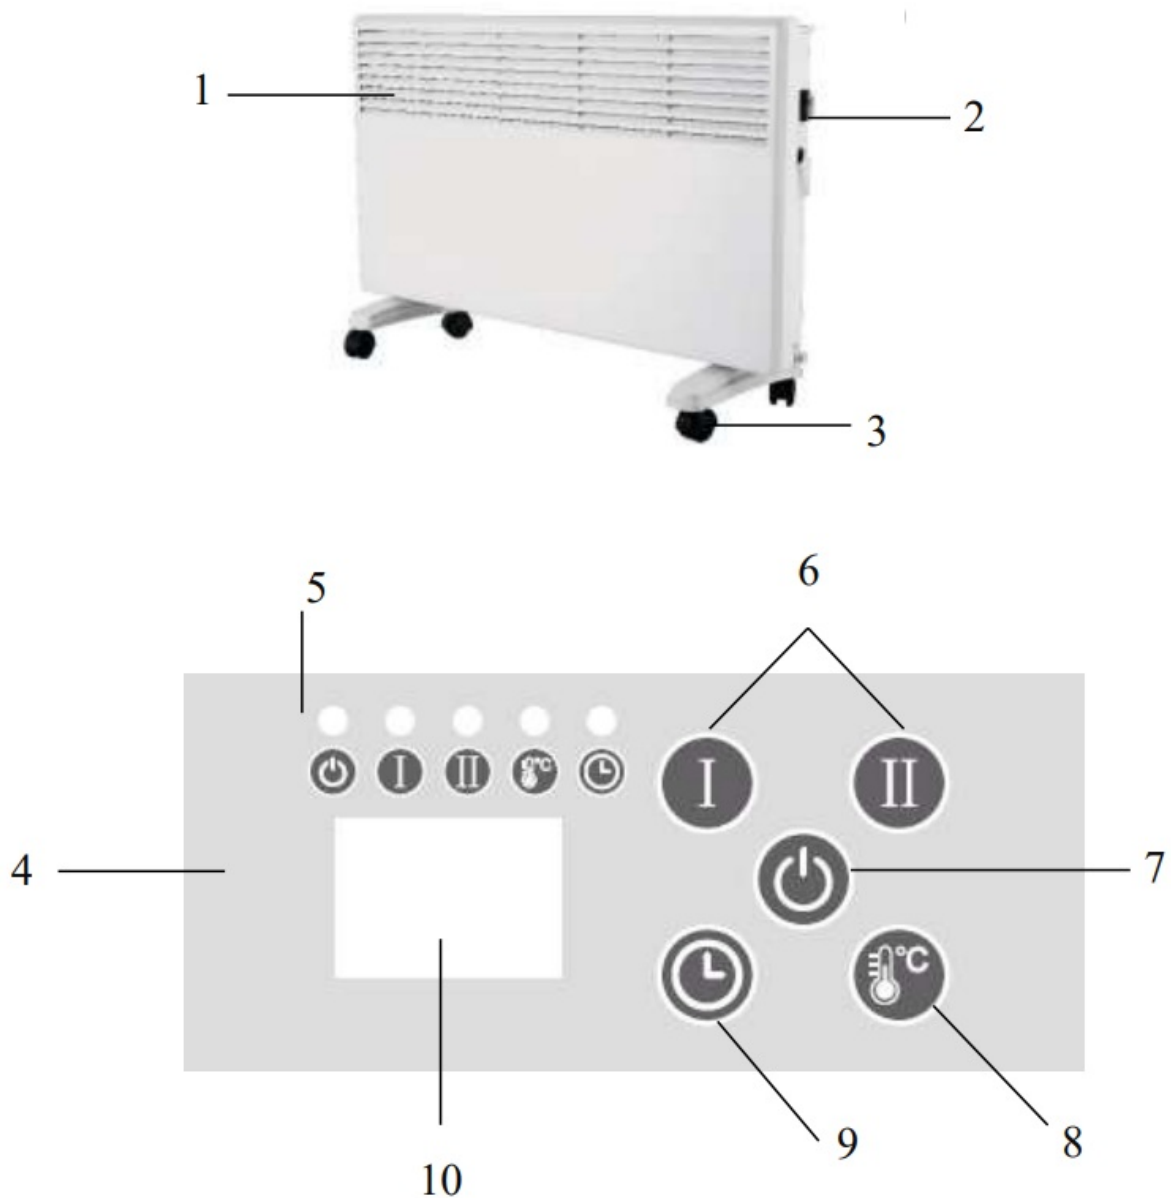

## INTRODUCTION

The real set of the appliance could be different from listed in the User manual. Check once, buy.

## SAFETY INSTRUCTION

- **CAUTION:** When using any electrical appliance, basic safety precautions should always be followed, including the following:
- To ensure familiarity with the controls, safety features, and operation of your heater, read all instructions before use.
- The danger of electric shock exists even when the appliance is switched off. ALWAYS unplug the unit when not in use.
- Unplug the heater by grasping the plug and pulling it from the outlet. NEVER YANK

## ON CORD.

- Do not insert and pull out the plug with wet hands, as this may cause an electrical shock.
- Heater should never be used under conditions where it may be immersed, or come in contact with water. Similarly do not plug in your heater if its surfaces are damp.
- Do not operate the heater with a damaged cord set, or if it has been dropped, or damaged in any manner. Return it to an Authorized Service center for inspection, repairing and testing.
- Do not use outdoors.
- Do not leave the cable on hot surfaces.
- Disconnect the cord from the outlet before cleaning.
- When storing your heater, keep it in a cool, dry place.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Close supervision is required when any appliance is used by or near children.
- The surface temperature of the flanges is higher during use; thus, closely supervise any children in the area of this appliance.
- If malfunctions happen during operation, please take it to the nearby appointed service centre with the maintenance card. Never disassemble it by yourself.
- To avoid a circuit overload, do not operate another high-wattage appliance on the same circuit.
- The heater must always operate in a vertical position.
- Do not scrape the surface with a rod or sharp, hard tools, as this may cause deformation and rust because of damage to the paint coat.
- During use surface temperature of the flanges is perhaps higher; thus, do not touch it except the handle, knob and keys.
- Never use the unit in places with non-flat and unstable surfaces. Make sure there are no flammable or easily deformed objects within 1m.
- The heater is suitable for operation on an A.C. electricity supply having the same voltage as that shown on its rating label. The unit should be earthed.
- Do not cover the appliance.
- **CAUTION!** Do not cover the heater while it is on. This can cause a dangerous

temperature increase.

## **BEFORE THE FIRST USE**

- Unpack the appliance and remove all packaging materials and labels. Store warning labels (if available) and the product serial number plate on the housing!
- Clean the device with a damp cloth, clean the accessories in soapy water, rinse thoroughly and dry.

## **ASSEMBLING**

**To use the electric heater in mobile mode, install the included rollers:**

- Turn the appliance over and place it on a cotton cloth or carpet. Make sure the base is level, stable and clean.
- Install the rollers at the appropriate location on the bottom of the product and secure them to the device with screws.

## **CLEANING AND MAINTENANCE**

- Always unplug the heater from the wall socket and allow it to cool down before cleaning.
- Clean the outside of the heater by wiping with a damp cloth and buffing with a dry cloth.
- Do not use any detergents or abrasives, and do not allow any water to enter the heater.
- When the heater is not used for long periods, it should be protected from dust and stored in a clean, dry place.

## **SPECIFICATION**

- **Power supply**
  - 230 V, 50 Hz
- **Producer:** Cosmos Far View International Limited
- Room 701, 16 Apt, Lane 165, Rainbow North Street, Ningbo, China.
- Made in China

## WARRANTY


**WARRANTY DOES NOT COVER SUPPLIES (filters, ceramic and non-stick coating, rubber seals, etc.)**

- Production date is available in the serial number located on the identification sticker on the gift box and/or on sticker on the device.
- The serial number consists of 13 characters, the 4th and 5th characters indicate the month, the 6th and 7th indicate the year of device production.
- Producer may change the complete set, appearance, country of manufacture, warranty and technical characteristics of the model without notice. Please check when purchasing device.
- Current information about service centres is available on the website [www.multimarta.com](http://www.multimarta.com).

## FAQ

- **Q: What is the power supply requirement for the convection heater?**
  - **A:** The convection heater operates on a 230V, 50Hz power supply.
- **Q: How should I clean the convection heater?**
  - **A:** Unplug the heater, allow it to cool, wipe the exterior with a damp cloth, and do not use detergents or let water enter the unit.

## Documents / Resources

	<a href="#">marta MT-CH Series Convection Heater [pdf]</a> User Manual MT-CH2455A, MT-CH2455B, MT-CH2455C, MT-CH2455D, MT-CH Series Convection Heater, MT-CH Series, Convection Heater, Heater
---	---

## References

- [User Manual](#)

---

# Leave a comment

Your email address will not be published. Required fields are marked \*

Comment \*

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

**Post Comment**

**Search:**

e.g. whirlpool wrf535swhz

**Search**

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.