

marta  
**MT-CH2455A  
Convection Heater**



## marta MT-CH2455A Convection Heater User Manual

[Home](#) » [MARTA](#) » marta MT-CH2455A Convection Heater User Manual 

### Contents

- [1 marta MT-CH2455A Convection Heater](#)
- [2 Product Description](#)
- [3 Product Usage Instructions](#)
- [4 Frequently Asked Questions](#)
- [5 Description](#)
- [6 SAFETY INSTRUCTION](#)
- [7 BEFORE THE FIRST USE](#)
- [8 ASSEMBLING](#)
- [9 CLEANING AND MAINTENANCE](#)
- [10 SPECIFICATION](#)
- [11 WARRANTY](#)
- [12 Documents / Resources](#)
  - [12.1 References](#)
- [13 Related Posts](#)

marta

marta MT-CH2455A Convection Heater



## Specifications

- **Model Options:** MT-CH2455A, MT-CH2455B, MT-CH2455C, MT-CH2455D
- **Power Supply:** 230V, 50Hz
- **Manufacturer:** Cosmos Far View International Limited
- **Address:** Room 701, 16 apt, Lane 165, Rainbow North Street, Ningbo, China

## Product Description

The convection heater comes with various features including air vents, a power button, wheels, a control panel, indicators, heating mode selection buttons, an on/off button, a temperature setting button, a timer, and a display.

## Product Usage Instructions

### Before the First Use

- Ensure the heater is placed on a stable surface and is connected to a power source that meets the specifications provided.

### Assembling

- Follow the assembly instructions provided in the user manual to set up the convection heater correctly.

### Cleaning and Maintenance

- Regularly clean the air vents and control panel with a soft cloth. Ensure the heater is unplugged before cleaning. Refer to the user manual for detailed maintenance instructions.

## **Operating Instructions**

1. Press the power button to turn on the heater.
2. Use the heating mode selection buttons to choose your desired heating setting.
3. Adjust the temperature using the temperature setting button.
4. You can set the timer for automatic shut-off using the timer function.

## **Frequently Asked Questions**

### **Q: Can I leave the convection heater unattended?**


**A:** It is not recommended to leave the heater unattended. Always monitor its operation for safety purposes.

### **Q: What should I do if the heater malfunctions?**

**A:** In case of any malfunctions, immediately unplug the heater and contact customer support for assistance.

## **Description**

1. Air vents
2. Power button
3. Wheels
4. Control panel
5. Indicators
6. Heating mode selection buttons
7. On/off button
8. Temperature setting button
9. Timer
10. Display

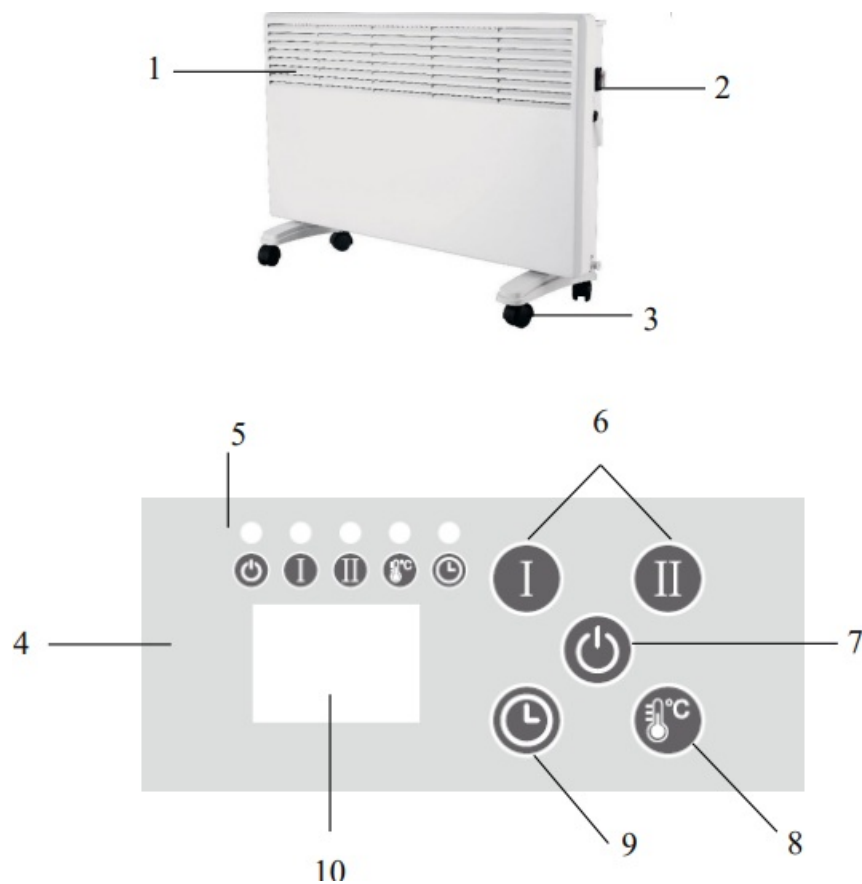

The real set of the appliance could be different from those listed in the User manual. Check once buy.

## SAFETY INSTRUCTION

### CAUTION

- When using any electrical appliance, basic safety precautions should always be followed, including the following.
- To ensure familiarity with the controls, safety features, and operation of your heater, read all instructions before use.
- The danger of electric shock exists even when the appliance is switched off. ALWAYS unplug the unit when not in use.
- Unplug the heater by grasping plug and pulling it from the outlet. NEVER YANK ON CORD.
- Do not insert and pull out the plug by wet hands, as this may cause electrical shock.
- Heater should never be used under conditions where it may be immersed, or come in contact with water. Similarly do not plug in your heater if its surfaces are damp.
- Do not operate the heater with a damaged cord set, or if it has been dropped, or damaged in any manner. Return it to an Authorized Service center for inspection, repairing and testing.
- Do not use outdoors.
- Do not leave the cable on hot surfaces.
- Disconnect the cord from the outlet before cleaning.
- When storing your heater, keep it in a cool, dry place.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Close supervision is required when any appliance is used by or near children.
- The surface temperature of the flanges is higher, during use, thus closely supervise any children in the area of this appliance.
- If malfunctions happen during operation, please put it to nearby appointed service center with the maintenance card. Never disassemble it by yourself.
- To avoid a circuit overload, do not operate another high wattage appliance on the same circuit.
- The heater must always operate in vertical position.
- Do not scrap the surface with rod or sharp hard tools, as this may cause deformation and rust because of damage of paint coat.
- During use surface temperature of the flanges is perhaps higher, thus do not touch it except handle, knob and the keys.
- Never use the unit in places with not flat and unstable surfaces. Make sure there are no flammable or easy deformed objects within 1m.
- The heater is suitable for operation on an A.C. electricity supply having the same voltage as that shown on its rating label. The unit should be earthed.
- Do not cover the appliance.
- **CAUTION!** Do not cover the heater while it is on. This can cause dangerous temperature increase.

## BEFORE THE FIRST USE

- Unpack the appliance and remove all packaging materials and labels. Store warning labels (if available) and the product serial number plate on the housing!
- Clean the device with a damp cloth, clean the accessories in soapy water rinse thoroughly, and dry.



- Press the power button to turn on the device. The indicator will light up, indicating that the device has entered standby mode.

## The heating power is adjusted by turning on one of the switches:

- **Mode “I”** – the heater operates at minimum power,
- **Mode “II”** – the heater operates at maximum power.



- The heating temperature is adjusted by pressing the button. Temperature adjustment range 15-40°C.



- This model is equipped with a programmable timer in a 24-hour format. To set the timer, press the button. After this, the display will show the minutes field “00”, Set the timer, increasing the time by 1 hour with each press.

## ASSEMBLING

- To use the electric heater in mobile mode, install the included rollers.
- Turn the appliance over and place it on a cotton cloth or carpet. Make sure the base is level, stable, and clean.
- Install the rollers at the appropriate location on the bottom of the product and secure them to the device with screws.



## CLEANING AND MAINTENANCE

- Always unplug the heater from the wall socket and allow it to cool down before cleaning.
- Clean the outside of the heater by wiping it with a damp cloth and buff with a dry cloth.
- Do not use any detergents or abrasives and do not allow any water to enter the heater.
- When the heater is not used for long periods it should be protected from dust and stored in a clean dry place.


## SPECIFICATION

- **Power supply**
  - 230 V, 50 Hz
- **Producer:** Cosmos Far View International Limited Room 701, 16 apt, Lane 165, Rainbow North Street, Ningbo, China. Made in China

## WARRANTY

- WARRANTY DOES NOT COVER SUPPLIES (filters, ceramic and non-stick coating, rubber seals, etc.)
- The production date is available in the serial number located on the identification sticker on the gift box and/or on the sticker on the device.
- The serial number consists of 13 characters, the 4th and 5th characters indicate the month, and the 6th and 7th indicate the year of device production.
- A producer may change the complete set, appearance, country of manufacture, warranty, and technical characteristics of the model without notice. Please check when purchasing a device.
- Current information about service centers is available on the website [www.multimarta.com](http://www.multimarta.com).

## Documents / Resources

	<a href="#">marta MT-CH2455A Convection Heater</a> [pdf] User Manual MT-CH2455A, MT-CH2455A Convection Heater, Convection Heater, Heater
---	---

## References

-  [Multimarta - интернет-магазин бытовой техники MARTA](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.