



marta MT-KP1596A Food Processor with Hand Blender User Manual

[Home](#) » [MARTA](#) » marta MT-KP1596A Food Processor with Hand Blender User Manual 

Contents

- [1 marta MT-KP1596A Food Processor with Hand Blender](#)
- [2 Description](#)
- [3 INSTALLATION](#)
- [4 BEFORE THE FIRST USE](#)
- [5 USING THE DEVICE](#)
- [6 CLEANING AND MAINTENANCE](#)
- [7 SPECIFICATION](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)

marta

marta MT-KP1596A Food Processor with Hand Blender



Description



1. On/off button
2. Handle / Motor block
3. Detachable blender
4. The upper part of the whisk
5. The metal part of the whisk
6. Chopper cover
7. Chopper blade
8. Chopper cup

The real set of the appliance could be different from listed in the User manual. Check once buy

INSTALLATION

CAUTION

- Read this manual carefully before using the appliance and save it for future reference.
- Before the first use, check the device specifications and the power supply in your network.
- It is not intended for industrial use. For indoor use only. Use only for domestic purposes according to the instruction manual.
- Do not use with a damaged cord, plug, or other injuries. Keep the power cord away from sharp edges and hot surfaces.
- Do not pull the cord. Always take the socket. Do not reel the cord around the device housing.
- Never attempt to frame and repair the appliance by yourself. If you meet problems, please contact the nearest customer service center.
- Using accessories or replacement parts that are not recommended or sold by the manufacturer may cause damage to the appliance.
- Always unplug the appliance and let it cool down before cleaning and removing parts. Keep unplugged when not in use.
- To avoid electric shock and fire, do not immerse in water or other liquids. If this occurs, immediately unplug it and contact the service center for inspection.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Do not use the device for grinding solid products such as coffee beans or ice cubes.
- Switch off the appliance before changing the accessories.
- Be careful when using sharp blades.
- Avoid any contact with sharp parts of the device while moving.
- An incorrectly assembled device may cause fire, electric shock, or other injuries.
- The maximum allowable continuous operating time is 30 sec. Turn off the device and allow the engine to cool down for 1 min before continuing. After 4 rounds allow the engine to cool down for 15 min before continuing.

BEFORE THE FIRST USE

- Unpack the appliance and remove all packaging materials and labels.
- Clean the motor block with a damp cloth, clean the accessories in soapy water rinse thoroughly, and dry.
- Set proper accessories.

USING THE DEVICE

USING A BLENDER

- Set blender accessory.
- Place the accessory in the cup with the product, and hold the handle.
- Connect the device to the mains.
- Push the ON/OFF button to start blending.

- Move the blender in the cup in a circular motion for proper grinding.
- Don't put the blender in water over the line of the attachment blender and motor unit.
- In case cutting blades are blocked, turn off the device & unplug the appliance from the mains.
- After use, turn off the device, remove the blender from the mains, and disconnect the accessory.

USING WHISK

- Fix the handle on the upper part of the whisk.
- Place the product inside the cup.
- Push the ON/OFF button to start blending.
- After use, turn off the device, remove the blender from the mains, and disconnect the whisk.

USING CHOPPER

- Fix the chopper blades inside of the chopper cup, and add products.
- Place the cover and motor block and fix it tight.
- Connect the device to the mains.
- Push the ON/OFF button to start blending.
- After use, turn off the device by pressing the on/off button, remove the blender from the mains, and disconnect the chopper.

CLEANING AND MAINTENANCE

- Before cleaning, always unplug the appliance.
- Use wet cloth to clean the motor block. Do not immerse the appliance in water or other liquids.
- Clean accessories in soapy water and dry.
- Do not use chemical and abrasive cleaners for cleaning.
- Recommended to clean the device right after operating to avoid coloring of plastic parts.


SPECIFICATION

Power supply	Nominal power	Maximum power	Net weight / Gross weight	Package size (L x W x H)
230 V ~ 50 Hz	300 W	900 W	0,75 kg / 0,90 kg	180 x 125 x 210 mm


- **WARRANTY DOES NOT COVER SUPPLIES** (filters, ceramic and non-stick coating, rubber seals, etc.)
- The production date is available in the serial number located on the identification sticker on the gift box and/or on the sticker on the device. The serial number consists of 13 characters, the 4th and 5th characters indicate the month, and the 6th and 7th indicate the year of device production. The producer may change the complete set, appearance, country of manufacture, warranty, and technical characteristics of the model without notice. Please check when purchasing the device.
- **Current information about service centers is available on the website** <http://multimarta.com/>

- **Producer:** COSMOS FAR VIEW INTERNATIONAL LIMITED
- Room 701, 16 apt, Lane 165, Rainbow North Street, Ningbo, China
- Made in China

Documents / Resources

	marta MT-KP1596A Food Processor with Hand Blender [pdf] User Manual MT-KP1596A Food Processor with Hand Blender, MT-KP1596A, Food Processor with Hand Blender, Hand Blender
---	--

References

-  [Multimarta - интернет-магазин бытовой техники MARTA](#)
-  [Multimarta - интернет-магазин бытовой техники MARTA](#)