




## MASTECH MS922E AC Line Splitter User Guide

[Home](#) » [MASTECH](#) » MASTECH MS922E AC Line Splitter User Guide 

MASTECH MS922E AC Line Splitter

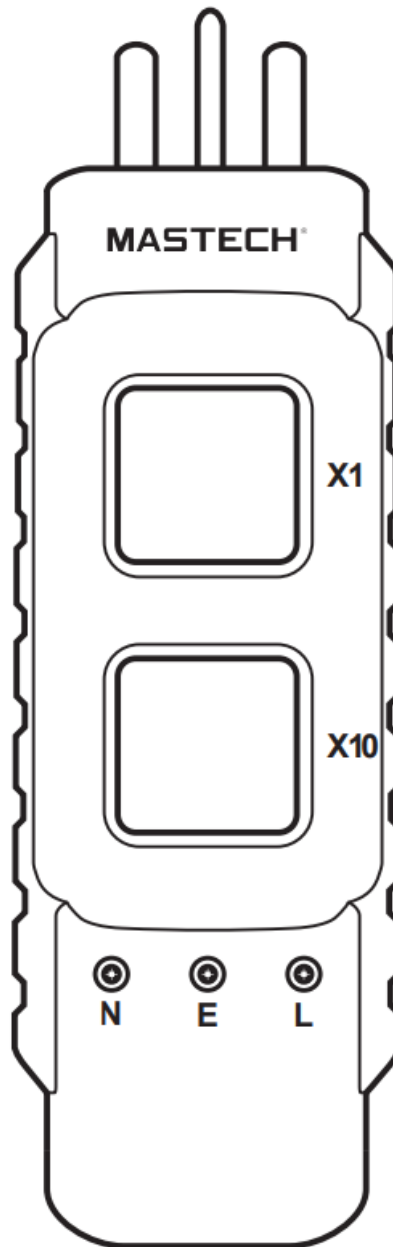

## Contents

- [1 Safty Insturcation](#)
- [2 Contents](#)
- [3 Specifications](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)



## Safty Insturcation

**The special attention should be paid when using the test and measurement instrument because the improper usage may cause electric shock and damage the equipment.**

- Use proper measurement category (CAT), voltage, and amperage rated probes, test leads, and adapters for the measurement.
- Do not use or store the device around explosive gas, vapor, or under high temperature and humidity.
- When handling the test probes and crocodile clips, keep your fingers behind the physical guard.

- Examine the measuring test leads (if present) before use. Any element of which the insulation is deteriorated (even partially), replace them with proper functional test leads.
- Connect the common test lead before the live test lead and remove the live test lead before the common test lead.
- Before measuring current, make sure the instrument fuses available and disconnect the power supply to the circuit test
- Remove the batteries if the device is not used for an extended period of time, or if stored in temperatures above 45 °C. If the batteries are not removed, battery leakage can damage the device.


**Contents**




**Specifications**

|                      |                              |
|----------------------|------------------------------|
| Range                |                              |
| V~                   | 250V                         |
| A~                   | 15A                          |
| X1 current terminal  | Tests actual working current |
| X10 current terminal | Tests working current x10    |


1

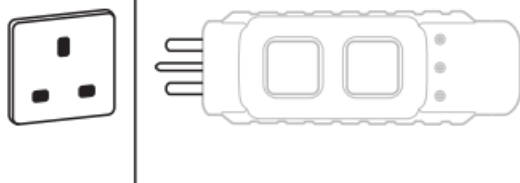


2

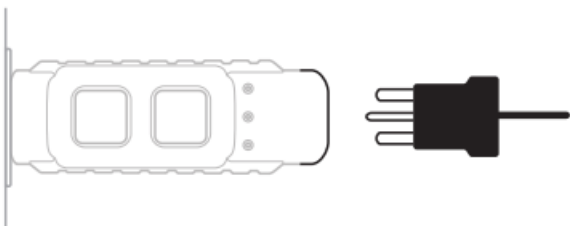


3

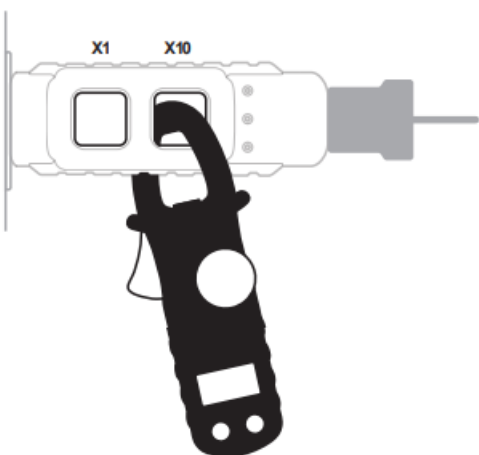


1

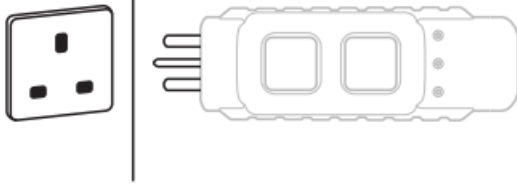

2

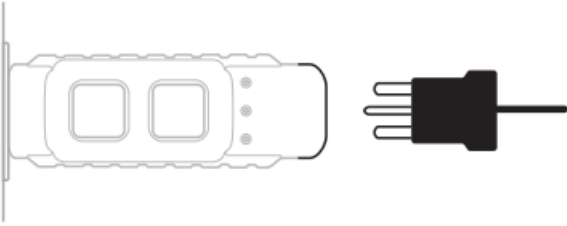


3

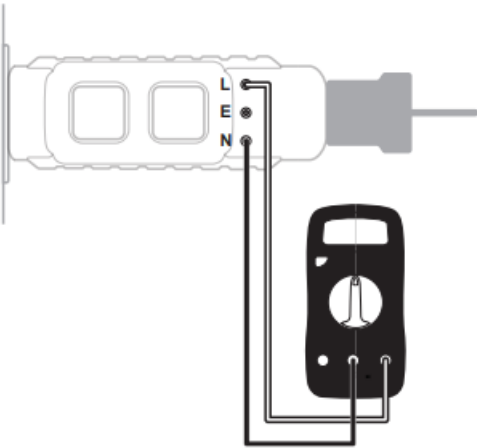


# Power


1

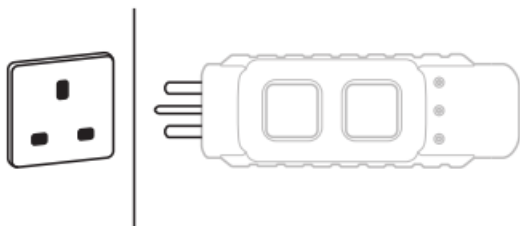

2

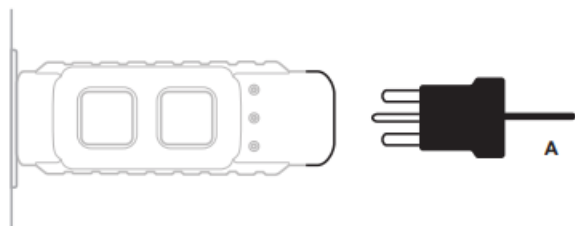

3 Power = V X A

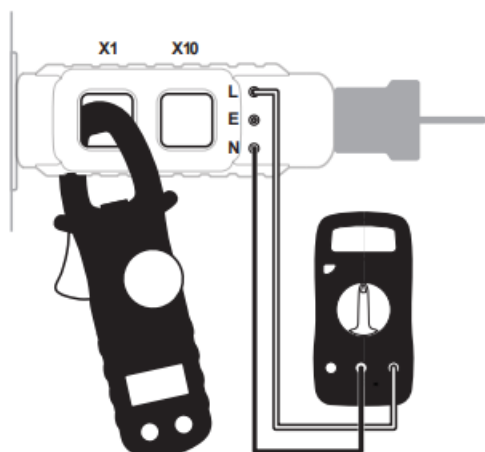

## UNITED KINGDOM

MGL GROUP U.K. LIMITED

14 Weller St, London, SE1 1QU, UK

Tel: +34 985-08-18-70

Email: [cs.uk@mgl-intl.com](mailto:cs.uk@mgl-intl.com)



**1 YEAR LIMITED WARRANTY**



## Documents / Resources

|  |                                                                                                                                                        |
|--|--------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><a href="#">MASTECH MS922E AC Line Splitter</a> [pdf] User Guide<br/>MS922E AC Line Splitter, MS922E, AC Line Splitter, Line Splitter, Splitter</p> |
|--|--------------------------------------------------------------------------------------------------------------------------------------------------------|