



MASTER Chef 2-Slice Toaster Instruction Manual

[Home](#) » [MASTER Chef](#) » MASTER Chef 2-Slice Toaster Instruction Manual



MasterChef

2-SLICE TOASTER
Model no. 043-1006-0



INSTRUCTION MANUAL

Read this booklet thoroughly before using the product, and save it for future reference.

Contents [[hide](#)]

- [1 IMPORTANT SAFEGUARDS](#)
- [2 Know Your Toaster](#)
- [3 Before First Use](#)
- [4 Using Your Toaster](#)
- [5 Caution](#)
- [6 Cleaning and Maintenance](#)
- [7 Warranty](#)
- [8 Documents / Resources](#)
- [9 Related Posts](#)

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Read all instructions before using. Save these instructions for future reference.
2. Do not touch hot surfaces. Use handles or knobs.
3. To protect against fire, electric shock and injury to persons do not immerse cord, plug, or appliance in water or other liquid.
4. Close supervision is necessary when any appliance is used by or near children.
5. Unplug from power outlet when not in use and before cleaning. Allow to cool before attaching or removing parts, and before cleaning the appliance.
6. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been

damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair or adjustment.

7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over the edge of a table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. To disconnect, turn any control "off" then remove plug from power outlet.
12. Do not use appliance for other than its intended use.
13. WARNING-To prevent electrical shock, unplug before cleaning.
14. Oversize foods, metal foil packages, or utensils must not be inserted in a toaster as they may involve a risk of fire or electric shock.
15. A fire may occur if toaster is covered or touching flammable material, including curtains, draperies, walls, when in operation.
16. Do not attempt to dislodge food when toaster is plugged in.
17. Do not operate unattended.
18. Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.

SAVE THESE INSTRUCTIONS HOUSEHOLD USE ONLY



Notes on the cord plug


This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug will fit in a polarized outlet only one way; If the plug does not fit fully into the outlet, reverse the plug; If it still does not fit, contact a qualified electrician. Do not modify the plug in any way.



Notes on the cord

- a) A short power-supply cord is provided to reduce the risk resulting from becoming entangled in or tripping over a longer cord
- b) extension cords are available and may be used if care is exercised in their use.
- c) If an extension cord is used:
 - 1) The marked electrical rating of the extension cord should be at least as great as the electrical rating of the appliance;
 - 2) The cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over.
 - 3) If the appliance is of the grounded type, the extension cord should be a grounding-type 3-wire cord.

Know Your Toaster

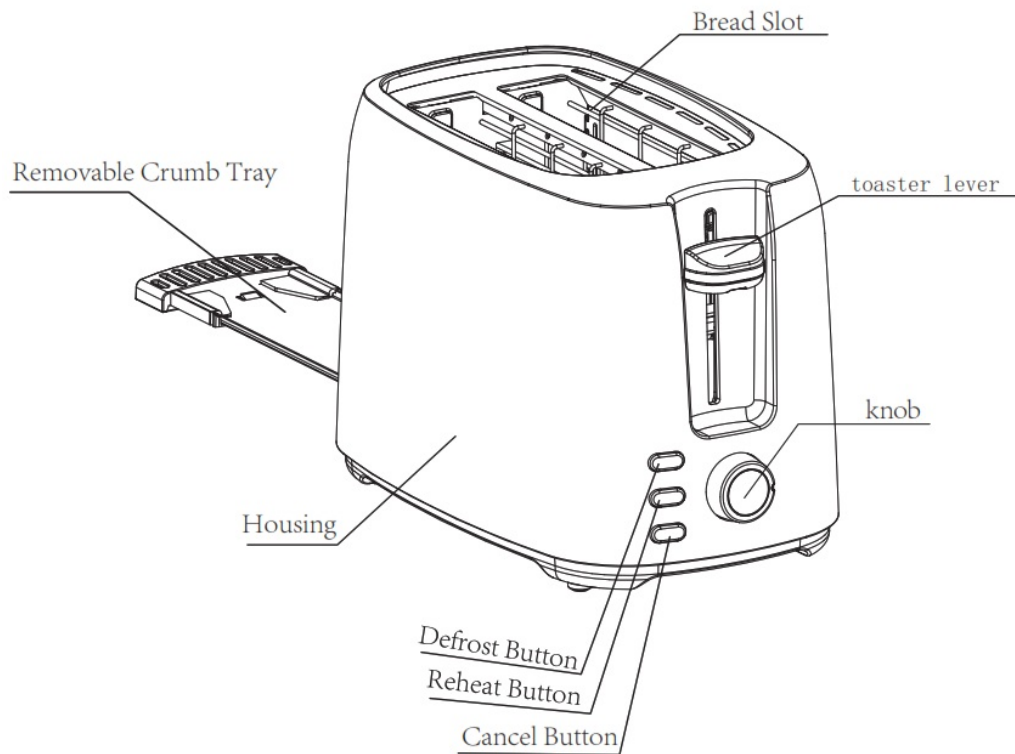

Before First Use

As there may be manufacturing residue or oil remaining in the toaster or heating element, it is not uncommon for the appliance to usually emits odours during the first use. This is normal and will not occur after several uses. Use the toaster for the first time without any bread in it.

Using Your Toaster

1. Insert one or two bread slices into the bread slots. One regular-sized bread can be placed in the bread slots.



NOTE: Make sure the crumb tray is completely positioned in place before using.

2. Plug the power cord into a power outlet.
3. Set colour control knob to your desired colour. There are 7 darkness setting, where 1 is the lightest and 7 is the darkest. The bread slice can be toasted to a golden colour at the position of "4".



NOTE

1. Toasting darkness for one slice will be darker than that for two slices at the same level.
2. If toasting continuously, the toasting result will be darker for later batches of toast. This is due to the heating element retaining heat from previous cycles.
4. Press toaster lever down vertically until it is positioned in place. The indicator of Cancel will be illuminated, and toasting begins. Once the bread has been toasted to the preset darkness, the toaster lever will automatically pop up, and the bread can be removed.



NOTE

1. The toaster lever can only be set when the appliance is connected to the power supply.
5. During the toasting process, you may observe the darkness level of the toast. If it is satisfactory, interrupt the toasting process by pressing the Cancel button at any time.
6. If the bread is frozen prior to toasting, set colour control knob to your desired darkness. Press toaster lever

down vertically until it is positioned in place, then press DEFROST button and the indicator of DEFROST will be illuminated. In this mode, the bread will thaw and then toast it to desired darkness.

7. If you want to reheat previously toasted bread: press toasting lever down vertically until it is positioned in place, then press REHEAT button and the indicator of REHEAT will be illuminated.

Caution

1. Remove all protective wrapping prior to toasting.
2. If toaster starts to smoke, press Cancel button to stop toasting immediately.
3. Avoid toasting food with additional ingredients such as butter.
4. Never attempt to remove bread jammed in the slots without unplugging the toaster from the power outlet first.
Be sure not to damage the internal mechanism or heating elements when removing bread.
5. The bread slot will only fit regular-size bread slices.

Cleaning and Maintenance

1. Disconnect appliance from power outlet before cleaning.
2. Wipe the outside with a soft dry cloth after toaster cools down. Never use metal polish.
3. Pull out the crumb tray on the bottom of toaster by crumb tray handle and empty it. If toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again.
4. When not in use, the power cord may be wrapped under the bottom of toaster.
5. Any other servicing should be performed by an authorized service representative.

Warranty

1-Year Limited Warranty

This product carries a one (1) year warranty against defects in workmanship and materials. Trileaf Distribution agrees to replace the defective product free of charge within the stated warranty period, when returned by the original purchaser with proof of purchase. This product is not guaranteed against wear, misuse and/or abuse.


Made in china

Imported by trileaf Distribution Trifeuil Toronto, Canada M4S 2B8

Customer service hotline:

Masterchef Tel: 1-855-803-9313

Documents / Resources

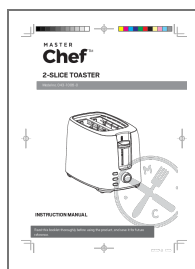

[MASTER Chef 2-Slice Toaster](#) [pdf] Instruction Manual
2-Slice Toaster, 043-1006-0