




MASTER METER ALLEGRO3I, ALLEGRO3E Bottom Load Multi Jet User Manual

[Home](#) » [MASTER METER](#) » MASTER METER ALLEGRO3I, ALLEGRO3E Bottom Load Multi Jet User Manual 

Contents

- [1 MASTER METER ALLEGRO3I, ALLEGRO3E Bottom Load Multi Jet](#)
- [2 Product Usage Instructions](#)
- [3 Allegro general view](#)
- [4 MULTI-JET METER INSTALLATION INSTRUCTIONS](#)
- [5 FAQ](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)



MASTER METER ALLEGRO3I, ALLEGRO3E Bottom Load Multi Jet



Product Specifications:

- **FCC ID:** NTA2W4GB3
- **IC:** 4732A-2W4GB3
- **Models:** ALLEGRO3I, ALLEGRO3E
- **Manufacturer:** Master Meter, Inc.
- **Address:** 101 Regency Pkwy, Mansfield, TX 76063
- **Phone:** [817-842-8000](tel:817-842-8000)
- **Website:** MasterMeter.com

Product Usage Instructions

CAUTION:

The User and the Installer should be aware that changes and modifications to the equipment not expressly approved by Master Meter could void warranty and the user's authority to operate the equipment. Professionally trained personnel should install the equipment.

ATTENTION:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
4. Consult the dealer or an experienced radio/TV technician for help.

MULTI-JET METER INSTALLATION INSTRUCTIONS:

The installation instructions detailed below are consistent with recommendations by the American Water Works Association in AWWA Manual M6, Water Meters-Selection, Installation, Testing, and Maintenance.

AT THE TIME OF INSTALLATION:

1. To test the installation for leaks:

- Close the outlet (downstream) shutoff valve.
- Open the inlet (upstream) shutoff slowly until the meter is full of water.
- Open the outlet (downstream) valve slowly until air is out of the meter and service line.

- Open a customer faucet slowly to allow entrapped air to escape.
- Close the customer faucet.

Allegro general view



Model: ALLEGRO3E



Model: ALLEGRO3I

CAUTION

The User and the Installer should be aware that changes and modifications to the equipment not expressly approved by Master Meter could void warranty and the user's authority to operate the equipment. Professionally trained personnel should install the equipment.

ATTENTION

The digital portion of the transceiver has been tested and found to comply with the limits for a Class B digital device, pursuant to part 90 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
2. Increase the separation between the equipment and receiver.
3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

4. Consult the dealer or an experienced radio/TV technician for help.

FCC and Industry Canada statements

This device complies with Part 90 of FCC Rules and with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesired operation.

The device meets the exemption from the routine evaluation limits in section 2.5 of RSS-102 and compliance with RSS-102 RF exposure, users can obtain Canadian information on RF exposure and compliance.

CAN ICES-3 (B)/NMB-3(B)

This Class B digital apparatus complies with Canadian ICES-003. Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada. The antenna used for this transmitter must be installed to normally provide minimum separation distance of at least 20 cm from all persons and must not be co-located or operating in conjunction with any other antenna or transmitter.

MULTI-JET METER INSTALLATION INSTRUCTIONS

The installation instructions detailed below are consistent with recommendations by the American Water Works Association in AWWA Manual M6, Water Meters-Selection, Installation, Testing, and Maintenance.

WE RECOMMEND IN THE DESIGN OF THE INSTALLATION:

1. The installation should include a high quality, low pressure loss shutoff valve upstream of the meter to prevent water damage to the customer property when service is required, a downstream shutoff valve is likewise recommended.
2. The meter should be installed in a horizontal plane, with the register upright, in a location accessible for reading, service and inspection.
3. The installation should be leak-tight, with properly sized gaskets. When meter connections are ordered from Master Meter, gaskets are provided. Appropriate gaskets and couplings also are available from a qualified waterworks distributor. Whenever a meter is pulled from the line, discard and replace the old gaskets.
4. Although AWWA opposes the grounding of electrical systems to potable water delivery lines, such practices do exist. To prevent accidental harm to service personnel, make certain that an electrical grounding strap is installed around the meter.

AT THE TIME OF INSTALLATION:

1. Thoroughly flush the service line upstream of the meter to remove dirt and debris.
2. Remove meter spud thread protectors. Note: To protect the meter spud threads, store the meter with the thread protectors in place.
3. Set the meter in the line. Arrows on the side of the meter and above the outlet spud indicate the direction of flow.
4. Do not over-tighten connections; tighten only as required to seal. Do not use pipe sealant or Teflon tape on meter threads.
5. With upstream shutoff valve only: Open the shutoff valve slowly, to remove air from meter and service line.

Open a consumer faucet slowly to allow entrapped air to escape. Close the customer Faucet.

1. With upstream and downstream shutoff valves installed:

1. To test the installation for leaks: Close the outlet (downstream) shutoff valve. Open the inlet (upstream) shutoff slowly until the meter is full of water.
2. Open the outlet (downstream) valve slowly until air is out of the meter and service line. Open a customer faucet slowly to allow entrapped air to escape. Close the customer faucet.

Master Meter, Inc.

- 101 Regency Pkwy, Mansfield, TX 76063
- T: [817-842-8000](tel:817-842-8000)
- F: [817-842-8100](tel:817-842-8100)
- MasterMeter.com

FAQ

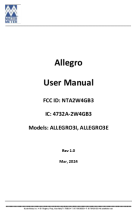
Q: What should I do if I encounter issues with my Allegro meter?

A: If you encounter any issues with your Allegro meter, please contact our customer support at [817-842-8000](tel:817-842-8000) or visit our website for assistance.

Q: Can I install the Allegro meter myself?

A: It is recommended to have professionally trained personnel install the Allegro meter to avoid voiding the warranty and ensure proper operation.

Documents / Resources

	MASTER METER ALLEGRO3I, ALLEGRO3E Bottom Load Multi Jet [pdf] User Manual ALLEGRO3I, ALLEGRO3E, ALLEGRO3I ALLEGRO3E Bottom Load Multi Jet, ALLEGRO3I ALLEGRO3E, Bottom Load Multi Jet, Load Multi Jet, Multi Jet, Jet
---	--

References

- [Discover why Utilities Chose Master Meter as Best Smart Water Solution](#)
- [User Manual](#)

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.