



## MasterChef VRD919102039 Stick Blender Set User Manual

[Home](#) » [MasterChef](#) » MasterChef VRD919102039 Stick Blender Set User Manual 



**MasterChef**  
THE TV SERIES

**VRD919102039 Stick Blender Set  
User Manual**



## Contents

[1 IMPORTANT SAFEGUARDS, SAVE THESE INSTRUCTIONS](#)

[2 EXPLANATION SYMBOLS](#)

[3 GENERAL FEATURES](#)

[4 CLEANING](#)

[5 STORAGE](#)

[6 ENVIRONMENT-FRIENDLY DISPOSAL](#)

[7 Documents / Resources](#)

[7.1 References](#)

[8 Related Posts](#)

## IMPORTANT SAFEGUARDS, SAVE THESE INSTRUCTIONS

The following safety precautions should always be followed, to reduce the risk of electric shock, personal injury, or fire. It is important to read all of these instructions carefully before using the product and to save them for future reference or new users.

**Read all instructions before use.**

- To protect against the risk of electrical shock do not put the motor body, cord, or electrical plug of this Hand Blender in water or other liquid.
- Appliances can be used by persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
- This appliance shall not be used by children. Keep the appliance and its cord out of reach of children.
- Children should be supervised to ensure they do not play with the appliance.
- Turn the appliance OFF, then unplug it from the outlet when not in use, before assembling or disassembling parts, and before cleaning. To unplug, grasp the plug and pull from the outlet. Never pull from the power cord.
- Avoid contacting moving parts. Keep hands, hair, and clothing, as well as spatulas and other utensils away from accessories during operation to reduce the risk of injury to persons and/or damage to the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or is dropped or damaged in any manner. Return the appliance to the nearest Authorised Service Centre for examination, repair, or adjustment.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent, or similarly qualified persons in order to avoid a hazard.
- The use of attachments not recommended or sold by the manufacturer may cause fire, electrical shock, or injury.
- Do not use outdoors.
- Do not let the cord hang over the edge of the table or counter.
- Do not let the cord contact hot surfaces, including the stove.
- When mixing liquids, especially hot liquids, use a tall container or make small quantities at a time to reduce spillage.
- Keep hands and utensils out of the container while blending to prevent the possibility of severe injury to persons or damage to the unit. A scraper may be used but must be used only when the unit is not running.
- Blades are sharp. Care should be taken when handling the sharp cutting blades, emptying the bowl, and cleaning.
- Be careful if hot liquid is blended in the pitcher, as it can be ejected out due to sudden steaming.
- See the “Use” section for instructions on operating times and speed settings for accessories.
- See the “Cleaning” section for instructions on cleaning the surfaces in contact with food.
- This appliance is intended to be used in household and similar applications such as:
  - Staff kitchen areas in shops, offices, or other working environments; farmhouses;
  - by clients in hotels, motels, and other residential-type environments;
  - bed and breakfast type environments.
- **WARNING:** To prevent electric shock, unplug before servicing.
- Always disconnect the blender from the supply if it is left unattended and before assembling, disassembling or cleaning.

## SAVE THESE INSTRUCTIONS

## EXPLANATION SYMBOLS



Read the operations manual.



The packaging can be reused or recycled. Please dispose properly of any packaging material no longer required.




If you notice any transport damage when unpacking the product, please contact your dealer without delay.



This product is safe to be used in contact with food.

## GENERAL FEATURES

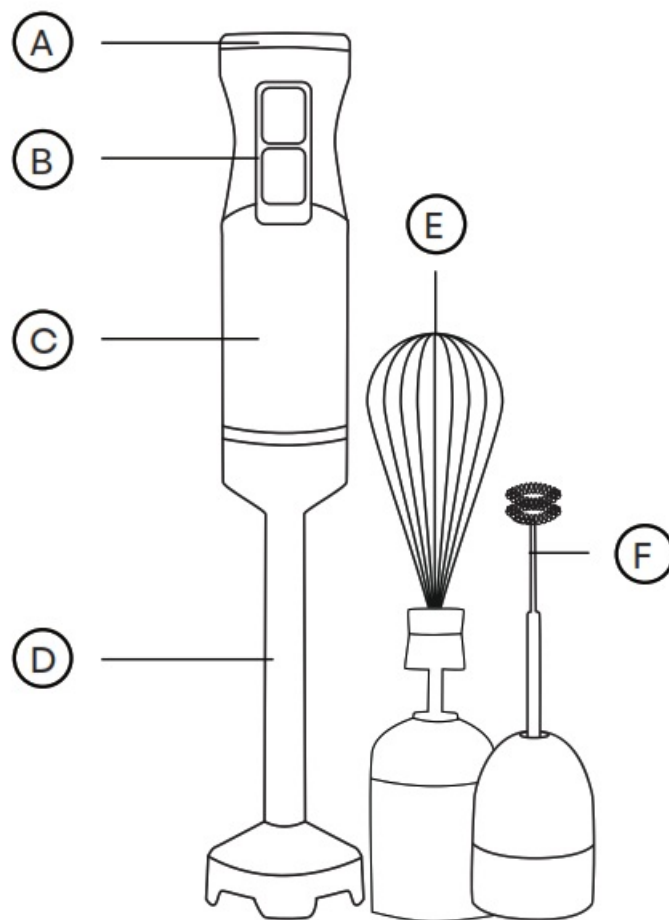

A. Speed knob  
B. Push button  
C. Body

D. Stainless leg  
E. Whisk  
F. Milk Frother

## IN THE BOX

- Stainless steel body
- Stainless steel leg
- Milk frother with a spiral whisk
- Whisk

- Instruction manual

## TECHNICAL DATA

- 600W – 240V – 60Hz

## USE

- Never touch the blades while the machine's plugged in.
- Keep fingers, hair, clothing, and utensils away from moving parts.
- Unplug after use and before Changing attachments
- Never blend hot oil or fat.
- Never use a damaged hand blender. Get it checked or repaired in your local place.
- Never put the power handle in water or let the cord or plug get wet-you could get an electric shock.
- Never let the cord touch hot surfaces or hang down where a child could grab it.
- Never use an unauthorized attachment
- Young children should be supervised to ensure that they do not play with this appliance.

### Before using it for the first time

1. Remove all packaging and throw away the blade covers.
2. Wash the parts: see "cleaning".

### To use the hand blender (speed)

- Please use the speed knob to adjust the speed of the product
- Move the appliance slowly up and down and in cycles to blend the ingredient
- You can blend baby food, soups, sauces, milkshakes, and mayonnaise.
- Don't fill the beaker above 700ml (24fl oz).

### For saucepan blending (speed)

- Take the pan off the heat and let it cool slightly. Otherwise, your hand blender could overheat.
- Please cool the product after 60 seconds of continuous working.

Food	Maximum amount	Approx time (seconds)
Baby food	100 – 400 ml	50 sec
Fruits	100 – 200 g	50 sec
Vegetables	100 – 200 g	50 sec
Batters	100 – 500 ml	50 sec
Sauces	100 – 700 ml	50 sec

1. Fit the power handle inside the blender shaft, turn and lock.
2. Plug in to avoid splashing, and place the blade in the food before switching it on.
3. Hold the beaker steady, then press either speed button.
4. Don't let the liquid get above the joint between the power handle and the blender shaft.
  - Move the blade through the food and use a stabbing action.
  - If your blender gets blocked, unplug it before clearing.
5. After use, unplug and dismantle.

## Processing guide

Food	Maximum amount	Approx time (seconds)
Herbs	2	10 – 30 sec
Meat	100 g	4 sec
Nuts	20 g	30 sec
Cheese	450 g	30 sec
Bread	200 g	20 sec
Hardboiled eggs	150 g	5 sec
Onions	1 slice	10 sec

## CLEANING

- Clean with a wet cloth. Do not allow water to seep into the scale body.
- Never immerse electrical parts of the product in water during cleaning or operation. Never hold the product under running water.
- When cleaning, never use solvents or abrasive materials, hard brushes, or metallic or sharp objects. Solvents are harmful to human health and can attack plastic parts, while abrasive cleaning mechanisms and tools may scratch the surface.

## STORAGE

If necessary, move it to a position that is out of reach of children and pets.

## ENVIRONMENT-FRIENDLY DISPOSAL



■ This marking indicates that this product should not be disposed of with other household wastes throughout the US. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmentally safe recycling.

## WARRANTY

- The manufacturer provides a warranty in accordance with the legislation of the customer's own country of residence, with a minimum of 1 year, starting from the date on which the appliance is sold to the end user.
- The warranty only covers defects in materials or workmanship.
- The repairs under warranty may only be carried out by an authorized service center. When making a claim under the warranty, the original bill of purchase (with purchase date) must be submitted.
- The warranty will not apply in cases of:
  - Normal wear and tear
  - Incorrect use, e.g. overloading of the appliance, use of non-approved accessories
  - Use of force, damage caused by external influences
  - Damage caused by non-observance of the user manual, e.g. connection to an unsuitable mains supply or non-compliance with the installation instructions
  - Partially or completely dismantled appliances

In accordance with our policy of continual product improvement, we reserve the right to make technical and optical changes without notice. The current version of this instruction manual can be found at [www.arovo.com/manuals](http://www.arovo.com/manuals).



**MasterChef**  
**THE TV SERIES**

**Arovo BV**

**Doblijn 26 – 1046 BN Amsterdam – The Netherlands**

[www.arovo.com](http://www.arovo.com)

**Made in CHN**

**Item no.: VRD919102039**

**Batch no.: 2021-7159**


© 2021 Shine Television, LLC. MASTERCHEF and the MASTERCHEF logo are trademarks of Shine TV LLC and its related entities and are used under license. All rights reserved.

## Documents / Resources



[MasterChef VRD919102039 Stick Blender Set](#) [pdf] User Manual  
VRD919102039 Stick Blender Set, VRD919102039, Stick Blender Set, Blender Set

## References

-  [Homepage - Arovo](#)
-  [MANUALS & CERTIFICATES - Arovo](#)

Manuals+.