



Home » Mastercool » Mastercool Commander R-R-R Machines Instruction Manual 12





Commander R-R-R Machines Instruction Manual

Contents [hide]

- 1 Commander R-R-R Machines
- 2 Documents / Resources
 - 2.1 References

Commander R-R-R Machines



- To drain the oil, twist off the screw pointed at the oil draining port. After the oil is drained re-tighten the screw.
- To fill the pump with oil, unscrew the lid pointed at the filling port. Fill the pump until

the oil level reaches the mark that is on the pump.

NOTE: The oil needed is deep vacuum pump oil (viscosity (cSt) @ 40°C is 46 +/-10%.)

• To reset the vacuum pump timer, follow the steps on the pictures below.



For further questions, please contact Mastercool (973-252-9119) and ask to speak with Tech Support.



www.mastercool.com

COMD-OIL-CHANGE-INST

Documents / Resources



Mastercool Commander R-R-R Machines [pdf] Instruction Manual

Commander R-R-R Machines, R-R-R Machines, Machines

References

 User 	Manual
--------------------------	--------

Commander R-R-R Machines, Machines, Mastercool, R-R-R

■ Mastercool Machines

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

e.g. whirlpool wrf535swhz

Search

Manuals+ | Upload | Deep Search | Privacy Policy | @manuals.plus | YouTube

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.