



masterplug LED Floodlights and LED PIR Floodlights Instruction Manual

[Home](#) » [masterplug](#) » masterplug LED Floodlights and LED PIR Floodlights Instruction Manual 

Contents

- [1 masterplug LED Floodlights and LED PIR Floodlights](#)
- [2 FEATURES](#)
- [3 INSTALLATION INSTRUCTION](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)



masterplug LED Floodlights and LED PIR Floodlights





NOTE – To comply with regulations, installation must be carried out by suitably qualified competent person and in accordance with the current IEE Wiring Regulations (BS7671) and Building Regulations. A copy of the instructions must be left for the user/Maintenance engineer for future reference. For Non-UK, Please refer/consult local requirements ENSURE ELECTRICAL SUPPLY IS DISCONNECTED/ ISOLATED BEFORE COMMENCING INSTALLATION

FEATURES



INSTALLATION INSTRUCTION

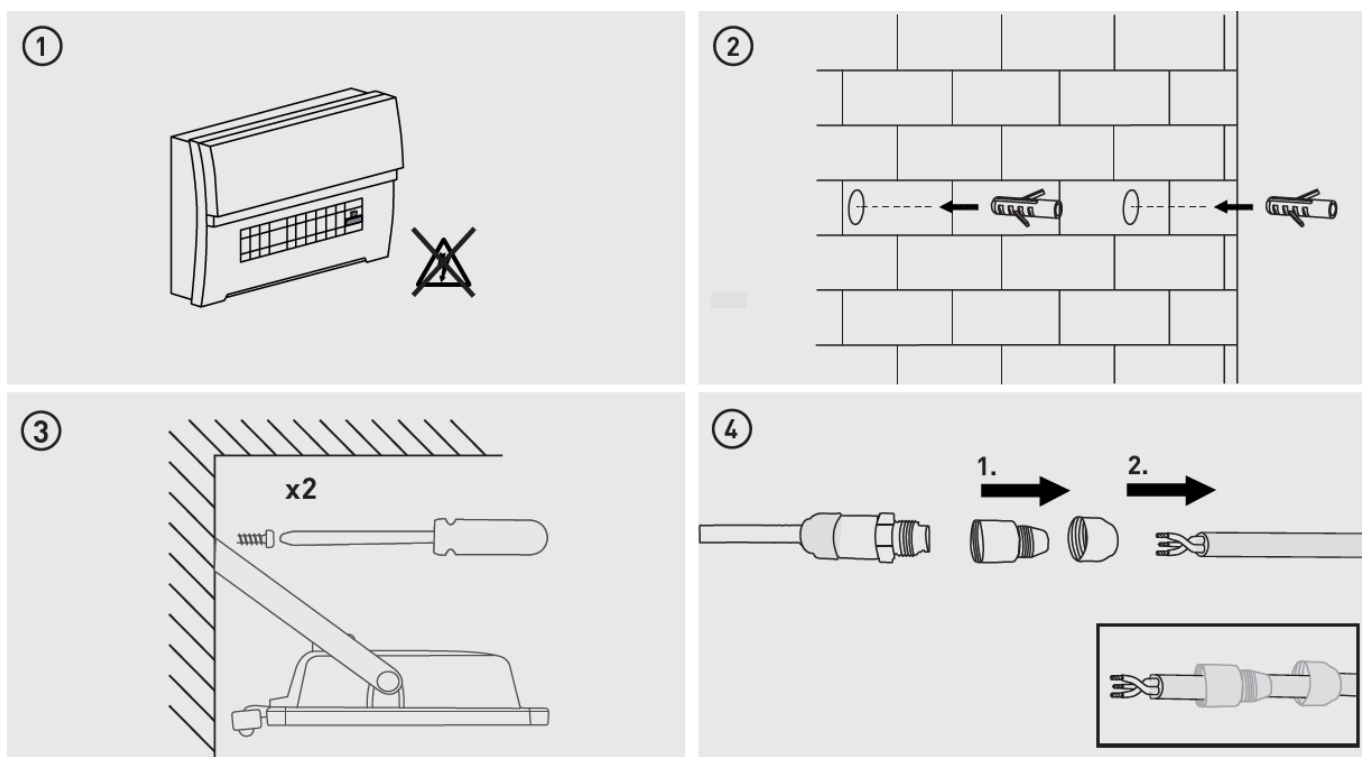


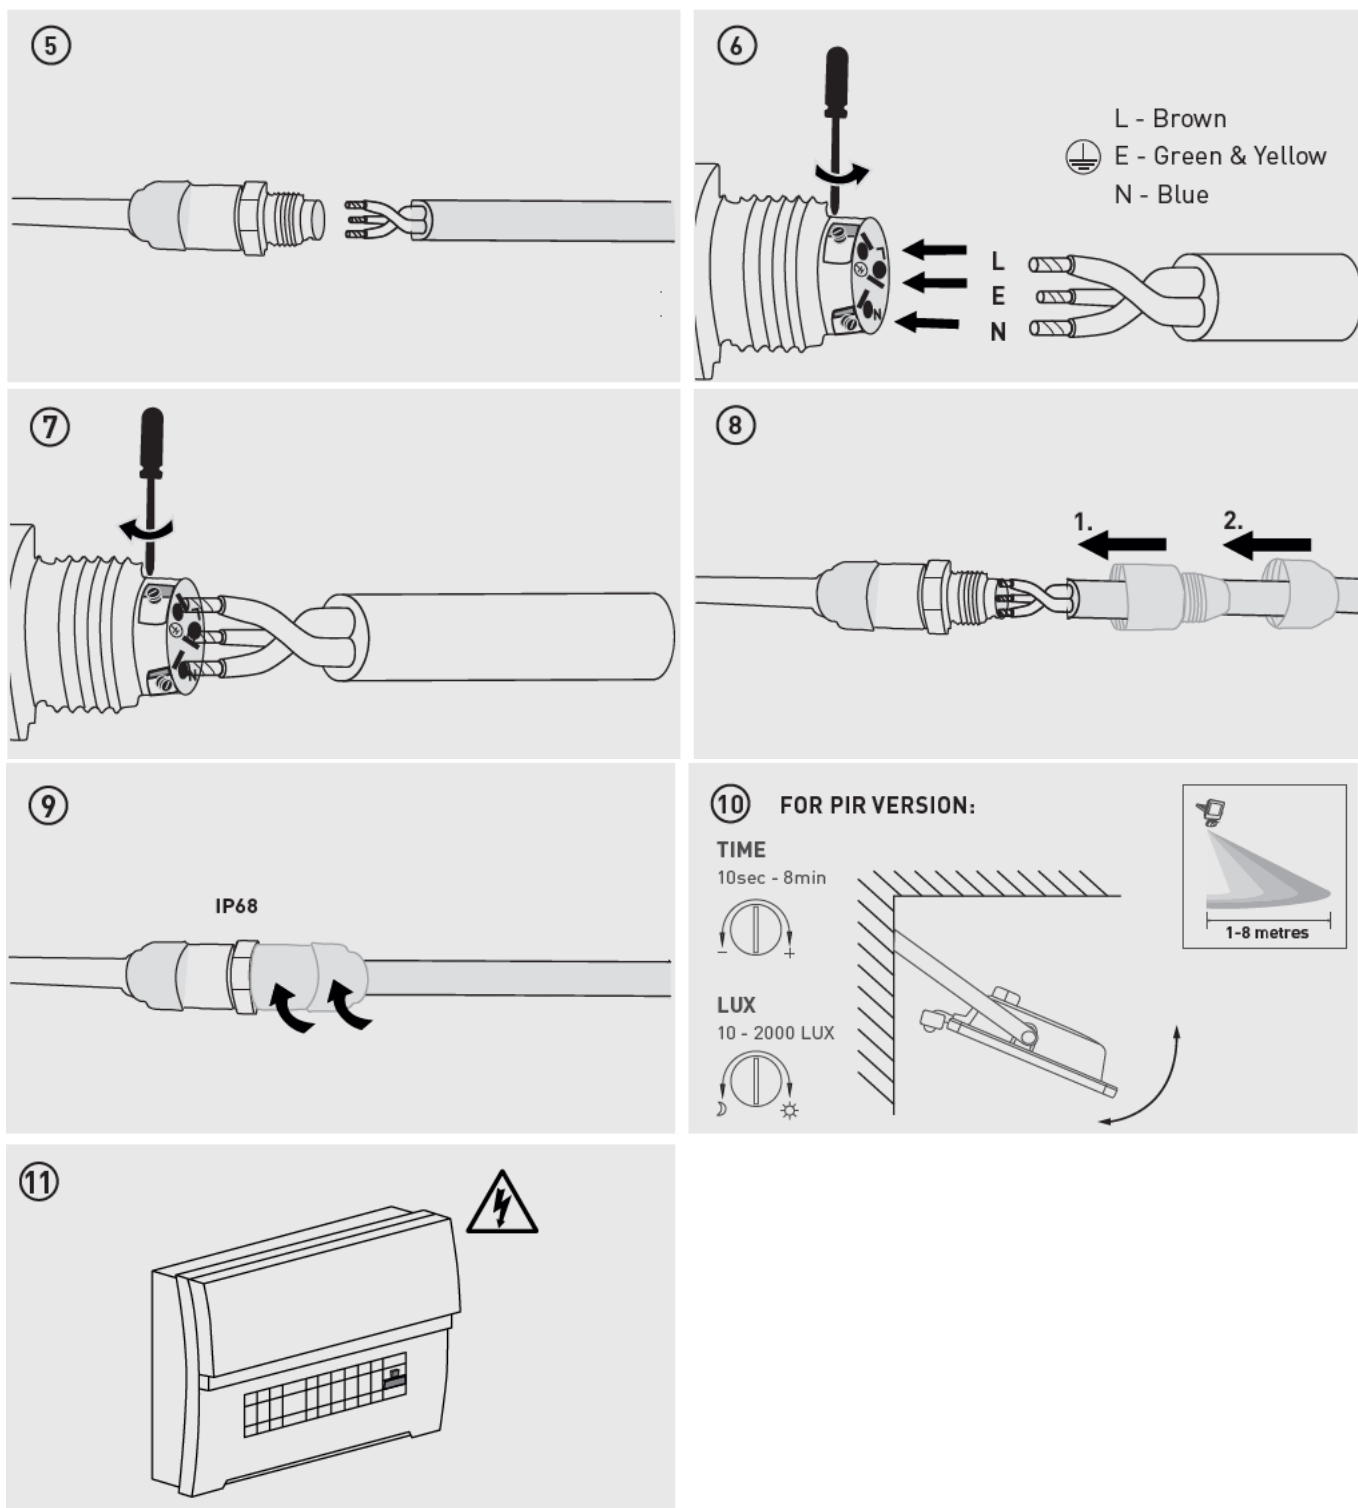

Tech Help Line UK – 0330 0249 279 Non UK – +49 40 89066 878 – 29 (EU) LUCECO SE C/Bobinadora 1-5 08302 Mataró Barcelona, Spain Luceco GmbH Holstenplatz 20b 22765 Hamburg, Deutschland

Visit our website at www.luceco.com

Documents / Resources

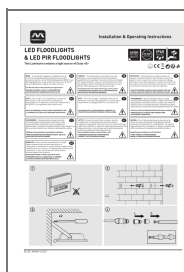

[masterplug LED Floodlights and LED PIR Floodlights](#) [pdf] Instruction Manual
LED Floodlights and LED PIR Floodlights, LED Floodlights, LED PIR Floodlights, PIR Floodlights, Floodlights, LED

References

-  [Luceco | LED Lighting](#)

Manuals+.