



MATRIX AUDIO Configuring UPnP Media Server Instructions

[Home](#) » [MATRIX AUDIO](#) » MATRIX AUDIO Configuring UPnP Media Server Instructions 

MATRIX AUDIO Configuring UPnP Media Server Instructions



Contents

- [1 Configuring UPnP Media Server](#)
- [2 Support](#)
- [3 Documents / Resources](#)
 - [3.1 References](#)
- [4 Related Posts](#)

 
Configuring UPnP Media Server

Configuring UPnP media server on Synology NAS


1. Open Synology DiskStation Manager, click on Package Center.



2. Search MinimServer in Package Center, install the package.

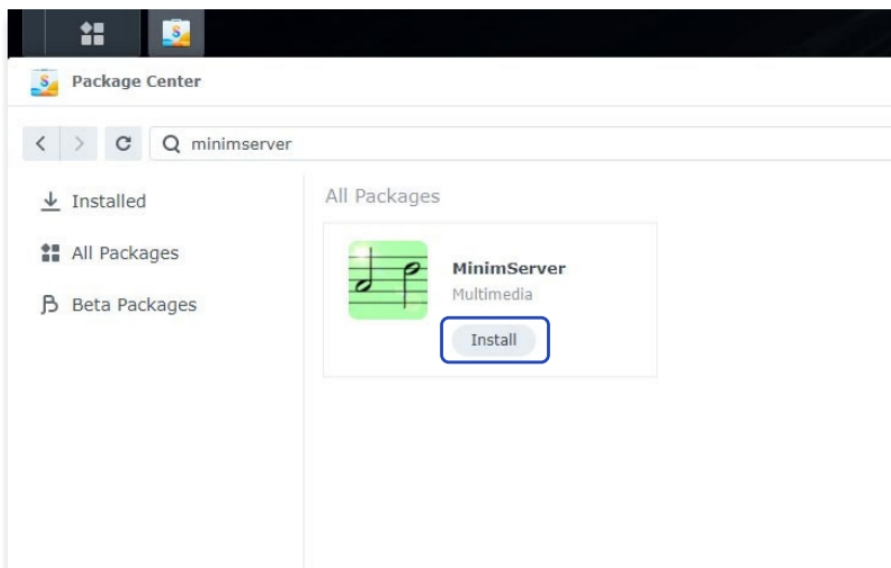

 3. Open MinimServer.

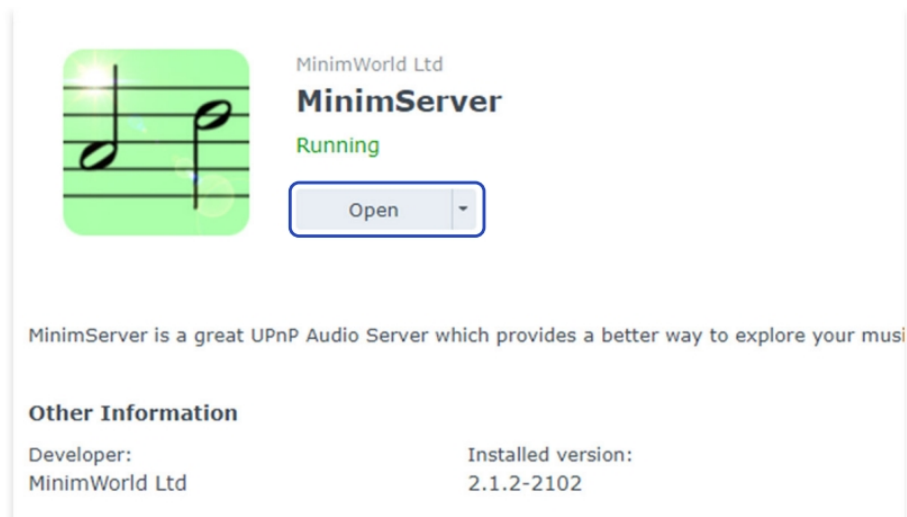

4. Confirm MinimServer License Terms, and continue.



MinimServer

MinimServer License Terms

MinimServer 2.1.2, Copyright (c) 2012-2022 Simon Nash. All rights reserved.

By downloading, installing or using this software, you accept all the terms in the [End User License Agreement for MinimServer 2](#) as well as the following license conditions:

1. You may not redistribute this software (with or without modification) and you may not sell or distribute any product containing this software (with or without modification).
2. You may not modify, decompile, disassemble or reverse engineer this software.
3. THIS SOFTWARE IS PROVIDED BY THE COPYRIGHT HOLDERS AND CONTRIBUTORS "AS IS" AND ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE ARE DISCLAIMED. IN NO EVENT SHALL THE COPYRIGHT HOLDERS OR CONTRIBUTORS BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO, PROCUREMENT OF SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE USE OF THIS SOFTWARE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE.


Please confirm your acceptance of these terms by selecting the "I accept" option below and clicking Confirm.

☒ I accept the MinimServer license terms

☐ I do not accept the MinimServer license terms

Confirm

Enter the directory of your music content, click Update.



MinimServer

Status License Profiles

MinimServer 2.1.2 update 218, Copyright (c) 2012-2022 Simon Nash. All rights reserved.

Your license type is Starter. For more information, select the License tab.

Media server status for MinimServer[matrix_ser3]: Stopped **Refresh status** **Rescan**

This page was last updated at 12:52:10 on 09 Nov 2022

You have no content directory (music folder) selected.

Enter the location of your content directory in the field below and click Update.
To find the correct location to enter, you can use File Station, as shown on [this page](#).

Content directory: **Update** **Reset**

For more information about using MinimServer, see the [Quick start](#) page.

MinimServer will be started after the directory is updated. Refresh the status of MinimServer, if it displays "Running", it means the service is ready.



MinimServer

Status License Profiles

MinimServer 2.1.2 update 218, Copyright (c) 2012-2022 Simon Nash. All rights reserved.

Your license type is Starter. For more information, select the License tab.

Media server status for MinimServer[matrix_ser3]: **Running** **Refresh status**

This page was last updated at 13:08:46 on 09 Nov 2022

Your last rescan was at 13:05:07 on 09 Nov 2022 **Rescan**

 
Your selected content directory is /volume1/

To change this, enter the location of your content directory in the field below and click Update.
To find the correct location to enter, you can use File Station, as shown on [this page](#).

Content directory: **Update** **Reset**

For more information about using MinimServer, see the [Quick start](#) page.

5. Make sure your Matrix streamer, NAS and mobile devices are in the same network, open MA Remote app, tap on the bar "Select media server", tap on the name of the UPnP media server which you configured at previous step, go back to the Library, then you can browse and play music from the UPnP media server.

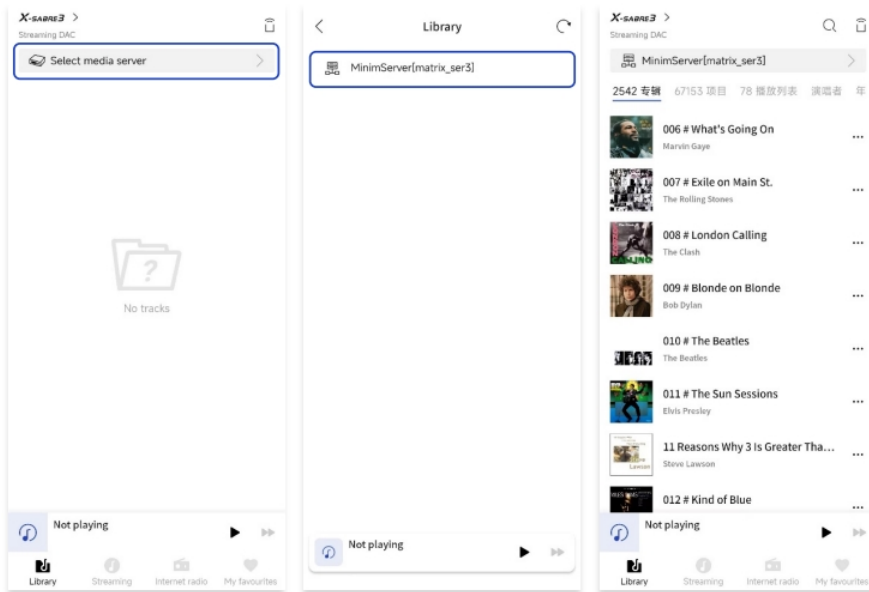

Configuring UPnP media server on Windows 11 PC

 
 
1. This service requires Java Runtime Environment (JRE), if your PC has not installed JRE, please download and install it from this link: <https://www.java.com/en/download/manual.jsp>.




2. Install MinimServer program for Windows from the link: <https://minimserver.com/downloads/>. Run MinimServer after installed.



3. The logo of MinimServer will appear on the Taskbar of Windows, choose “Configure” option in the right click menu.

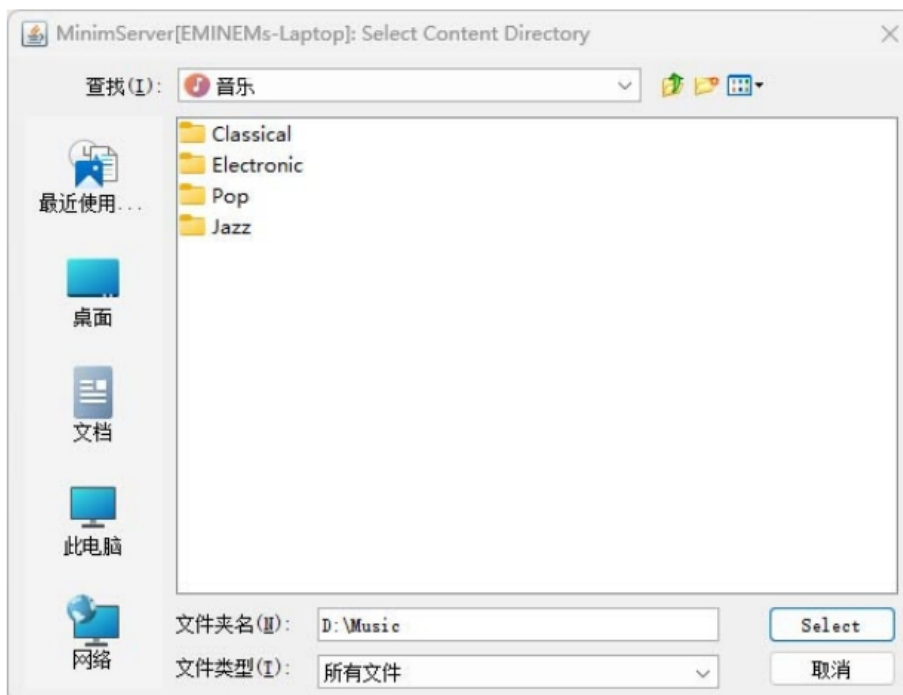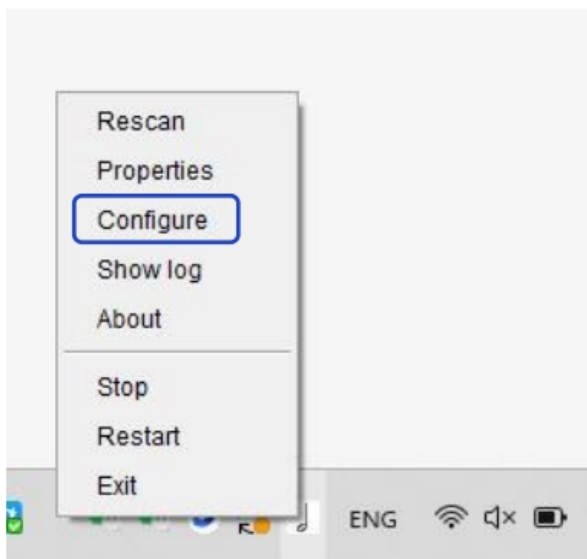

 4. After the directory of contents is selected, the MinimServer icon on Windows Taskbar will turn to green, it means the UPnP media server is running.

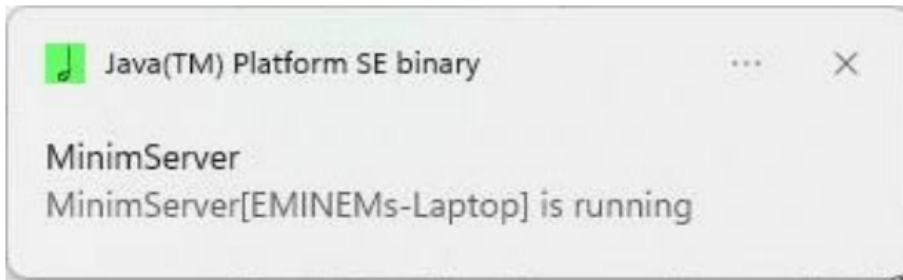


Then you can select the media server, browse and play music from MA Remote app. (Please refer to the 5th step in Chapter “Configuring UPnP media server on Synology NAS”)




Support

Matrix Electronic Technology Co.,
Ltd. B-801, #111 Fengcheng 5th Road Xi'an, Shaanxi, 710018 China
Tell: +86 029- 86211122
Web: www.matrix-digi.com

Documents / Resources

	<p>MATRIX AUDIO Configuring UPnP Media Server [pdf] Instructions Configuring UPnP Media Server, Configuring Server, UPnP Media Server, UPnP Server, Media Server, Server Configuring</p>
---	--

References

-  [Matrix Audio](#)
-  [MinimServer Downloads](#)
-  java.com/en/download/manual.jsp