

**MATRIX<sup>®</sup>**  
***BOOM!***  
Wireless Audio  
Player



# MATRIX BOOM Wireless Audio Player User Manual

[Home](#) » [MATRIX](#) » MATRIX BOOM Wireless Audio Player User Manual 

## Contents

- 1 [MATRIX BOOM Wireless Audio Player](#)
- 2 [Specifications](#)
- 3 [Function Introduction](#)
- 4 [In the box](#)
- 5 [Controls & Functions](#)
- 6 [TF card Function Introduction](#)
- 7 [USB Function Introduction](#)
- 8 [TWS Function](#)
- 9 [Charging Function Introduction](#)
- 10 [Frequently Asked Questions](#)
- 11 [Documents / Resources](#)
  - 11.1 [References](#)
- 12 [Related Posts](#)

**MATRIX<sup>®</sup>**  
***BOOM!***

**MATRIX BOOM Wireless Audio Player**



## Specifications

- DC 5V Output Port
- USB Port
- TF Card Slot
- AUX-IN
- Charging Port
- Wireless Button
- Previous Song/Volume Down Button
- Power/Mode Button
- TWS Button
- Next Song/Volume Up Button
- Play/Pause/Phone Answering/Hang Up/Call Rejection Button

## Function Introduction


- **Wireless audio:** Stereo sound with MAX 10m liner receiving range
- **Wireless communication:** Provide clear sound by using high fidelity wireless chip, no echo or tiny voice occurred
- **TF function:** Power-off memory and loop playback function
- **USB function:** Power-off memory and loop playback function
- **USB output:** DC 5V/1A
- **Aux-in:** Easy to connect with laptop, mobile phone and other device with a 3.5mm audio cable
- **TWS (true wireless) function:** Player A and Player B could play the same music source by wireless connecting

## In the box

- 1X Boom! Speaker
- 1X Charging Adapter
- 1X User Manual

## Controls & Functions

1. DC 5V Output Port
2. USB Port
3. TF Card Slot
4. AUX-IN
5. Charging Port
6. Wireless Button
7. Previous Song/Volume Down
8. Power/Mode button
9. TWS Button
10. Next Song/Volume Up
11. Play/Pause/Phone Answering/Hang Up/Call rejection

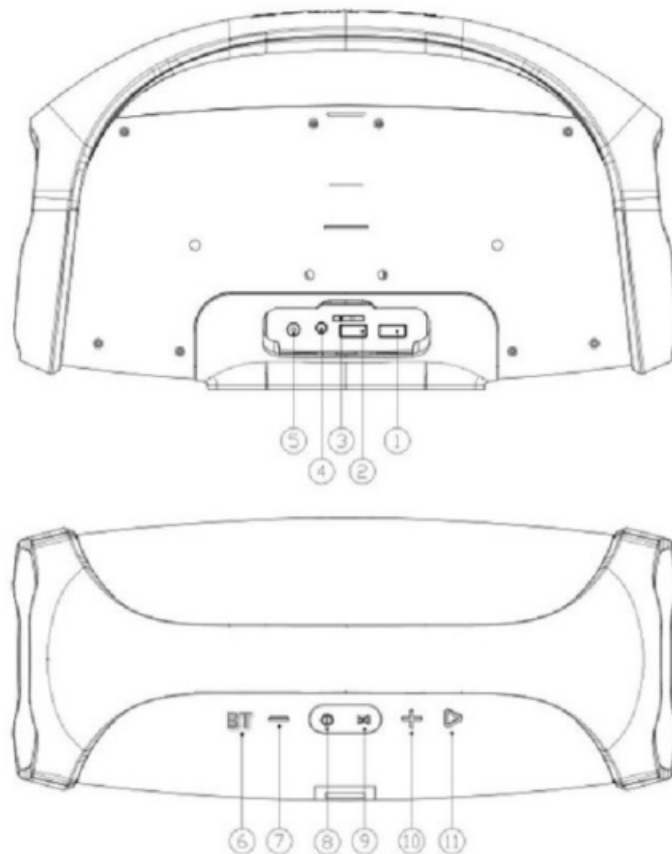

### • Power On & Power Off Operating Instruction

- **Power On:** Press the power button for 2 seconds until a blue indicator light is displayed, and then the speaker will be in pairing mode after the voice prompt.
- **Power Off:** Just press the power button for 2 seconds no matter which mode the speaker is staying in, it will be powered off after the voice prompt.
- **Automatically Shut Down at Low Voltage:** Please charge the speaker as soon as possible if the product working abnormally or power off at low voltage.
- **Wireless Function Introduction:** The blue indicator light blinks when the speaker powers on, Use the wireless pairing name “BOOM!” on your cell phone then click “BOOM!” and the wireless device will automatically match successfully after a few seconds, the password is “0000” if necessary. You could play music once successfully

paired.

- **BT Shortcuts / Disconnect Button** It will jump into wireless mode after the short press of the wireless button. Disconnect and search for another wireless device after 2 seconds of pressing.
- **Buttons Function Under Wireless Mode:** Short press the “-” button for the previous song long press the “-” button for volume down. Short press the “+” button for the next song and long press the “+” button for the volume up. Short press the “play button” for the pause or play function.
- **Short press the “play button” to answer the call or hang up, and long press to reject a call;** you can control the volume with your fingers pressed on the volume button.
- **Wireless Communication Function:** you can answer the phone by pressing the corresponding buttons when there is a call coming; the best calling effect is within 1m from the speaker, and you can adjust the volume according to your requirements.

## TF card Function Introduction

- **TF Card Playing Function:** Switching to TF card playing mode by pressing the mode button or put the TF card into the card slot directly, as the speaker with power-off memory and loop playback function.
- **Buttons Function Under TF Card Mode:** short press “-” button for previous song long press “-” button for volume down. Short press “+” button for next song long press “+” button for volume up. Short press “play button” for pause or play function.

## USB Function Introduction

- **USB Function:** Switching to USB mode by pressing the mode button or put the USB disk into the USB port directly, as the speaker with power-off memory and loop playback function.
- **Buttons Function Under USB Mode:** short press “-” button for previous song long press “-” button for volume down. Short press “+” button for next song long press “+” button for volume up. Short press “play button” for pause or play function.

## AUX-IN Function Introduction

- **AUX-IN Mode Function Introduction:** Switching to AUX-IN mode by connecting with an audio cable; if you have already put the audio cable in the speaker before powering on, just press the MODE button to select AUX-IN mode.
- **Buttons Function Under AUX-IN Mode:** Short press the “play button” for the pause or play function. Long press the “-” button for volume down and long press the “+” button for volume up.

## TWS Function

- Audio player A has already connected to a mobile phone, turn on audio player B, long press the TWS button of audio player A for 3-5 seconds, and the white indicator light blinks. The white indicator lights keep bright when the audio player B is connected successfully with audio player A, then audio player B will play the same music with audio player A.
- Audio player A is playing music with TF card or AUX input music turn on audio player B, long press the TWS button of audio player A for 3-5 seconds, and the white indicator light blinks. The white indicator lights keep long

bright when audio player B connected successfully with audio player A, then audio player B will play the same music with audio player A.

- Disconnect by long pressing the TWS button for 3 seconds on either audio player.
- You could control the volume, song selection, pause, play, and power off by pressing the buttons of either audio player during playing.

**Attention:** Please make sure that the 2 speakers are both NOT connecting with any mobile device before doing TWS operation.

## FM Function Introduction

- **FM mode:** Switching to FM mode by pressing the mode button.
- **Buttons function under FM mode:** Short press the “play button” for a pause or play function press the “play button” for 2 seconds, then the speaker channel automatically searches and memorizes. Long press the “-” button for volume down and long press the “+” button for volume up. Short press the “-” button or “+” button for channel selection.

## Charging Function Introduction


The speakers will not normally work when the battery is low, please charge it in time contact the charging adapter and the indicator light lights up, indicator lights keep and long bright when fully charged.

## Indicator Lights Under Different Modes

## Frequently Asked Questions

- **Q: How do I know if the speaker is in pairing mode?**
  - A: When you power on the speaker, a blue indicator light will blink, indicating that it is in pairing mode.
- **Q: What should I do if the speaker powers off at low voltage?**
  - A: Please charge the speaker as soon as possible if it powers off at low voltage to avoid any abnormal operation.

## Documents / Resources

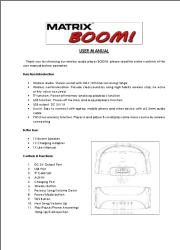	<p><a href="#">MATRIX BOOM Wireless Audio Player [pdf] User Manual</a> BOOM Wireless Audio Player, Wireless Audio Player, Audio Player, Player</p>
---	--

## References

- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.