

## MATRIX

MATRIX PHOENIXRF-02  
Console for Exercise  
Machine



# MATRIX PHOENIXRF-02 Console for Exercise Machine Owner's Manual

[Home](#) » [MATRIX](#) » MATRIX PHOENIXRF-02 Console for Exercise Machine Owner's Manual 

### Contents

 
- 1 [MATRIX PHOENIXRF-02 Console for Exercise Machine](#)
- 2 [CONSOLE OPERATION](#)
- 3 [TARGET TRAINING WORKOUT](#)
- 4 [BEFORE YOU BEGIN](#)
- 5 [MAINTENANCE](#)
- 6 [MAINTENANCE SCHEDULE](#)
- 7 [PRODUCT INFORMATION](#)
- 8 [FCC RF Radiation Exposure Statement](#)
- 9 [Documents / Resources](#)
  - 9.1 [References](#)
- 10 [Related Posts](#)

## MATRIX

**MATRIX PHOENIXRF-02 Console for Exercise Machine**



## CONSOLE OPERATION

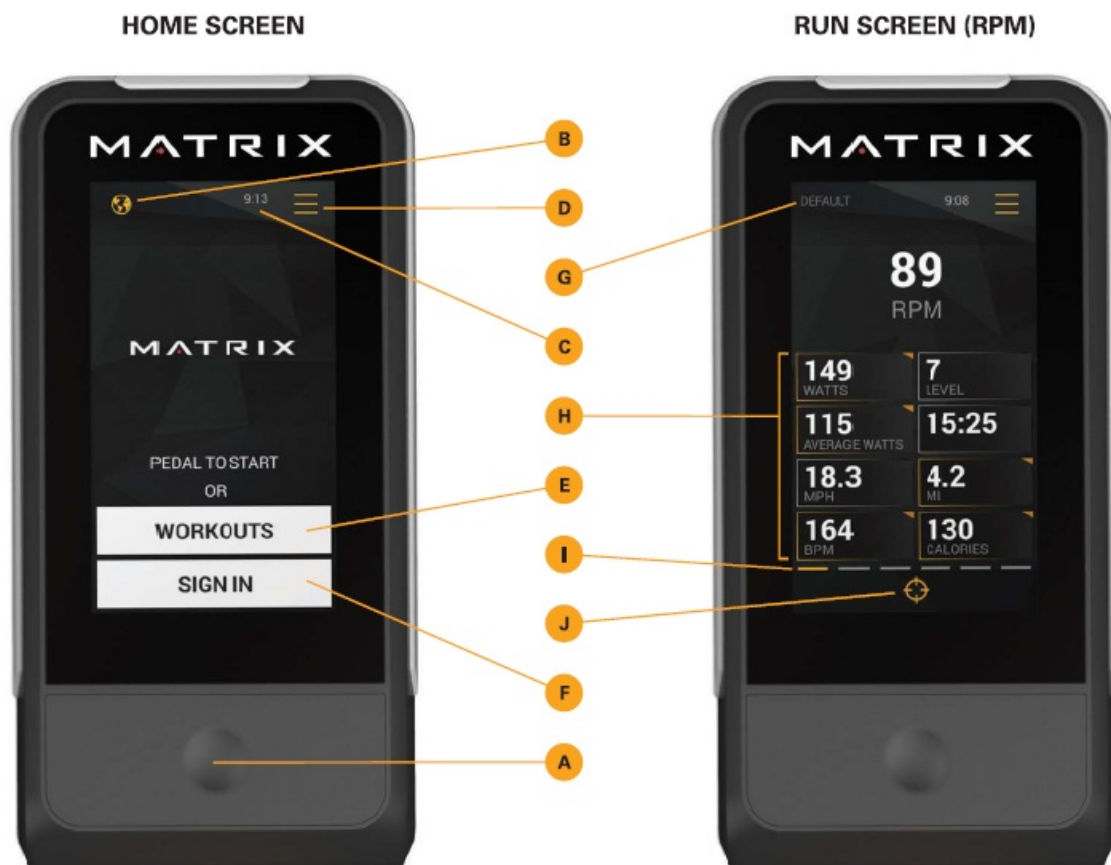

The CXP has a fully integrated touch screen display. All information required for workouts is explained on screen. Exploration of the interface is highly encouraged.

- A) POWER BUTTON: Press to wake display/power on. Press and hold for 3 seconds to put display to sleep. Press and hold for 10 seconds to power off.
- B) LANGUAGE SELECTION
- C) CLOCK
- D) MENU: Touch to access various functions before or during your workout.
- E) WORKOUTS: Touch to access a variety of target training options or preset workouts.
- F) SIGN IN: Touch to sign in using your XID (WiFi is an optional add-on feature).
- G) CURRENT SCREEN: Displays what screen you are currently viewing.
- H) FEEDBACK WINDOWS: Displays Time, RPM, Watts, Average Watts, Speed, Heart Rate (8PM), Level, Pace, Distance or Calories. Feedback varies based on current screen.

KOA CHANGE SCREEN: Swipe display left or right to cycle between different run screen options. Or select a metric with an orange triangle to go straight to a desired screen.

JA TARGET TRAINING SCREEN: Press to return to target training screen when a target training options has been set. Press the target icon to set a specific training goal and activate the LED color wrap.


PERSONAL INFO: Enter weight, age and gender to ensure caloric data and the power-to-weight ratio is more accurate.

BATTERY: Battery level is shown at the bottom of the MENU screen. Pedaling can wake/power on the console. Pedaling at a rate above 45 RPM will charge the battery.

## HOME SCREEN

 - Pedal to START immediately. Or ...
- Touch the WORKOUTS button to customize your workout.
- Touch the SIGN IN button to sign in using your XID.

## SIGN IN

1. Enter your XID and touch ✓.
2. Enter your PASSCODE and touch ✓.
3.  Consoles equipped with RFID will support logging in with RFID tag. To log in, touch your RFID tag to the right side surface of the console.

## REGISTER A NEW USER

1. Don't have an xID account? Registration is easy.
2. Follow the on-screen prompts to create your free account.
3. Review your information and select the I ACCEPT THE TERMS AND CONDITIONS box to review the Terms and Conditions.
4. Touch ✓ to complete registration. Your account is now active and you are signed-in.

## WORKOUT SETUP

1. After touching the WORKOUTS button, select one of the WORKOUTS from the list.
2. Use the SLIDER CONTROLS to adjust your program settings.

3. Press GO to begin your workout.

## CHANGE WORKOUT

During a workout, touch  and then touch CHOOSE EXERCISE to access available workouts.

## SUMMARY SCREENS

After your workout is complete, a workout summary will appear. You can swipe up and down to scroll through the summary. Also, swipe the display left and right to switch between the summary screens.

## COOL DOWN

Touch START COOL DOWN to enter cool down mode. Cool down lasts for a few minutes while reducing the workout intensity, allowing your body to recover from your workout. End cool down to go to workout summary.

## TARGET TRAINING WORKOUT

1. Start pedaling until the default screen appears.
2. Either swipe right or tap the metric box with an orange triangle to take you directly to the desired screen.
3. Once on your desired screen, tap the large metric or the target icon to set your training goal and then touch v.  
The LED lights now become associated to that target.

## LED LIGHTS

Target training programming uses bright color lights on the top and sides of the console to gauge effort and keep everyone on track of their goals. These lights may be turned on or off in the workout setup by pressing LIGHTS ON or LIGHTS OFF. The color indicators are: BLUE= below target, GREEN= on target, RED= above target.

## MANAGER MODE

To enter manager mode, press and hold the MATRIX logo in the center of the screen for 10 seconds. Then enter 1001 and touch ✓.


## POWER ACCURACY

This bike displays power on the console. The power accuracy of this model has been tested using the test method of ISO 20957-10:2017 to ensure a power accuracy within a tolerance of  $\pm 10\%$  for input power  $\geq 50$  W, and within a tolerance of  $\pm 5$  W for input power  $< 50$  W. The power accuracy was verified using the following conditions:  
Nominal Power Rotations per minute measured at crank

- 50W 50 RPM
- 100W 50 RPM
- 150W 60 RPM
- 200W 60 RPM
- 300W 70 RPM
- 400W 70 RPM

In addition to the above testing conditions, the manufacturer tested the power accuracy at one additional point, using a crank rotation speed of approximately 80 RPM (or higher) and comparing the displayed power to the input (measured) power.

## WIRELESS HEART RATE

To connect your ANT+ or Bluetooth SMART heart rate device to the console, touch  HEART RATE DEVICE PAIRING.

The heart rate function on this product is not a medical device. The heart rate reading is intended only as an exercise aid in determining heart rate trends in general. Please consult your physician. When used in conjunction with a wireless chest strap or arm band, your heart rate can be transmitted wirelessly to the unit and displayed on the console.

### **WARNING!**

Heart rate monitoring systems may be inaccurate. Over exercising may result in serious injury or death. If you feel faint, stop exercising immediately.

\* Supported standards with carrier frequency of 13.56 MHz include; ISO 14443 A, ISO 15693, ISO 14443 B, Sony Felica, Inside Contact-less (HID iClass), and LEGIC RF.

 
## **BEFORE YOU BEGIN**

### **LOCATION OF THE UNIT**

Place the equipment on a level and stable surface away from direct sunlight. The intense UV light can cause discoloration on the plastics. Locate your equipment in an area with cool temperatures and low humidity. Please leave a clear zone on all sides of the equipment that is at least 60 cm (23.6"). This zone must be clear of any obstruction and provide the user a clear exit path from the machine. Do not place the equipment in any area that will block any vent or air openings. The equipment should not be located in a garage, covered patio, near water or outdoors.


### **WARNING**

Our equipment is heavy, use care and additional help if necessary when moving. Failure to follow these instructions could result in injury.

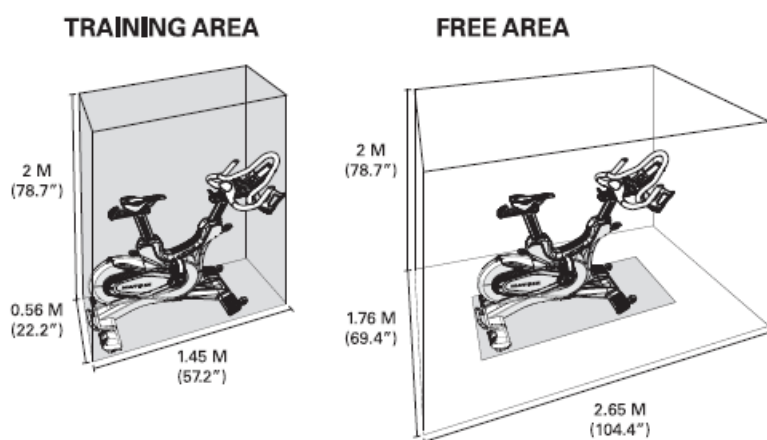


### **LEVELING THE EQUIPMENT**

 It is extremely important that the levelers are correctly adjusted for proper operation. Turn leveling foot clockwise to lower and counter-clockwise to raise unit. Adjust each side as needed until the equipment is level. An unbalanced unit may cause belt misalignment or other issues. Use of a level is recommended.

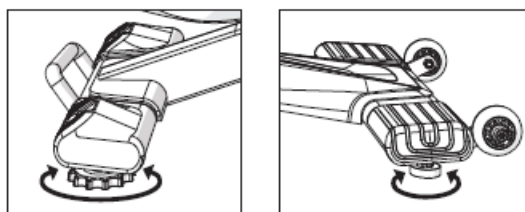

## **PROPER USAGE**

 1. Sit on the cycle facing the handlebars. Both feet should be on the floor one on each side of the frame.
2. To determine proper seat position, sit on the seat and position both feet on the pedals. Your knee should bend slightly at the furthest pedal position. You should be able to pedal without locking your knees or shifting your weight from side to side.
3. Adjust pedal straps to desired tightness.
4. To get off of the cycle, follow the proper usage steps in reverse.

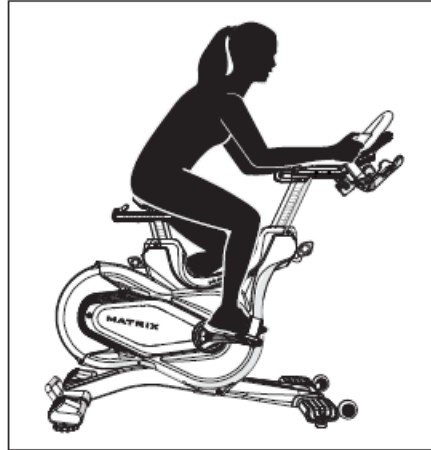

## **HOW TO ADJUST THE INDOOR CYCLE**

The indoor cycle can be adjusted for maximum comfort and exercise effectiveness. The instructions below describe one approach to adjusting the indoor cycle to ensure optimal user comfort and ideal body positioning; you may choose to adjust the indoor cycle differently.

### **SADDLE ADJUSTMENT**

Proper saddle height helps ensure maximum exercise efficiency and comfort, while reducing the risk of injury. Adjust the saddle height to make sure it's in proper position, one that keeps a slight bend in your knee while your legs are in the extended position

### **HANDLEBAR ADJUSTMENT**

Proper position for the handlebar is based primarily on comfort. Typically, the handlebar should be positioned slightly higher than the saddle for beginning cyclists. Advanced cyclists could try different heights to get the arrangement most suitable for them.

- **A) SADDLE HORIZONTAL POSITION**

Pull the adjustment lever down to slide the saddle forward or backward as desired. Push the lever up to lock saddle position. Test the saddle slide for proper operation.

- **B) SADDLE HEIGHT**

Lift the adjustment lever up while sliding the saddle up and down with the other hand. Push the lever down to lock saddle position.

- **C) HANDLEBAR HORIZONTAL POSITION**

Pull the adjustment lever towards the rear of the cycle to slide the handlebars forward or backward as desired. Push the lever forward to lock handlebar position.

 
- **D) HANDLEBAR HEIGHT**

Pull the adjustment lever up while raising or lowering the handlebar with the other hand. Push the lever down to lock handlebar position.

- **E) PEDAL STRAPS**

Place the ball of the foot into the toe cage until the ball of the foot is centered over the pedal, reach down and

pull the pedal strap up to tighten prior to use. To remove your foot from the toe cage, loosen the strap and pull out.

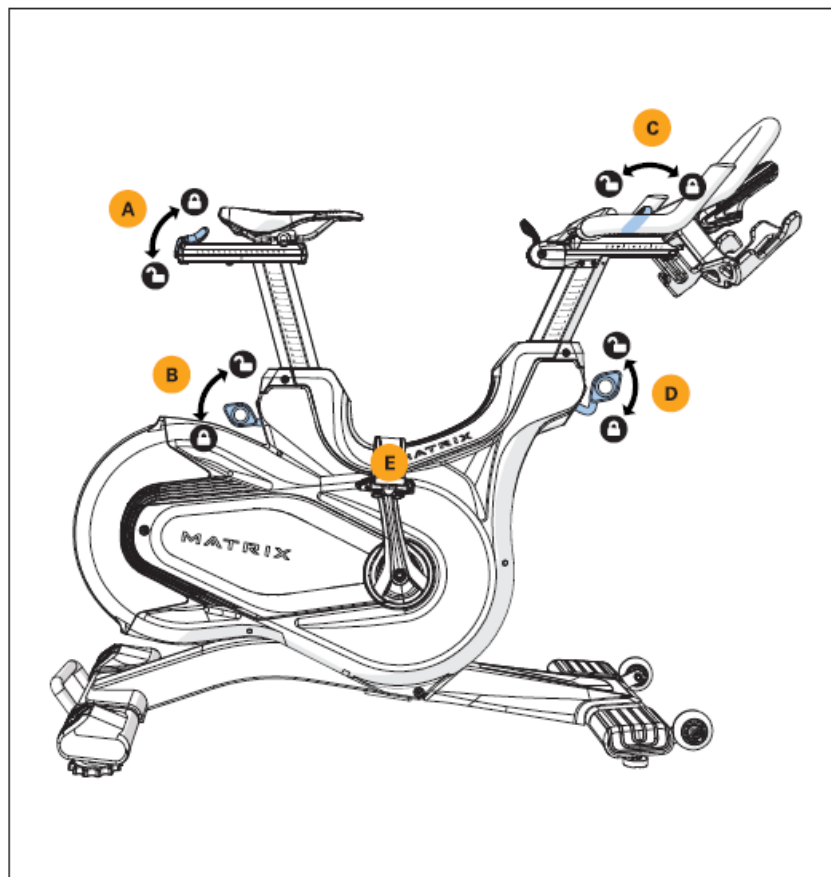

### RESISTANCE CONTROL / EMERGENCY BRAKE

The preferred level of difficulty in pedaling (resistance) can be regulated in fine increments by use of the tension control lever. To increase the resistance, push the tension control lever towards the ground. To decrease the resistance, pull up the lever upwards.

 
### IMPORTANT

- To stop the flywheel while pedaling, push down hard on the lever.
- The flywheel should quickly come to a complete stop.
- Make sure your shoes are fixed into the toe clip.
- Apply full resistance load when the bike is not in use to prevent injuries due to moving drive gear components.

### WARNING

The indoor cycle does not have a free moving flywheel; the pedals will continue to move together with the flywheel until the flywheel stops. Reducing speed in a controlled manner is required. To stop the flywheel immediately, push down the red emergency brake lever. Always pedal in a controlled manner and adjust your desired cadence according to your own abilities. Push the red lever down = emergency stop.


The indoor cycle uses a fixed flywheel that builds momentum and will keep the pedals turning even after the user stops pedaling or if the user's feet slip off. **DO NOT ATTEMPT TO REMOVE YOUR FEET FROM THE PEDALS OR DISMOUNT THE MACHINE UNTIL BOTH THE PEDALS AND THE FLYWHEEL HAVE COMPLETELY STOPPED.** Failure to follow these instructions may lead to loss of control and the potential for serious injury.

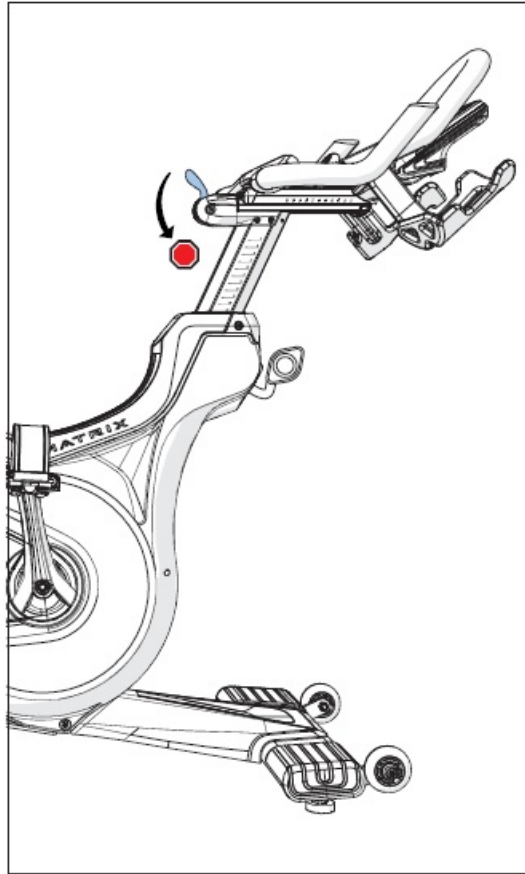


## MAINTENANCE

 1. Any and all part removal or replacement must be performed by a qualified service technician.
2. DO NOT use any equipment that is damaged and or has worn or broken parts. Use only replacement parts supplied by your country's local MATRIX dealer.
3. MAINTAIN LABELS AND NAMEPLATES: Do not remove labels for any reason. They contain important information. If unreadable or missing, contact your MATRIX dealer for a replacement.
4. MAINTAIN ALL EQUIPMENT: Preventative maintenance is the key to smooth operating equipment as well as keeping your liability to a minimum. Equipment needs to be inspected at regular intervals.
5. Ensure that any person(s) making adjustments or performing maintenance or repair of any kind is qualified to do so. MATRIX dealers will provide service and maintenance training at our corporate facility upon request.



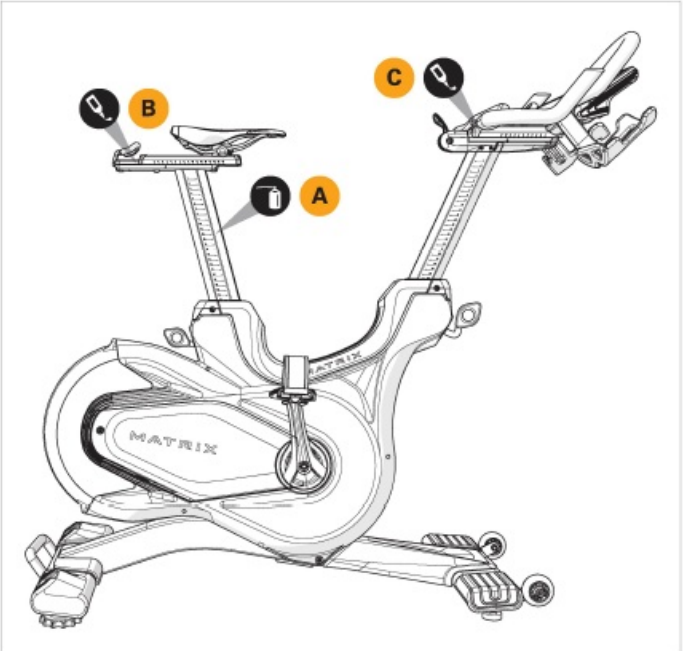

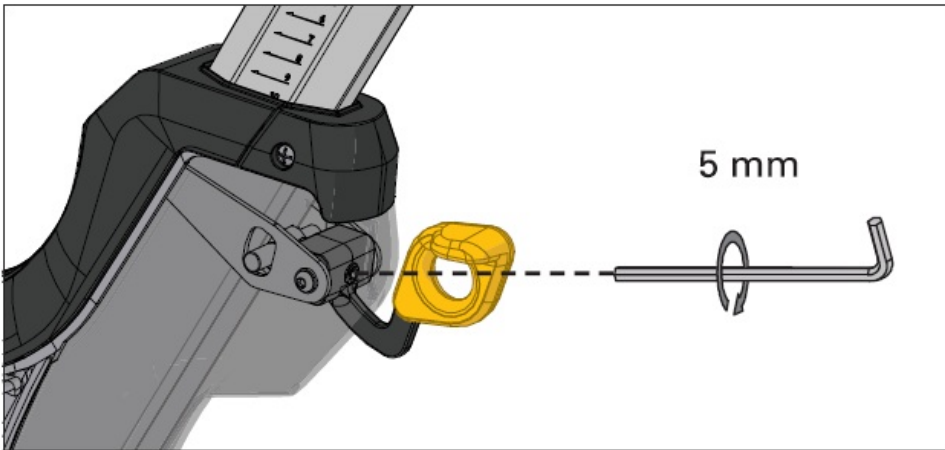MAINTENANCE SCHEDULE	
ACTION	FREQUENCY
Clean the indoor cycle using soft cloths or paper towels or other Matrix approved solution (cleaning agents should be alcohol and ammonia free). Disinfect the saddle and handlebars and wipe off all bodily residues.	AFTER EACH USE
Make sure that the indoor cycle is level and does not rock.	DAILY
Clean entire machine using water and a mild soap or other Matrix approved solution (cleaning agents should be alcohol and ammonia free).  Clean all exterior parts, the steel frame, front and rear stabilizers, seat and handle bars.	WEEKLY
Test the emergency brake to make sure it is functioning properly. To do this, press down the red emergency brake lever while pedaling. When functioning properly, it should immediately slow down the flywheel until it comes to a complete stop.	BI-WEEKLY
Lubricate the saddle post (A). To do this, raise the saddle post to the MAX position, spray with maintenance spray and rub down the entire exterior surfaces with a soft cloth. Clean the saddle slide (B) with a soft cloth and if necessary apply a small amount of lithium/silicone grease.	BI-WEEKLY
Clean the handlebar slide (C) with a soft cloth and if necessary apply a small amount of lithium/silicone grease.	BI-WEEKLY
Inspect all assembly bolts and pedals on the machine for proper tightness.	MONTHLY
	MONTHLY

## PRODUCT INFORMATION

\* Ensure a minimum clearance width of 0.6 meters (24") for access to and passage around MATRIX equipment. Please note, 0.91 meters (36") is the ADA recommended clearance width for individuals in wheelchairs.

	cxp Indoor cycle
Max User Weight	159 kg/ 350 lbs
User Height Range	147 – 200.7 cm/ 4'11" – 6'7"
Max Saddle and Handlebar Height	130.3 cm / 51.3"
Max Length	145.2 cm / 57.2"
Product Weight	57.6 kg/ 127 lbs
Shipping Weight	63.5 kg/ 140 lbs
Required Footprint (L x W)*	125.4 x 56.3 cm / 49.4 x 22.2"
Dimensions (max saddle & handlebar height)	145.2 x 56.4 x 130.2 cm / 57.2 X 22.2 X 51.3"
Overall Dimensions (L xW x H)*	125.4 x 56.4 x 102.8 cm / 49.4 X 22.2 X 40.5"

For most current owner's manual and information, check [matrixfitness.com](https://matrixfitness.com)

#### NOTE

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

 
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

#### FCC RF Radiation Exposure Statement

1. This Transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.
2. This equipment complies with FCC RF radiation exposure limits set forth for an uncontrolled environment.

This equipment should be installed and operated with a minimum distance of 20 centimeters between the radiator and your body

#### Documents / Resources



[MATRIX PHOENIXRF-02 Console for Exercise Machine](#) [pdf] Owner's Manual  
PHOENIXRF-02, PHOENIXRF-02 Console for Exercise Machine, Console for Exercise Machin  
e, Exercise Machine, Machine

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.