



**ARD-3-32-R
Three Phase
Connection
Unit**



matt E ARD-3-32-R Three Phase Connection Unit Owner's Manual

[Home](#) » [matt e](#) » [matt E ARD-3-32-R Three Phase Connection Unit Owner's Manual](#) 

Contents

- [1 matt E ARD-3-32-R Three-Phase Connection Unit](#)
- [2 Product Usage Instructions](#)
- [3 Product Information](#)
- [4 Product Features and Benefits](#)
- [5 Specifications](#)
- [6 Contact](#)
- [7 FAQ](#)
- [8 Documents / Resources](#)
 - [8.1 References](#)
- [9 Related Posts](#)



matt E ARD-3-32-R Three-Phase Connection Unit



Product Usage Instructions

Installation

1. Ensure power is switched off before installation.
2. Mount the ARD connection unit securely in a suitable location.
3. Connect the input voltage and load cables to the designated terminals.

Operation

1. Power on the unit and ensure all connections are secure.
2. In case of a fault, the auto-reset device will automatically restore power once the fault is cleared.

Maintenance

1. Regularly inspect the unit for any signs of damage or wear.
2. Clean the unit with a dry cloth to maintain its performance.

Three-phase connection unit with auto reset isolator complete with 3 x 32A 30mA DP Type A RCBOs

Product Information

The matt:e ARD connection centers provide a simple-to-install dedicated EV connection centre, with built in O-PEN® technology, that allows for the connection of EV charge points to the PME earthing facility without the use of earth electrodes. Helping to facilitate compliance with BS:7671. 2018 Amendment 1, 2020 Regulation 722.411.4.1.(iii). The matt:e ARD connection centers incorporate the unique 5 pole auto reset device that automatically restores power to the load once the fault has cleared.

Product Features and Benefits

- Built-in O-PEN® technology
- NO EARTH ELECTRODES REQUIRED
- Helps reduce disruptive and costly groundwork
- Removes the risk of striking buried services
- Simple wire in wire out the connection
- Phase loss protection
- 3 x 32A 30mA DP Type A RCBOs
- Mild steel IP4X enclosure
- Standard 1 Year parts warranty.



Specifications

Specifications	
Input Volts	400V 50Hz
Max Load	32amps
Cable Entry Facility	Top and bottom
Terminal Capacity	25mm ²
Dimensions (H x W x D)	380mm x 300mm x 120mm
Weight	Approximately 7kG
Enclosure	Mild Steel Powder Coated
Ingress Protection	IP4X
Warranty	1 Year


Contact

- T: 01543 227290
- E: info@matt-e.co.uk
- W: www.matt-e.co.uk
- Matt:e Ltd, Unit 5 Common Barn Farm Tamworth Road Lichfield WS14 9PX

FAQ

- **Q: How does the auto-reset feature work?**
 - A: The auto reset device restores power to the load automatically once a fault has been cleared, minimizing downtime.
- **Q: What is the warranty period for the product?**
 - A: The product comes with a warranty of 1 year from the date of purchase, ensuring peace of mind for users.

Documents / Resources

	<p>matt E ARD-3-32-R Three Phase Connection Unit [pdf] Owner's Manual ARD-3-32-R, ARD-3-32-R Three Phase Connection Unit, ARD-3-32-R, Three Phase Connection Unit, Connection Unit, Unit</p>
---	---

References

- matt-e.co.uk
- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.