

Mattel Minecraft Exploding RC Creeper Instruction Manual

 
[Home](#) » [Mattel](#) » Mattel Minecraft Exploding RC Creeper Instruction Manual 



Contents

- [1 Minecraft Exploding RC Creeper](#)
- [2 CONTENTS](#)
- [3 FEATURES](#)
- [4 SET UP](#)
- [5 TO PLAY](#)
- [6 Documents / Resources](#)
 - [6.1 References](#)

Minecraft Exploding RC Creeper

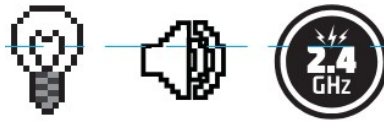

Adult supervision is recommended when the RC figure is being operated.

Please keep these instructions for future reference as they contain important information.

IMPORTANT: Please read all instructions before operating your RC figure.



© 2023 Mojang AB. All Rights Reserved. Minecraft, the Minecraft logo, the Mojang Studios logo and the Creeper logo are trademarks of the Microsoft group of companies.



©2023 Mattel. ® and ™ designate U.S. trademarks of Mattel, except as noted. ® et ™ désignent des marques de Mattel aux États-Unis, sauf indication contraire. Mattel Europa B.V., Gondel 1, 1186 MJ Amstelveen, Nederland. Mattel U.K. Limited, The Porter Building, 1 Brunel Way, Slough SL1 1FQ, UK. Mattel France, Parc de la Cerisaie, 1/3/5 allée des Fleurs, 94260 Fresnes Cedex. N° Cristal 0969 36 99 99 (Numéro non surtaxé) ou www.lesjouetsmattel.fr Mattel Belgium N.V. De Kleetlaan 4, 1831 Machelen (Diegem) Belgium. Deutschland : Mattel GmbH, Solmsstraße 83, D-60486 Frankfurt am Main. Schweiz: Mattel AG, Kirchstrasse 24, CH-3097 Liebefeld. Österreich: Mattel Ges.m.b.H., Campus 21, Liebermannstraße A01 404, A- 2345 Brunn/Gebirge. Mattel Italy Srl, Via Turati 4, 20121 Milano, Italy. Servizio assistenza clienti: Customersrv.italia@mattel.com – Numero verde 800 11 37 11. Mattel España, S. A, Aribau 200 pl. 9, 08036 Barcelona. cservice.spain@mattel.com

Tel.: +34 933 06 79 00 <http://www.service.mattel.com/es>. Mattel Australia Pty. Ltd., 658 Church St., Richmond, Victoria, 3121. Consumer Advisory Service – 1300 135 312.

 
 
Dystrybutor: Mattel Poland Sp. z o.o., Budynek Skyliner 31 p., ul. Prosta 67, 00-838 Warszawa, Polska.

Chinese mainland: Mattel Barbie (Shanghai). Trading Co., Ltd. Room 2005, 20th Floor, 899 Ruining Road, Xuhui District, Shanghai, 200232, PRC. Customer Care Line: [400-819-8658](tel:400-819-8658). Hong Kong SAR: Kids Kingdom Limited, Room 1908-9, Gala Place, 56 Dundas Street, Mongkok, Kowloon, Hong Kong, P.R.C. Customer Care Line: (852)2782-0766. Taiwan region: CHICKABIDDY CO., LTD, F5, No. 186, Sec. 4, Nanjing E. Rd., Taipei 10595, Taiwan region. Customer Care Line: 0800 001 256. Diimport & Diedarkan Oleh: Mattel Continental Asia Sdn Bhd. Level 19, Tower 3, Avenue 7, No. 8 Jalan Kerinchi, Bangsar South, 59200 Kuala Lumpur, Malaysia. Mattel South Africa (PTY) LTD, Office 102 I3, 30 Melrose Boulevard, Johannesburg 2196.




The Forum, Václavské nám. 19, 11000 Praha1. Mattel, Inc. 636 Girard Avenue, East Aurora, NY 14052, U.S.A. Mattel Canada Inc., Mississauga, Ontario L5R 3W2.

Consumer Services: You may call us free at/ Composez sans frais le 1-[800-524-8697](tel:800-524-8697).


CONTENTS

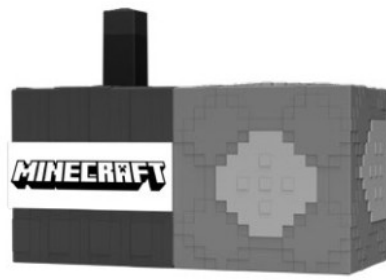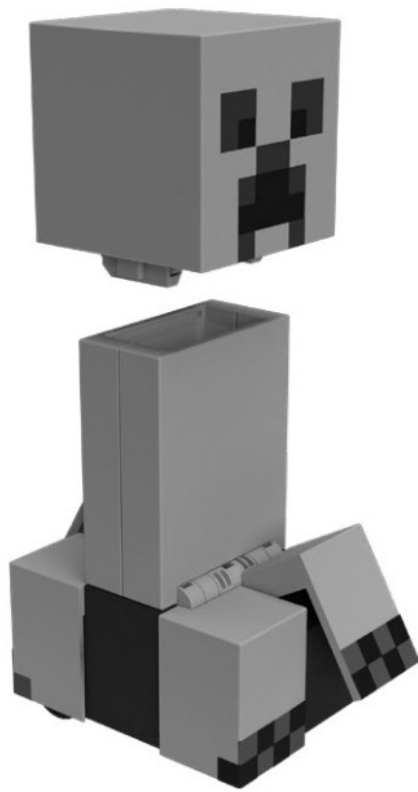

FEATURES

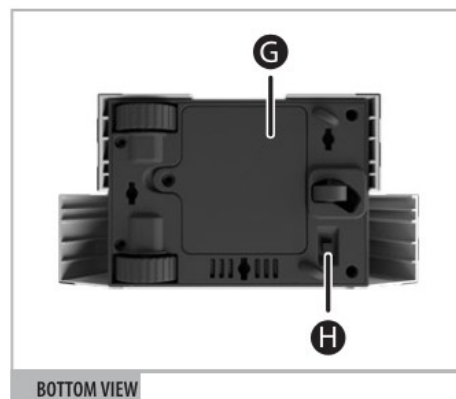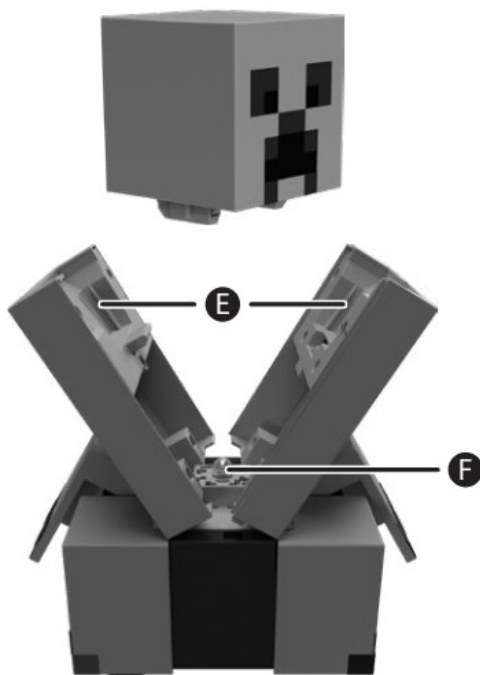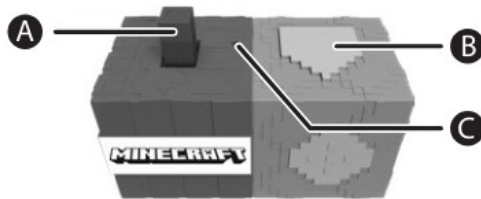   


 - A. JOYSTICK
- B. ACTION BUTTON
- C. LED INDICATOR
- D. BATTERY BOX
- E. EXPLOSION PARTICLES STORAGE SLOTS
- F. LED LIGHT
- G. BATTERY BOX
- H. POWER SWITCH

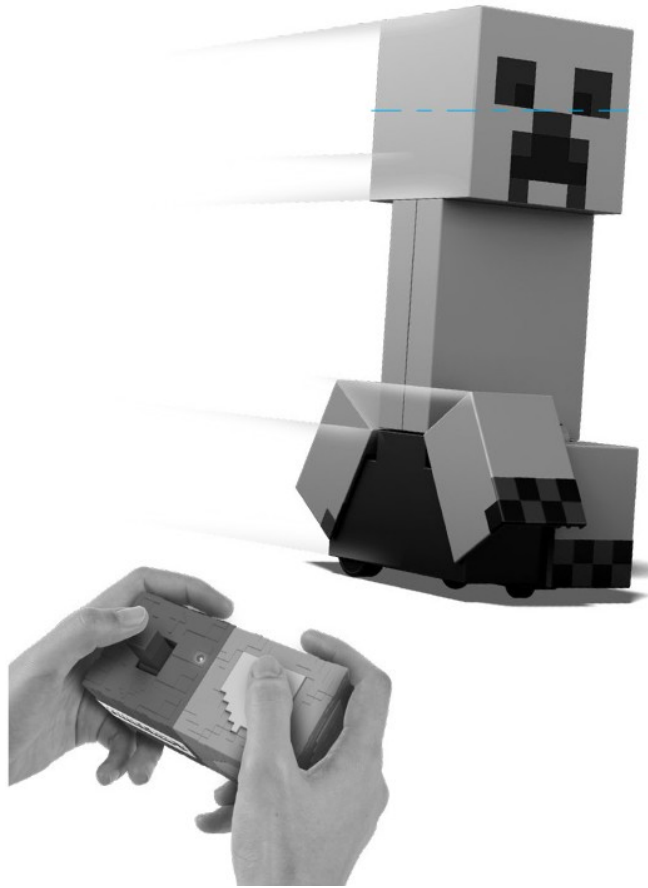

SET UP

 
A. BATTERY INSTALLATION

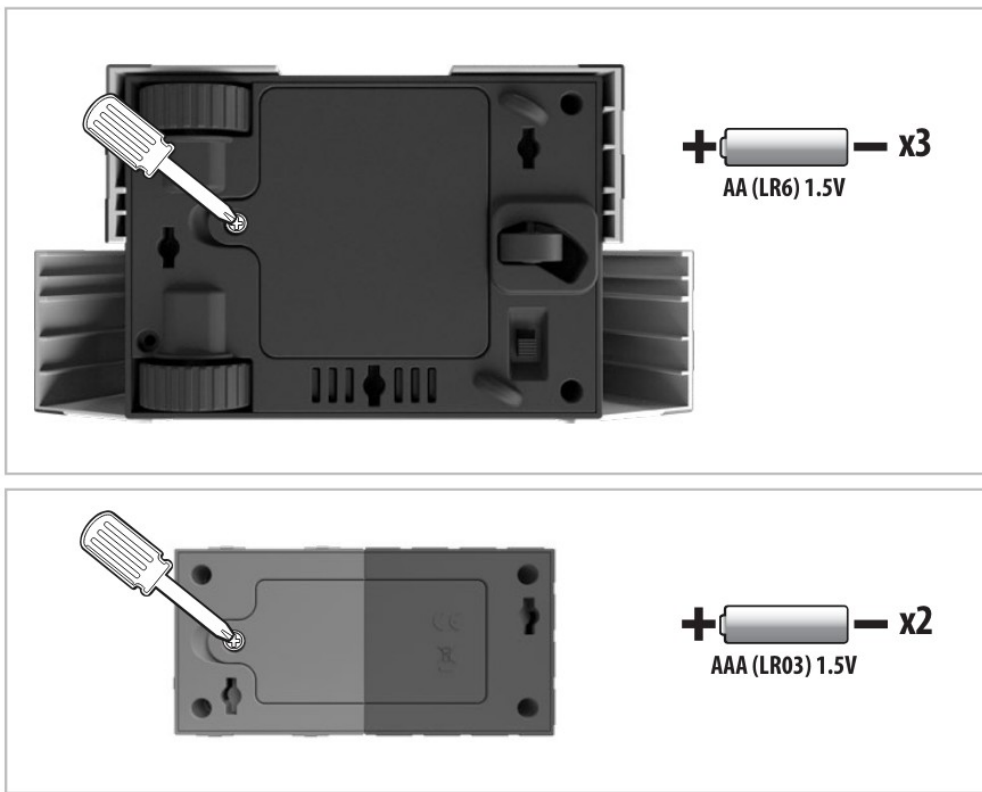

1. Unscrew the battery covers on both the figure and the remote controller with a Phillips head screwdriver (not included).
2. Install 3 AA (LR6) 1.5V alkaline batteries (not included) in the figure's battery box.
3. Install 2 AAA (LR03) 1.5V alkaline batteries (not included) in the remote controller's battery box.
4. For best performance, use alkaline batteries.
5. Replace both battery covers and tighten screws.
6. Replace the batteries in the figure and the remote controller if the figure begins to run slowly or does not respond or if the figure's lights and sounds dim and distort.

B. LOADING THE EXPLOSION PARTICLES

 1. Load the explosion particles into the slots on the figure.
2. Close the figure's sides.
3. Reattach the figure's head.

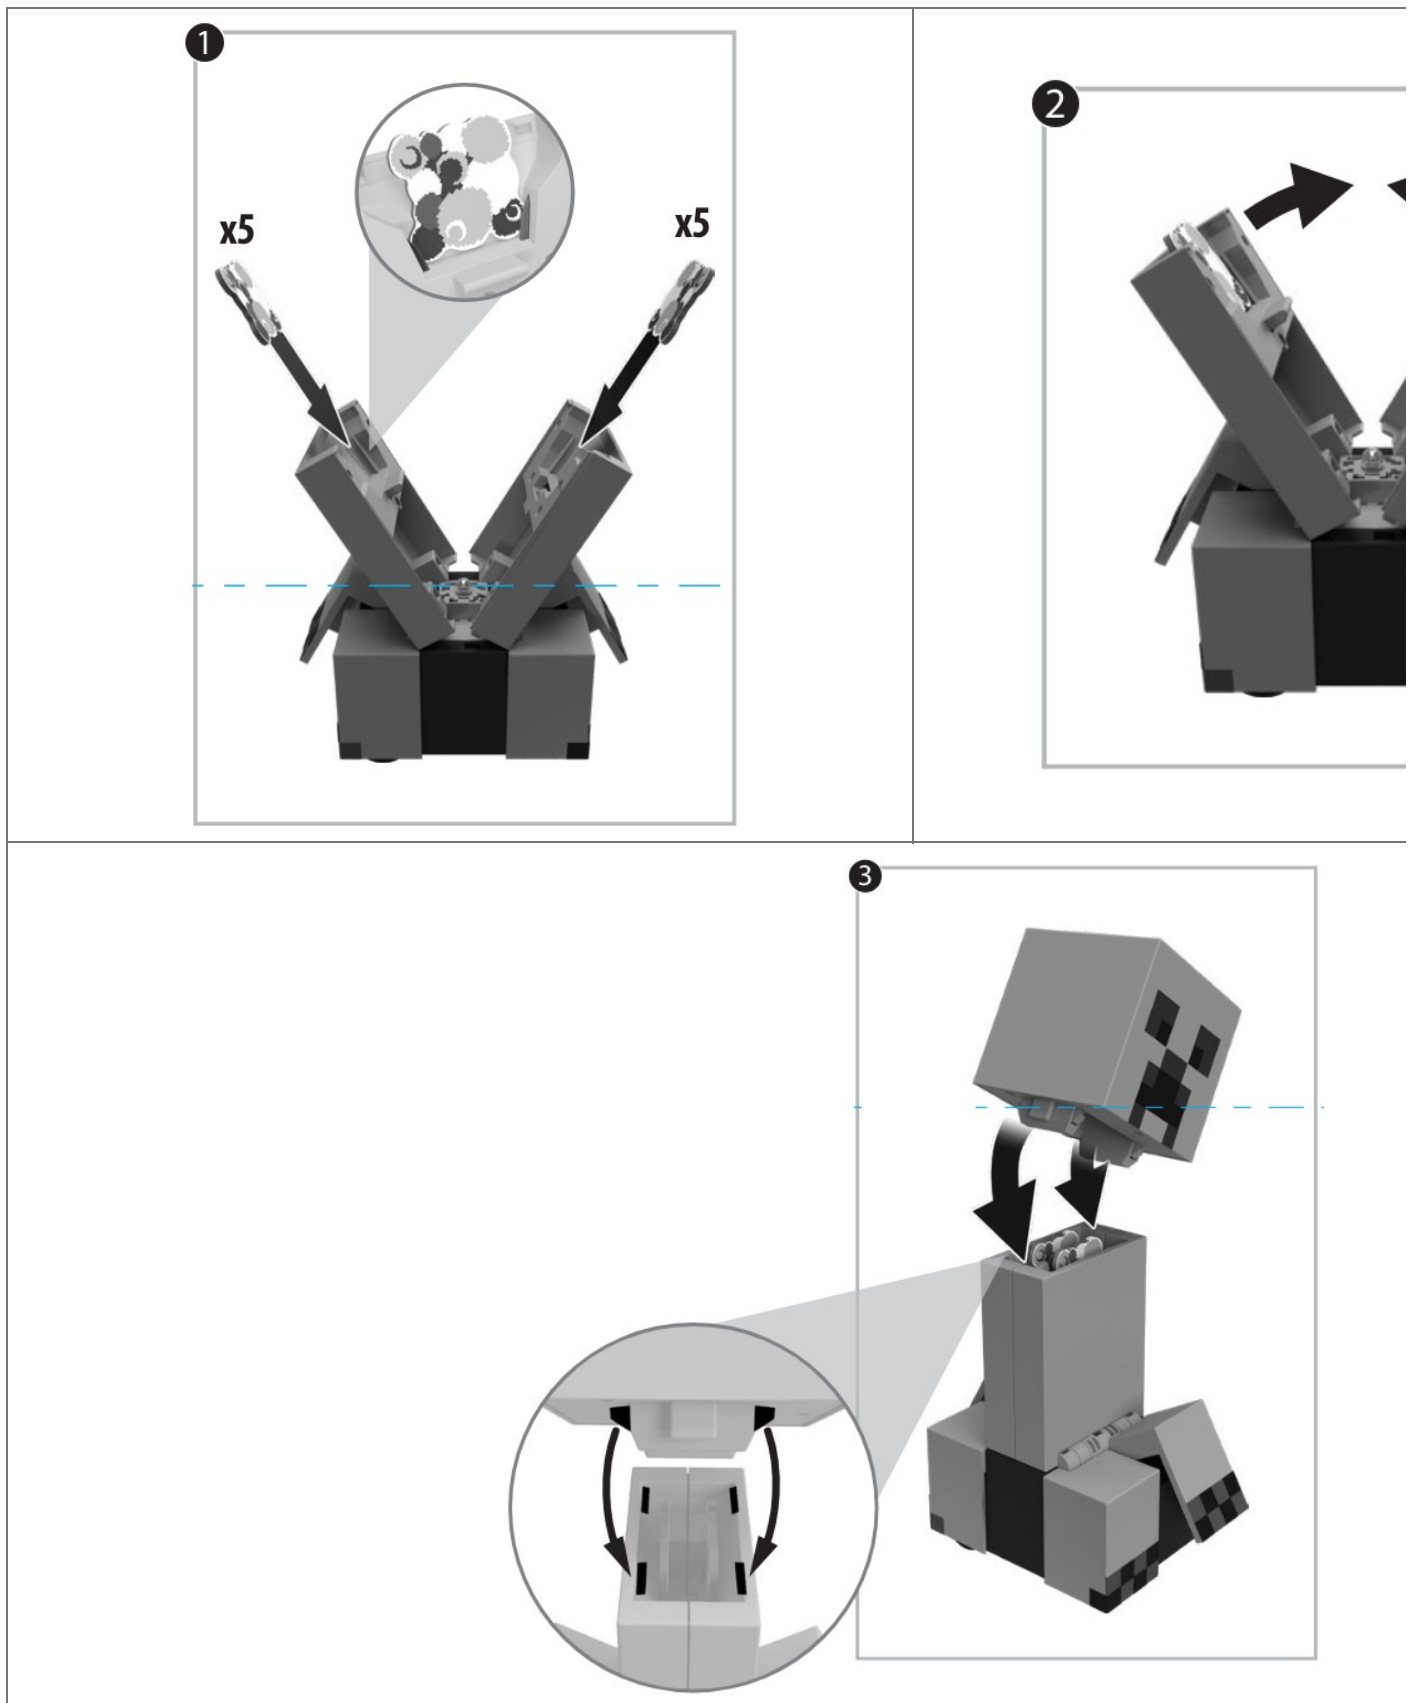


TIPS:

- Each storage slot can fit a maximum of 5 explosion particles.
- Press and hold the action button to open the figure and detach the head if the figure is already closed before loading the explosion particles.

C. PAIRING THE REMOTE CONTROLLER AND FIGURE

1. Slide the power switch to ON (I) on the figure.
2. Push the remote controller's joystick forward or backward after switching on the figure.
3. Pairing is complete when the LED changes from flashing red to solid red on the remote controller.

 NOTE: If the figure does not respond to the remote controller after pairing, switch the figure off then back on to try pairing again or replace the batteries in the figure and remote controller if the batteries are drained.

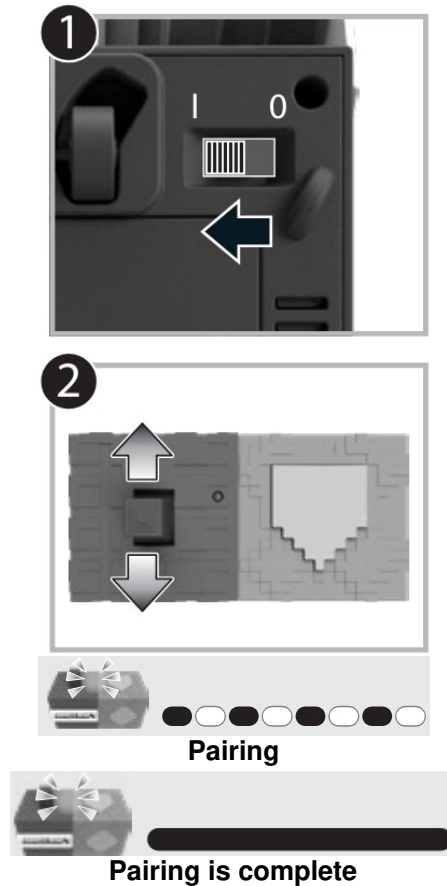

TIP:

The figure will go into sleep mode if left idle for approximately 15 minutes to preserve battery life. To resume normal play, slide the figure's power switch to OFF then ON again, and then push the remote controller's joystick forward or backward to pair the figure and remote controller.

 
 
TO PLAY

CHECKLIST




- ☐ Are the remote controller and figure equipped with fresh batteries?
- ☐ Is the remote controller paired with the figure?

CONTROLS


FORWARD

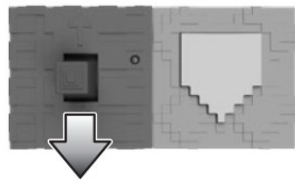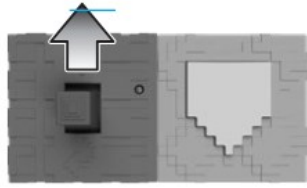

REVERSE & TURN

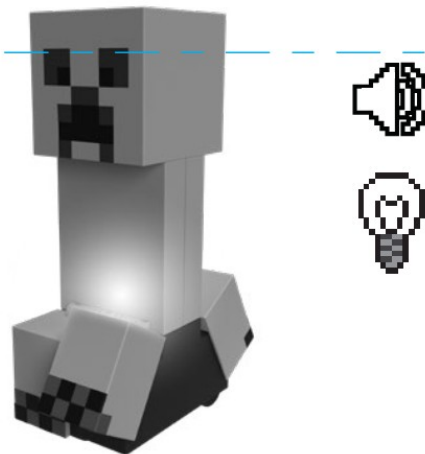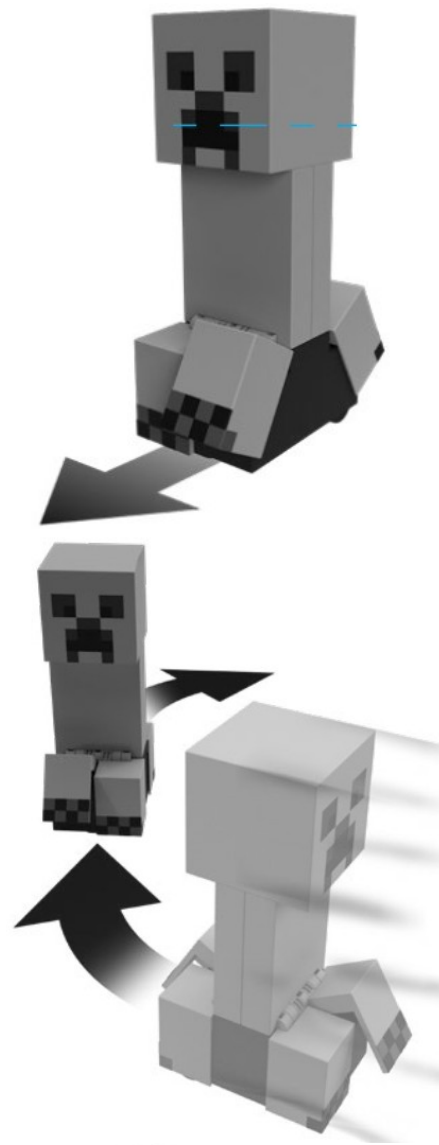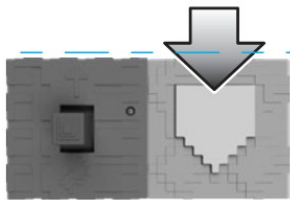   

 Press the action button for lights and sounds!

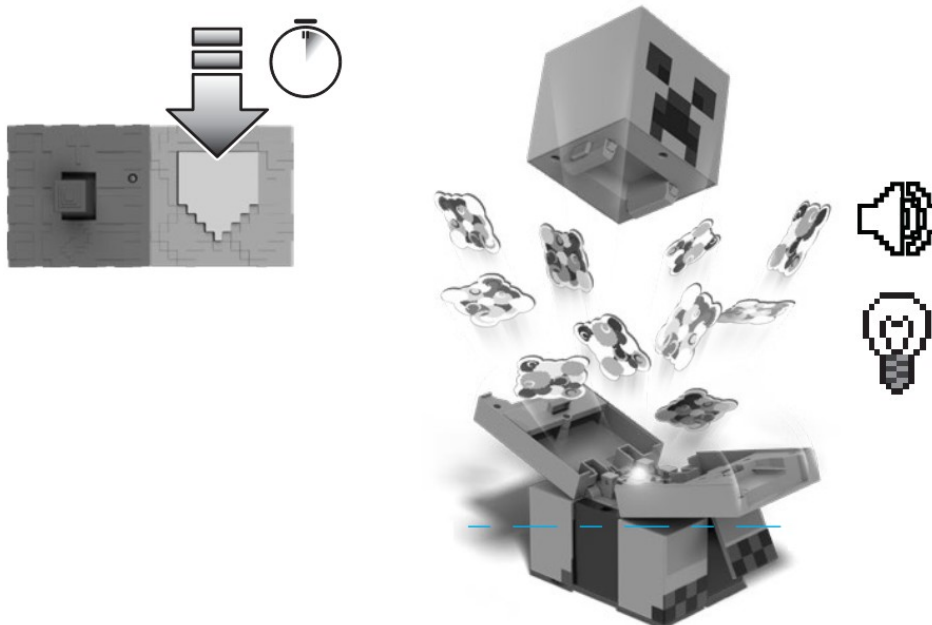

Press and hold the action button to explode!

NOTE: Operating range of the remote controller is up to 30 m (98 ft).

WARNING: Do not aim at eyes or face. Only use projectiles supplied with this toy. Do not fire at point blank range.



Documents / Resources



[Mattel Minecraft Exploding RC Creeper](#) [pdf] Instruction Manual
HRR48-23A5T, HRR48-23A5R, HRR48-JL70_19L, Minecraft Exploding RC Creeper, Exploding RC Creeper, RC Creeper, Creeper

References

- [Les Jouets Mattel France - Bienvenue sur Les Jouets Mattel](#)
- [MATTEL & FISHER-PRICE CUSTOMER SERVICE](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.