

max
MUSIC
max music KB15 Electronic
Keyboard 61 keys Set



max music KB15 Electronic Keyboard 61 keys Set Instruction Manual

[Home](#) » [max MUSIC](#) » max music KB15 Electronic Keyboard 61 keys Set Instruction Manual 

Contents

- [1 music KB15 Electronic Keyboard 61 keys Set](#)
- [2 Product Usage Instructions](#)
- [3 UNPACKING INSTRUCTION](#)
- [4 ASSEMBLY INSTRUCTIONS BENCH](#)
- [5 CONTROLS](#)
- [6 TECHNICAL SPECIFICATION](#)
- [7 Documents / Resources](#)
 - [7.1 References](#)
- [8 Related Posts](#)

max
MUSIC

music KB15 Electronic Keyboard 61 keys Set



KB15 Electronic Keyboard 61-keys Set

Specifications

- Model: KB15
- Number of Keys: 61
- Ref. nr.: 130.072

Product Usage Instructions

Safety Precautions

- Read the manual thoroughly before use to benefit from all features and not invalidate the warranty.
- Avoid fire and electrical shock; do not open the housing or place metal objects or liquids inside.
- Avoid heat sources, vibrating surfaces, and covering ventilation holes.
- Do not attempt repairs yourself; consult a qualified technician.

Initial Setup

1. Consult a specialist before initial use.
2. Expect a slight smell when switching on for the first time; it will dissipate.

Unpacking & Power Supply

1. Check the power supply label on the product for correct voltage.
2. Connect directly to mains power; do not use dimmers or adjustable supplies.

3. Connect to a protected circuit with proper electrical ground to avoid risks.

Assembly Instructions for Bench

1. Place the seat upside down.
2. Lift both left and right legs upwards.
3. Slide leg supports into brackets to lock them in position.
4. Rotate caps to stabilize the bench; ensure leg supports are fully inside the bracket.

FAQ

- **Q: Can I repair the product myself?**

- A: No, repairs should only be carried out by a qualified technician to avoid electrical shock and warranty invalidation.

- **Q: What should I do if I encounter a malfunction?**

- A: Contact customer support for guidance on troubleshooting or repair options.

KB15 Electronic Keyboard 61-keys Set

Ref. nr.: 130.072

INSTRUCTION MANUAL

Congratulations to the purchase of this Max Music product. Please read this manual thoroughly prior to using the product in order to benefit fully from all features.

Read the manual prior to using the product. Follow the instructions in order not to invalidate the warranty. Take all precautions to avoid fire and/or electrical shock. Repairs must only be carried out by a qualified technician in order to avoid electrical shock. Keep the manual for future reference.

- Prior to using the product, please ask advice from a specialist. When the unit is switched on for the first time, some smell may occur. This is normal and will disappear after a while.
- The unit contains voltage carrying parts. Therefore do NOT open the housing.
- Do not place metal objects or pour liquids into the product. This may cause electrical shock and malfunction.
- Do not place the product near heat sources such as radiators, etc. Do not place the unit on a vibrating surface. Do not cover the ventilation holes.
- The product is not suitable for continuous use.
- Be careful with the mains lead and do not damage it. A faulty or damaged mains lead can cause electrical shock and malfunction.
- When unplugging the product from a mains outlet, always pull the plug, never the lead.
- Do not plug or unplug the unit with wet hands.
- If the plug and/or the mains lead are damaged, they need to be replaced by a qualified technician.
- If the product is damaged to such an extent that internal parts are visible, do NOT plug the unit into a mains outlet and DO NOT switch the product on. Contact your dealer. Do NOT connect the product to a rheostat or dimmer.
- To avoid fire and shock hazard, do not expose the product to rain and moisture.
- All repairs should be carried out by a qualified technician only.

- Connect the product to an earthed mains outlet (220-240Vac/50Hz) protected by a 10-16A fuse.
- During a thunderstorm or if the product will not be used for a longer period of time, unplug it from the mains.
The rule is: Unplug it from the mains when not in use.
- If the product has not been used for a longer period of time, condensation may occur. Let the unit reach room temperature before you switch it on. Never use the product in humid rooms or outdoors.
- During operation, the housing may become hot.
- To prevent accidents in companies, you must follow the applicable guide lines and follow the instructions.
- Do not repeatedly switch the product on and off. This shortens the life time.
- Keep the unit out of the reach of children. Do not leave the unit unattended.
- Do not use cleaning sprays to clean switches. The residues of these sprays cause deposits of dust and grease.
In case of malfunction, always seek advice from a specialist.
- Only operate the product with clean hands.
- Do not force the controls.
- If the product has fallen, always have it checked by a qualified technician before you switch the product on again.
- Do not use chemicals to clean the unit. They damage the varnish. Only clean the product with a dry cloth.
- Keep away from electronic equipment that may cause interference.
- Only use original spares for repairs, otherwise serious damage and/or dangerous radiation may occur.
- Switch the product off prior to unplugging it from the mains and/or other equipment. Unplug all leads and cables prior to moving the product.
- Make sure that the mains lead cannot be damaged when people walk on it. Check the mains lead before every use for damages and faults!
- The mains voltage is 220-240Vac/50Hz. Check if power outlet match. If you travel, make sure that the mains voltage of the country is suitable for this product.
- Keep the original packing material so that you can transport the product in safe conditions



This mark attracts the attention of the user to high voltages that are present inside the housing and that are of sufficient magnitude to cause a shock hazard.



This mark attracts the attention of the user to important instructions that are contained in the manual and that he should read and adhere to.

The product has been certified CE. It is prohibited to make any changes to the product. They would invalidate the CE certificate and their guarantee!

NOTE: To make sure that the unit will function normally, it must be used in rooms with a temperature between 5°C/41°F and 35°C/95°F.



Electric products must not be put into household waste. Please bring them to a recycling centre. Ask your local authorities or your dealer about the way to proceed. The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

Do not attempt to make any repairs yourself. This would invalid your warranty. Do not make any changes to the product. This would also invalid your warranty. The warranty is not applicable in case of accidents or damages caused by inappropriate use or disrespect of the warnings contained in this manual. Max cannot be held responsible for personal injuries caused by a disrespect of the safety recommendations and warnings. This is also applicable to all damages in whatever form.

UNPACKING INSTRUCTION

CAUTION Carefully unpack the box upon receipt. Check the contents to ensure that all parts are present and have been received in good condition. Notify the shipper immediately and retain packaging material if any parts appear damaged from shipping or the package itself shows signs of mishandling. Save the package and all packaging materials. If the product must be returned, it is important that the product is returned in the original factory box and packaging. If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature..

POWERSUPPLY

 
The label on the bottom of the product indicates to what type of power supply the product must be connected. Check that the mains voltage corresponds to this, all other voltages may cause irreparable damage. The product must also be directly connected to the mains, no dimmer or adjustable power supply.

Always connect the device to a protected circuit (circuit breaker or fuse). Make sure the device has an appropriate electrical ground to avoid the risk of electrocution or fire.

ASSEMBLY INSTRUCTIONS BENCH


1. Place the seat upside down.
2. Lift both the left and right legs upwards.
3. Slide leg supports into brackets to lock the legs in position.
4. Rotate the caps to stabilize the bench.

NOTE: make sure the leg supports are sitting all the way inside the bracket. Sit down and play music like never before.

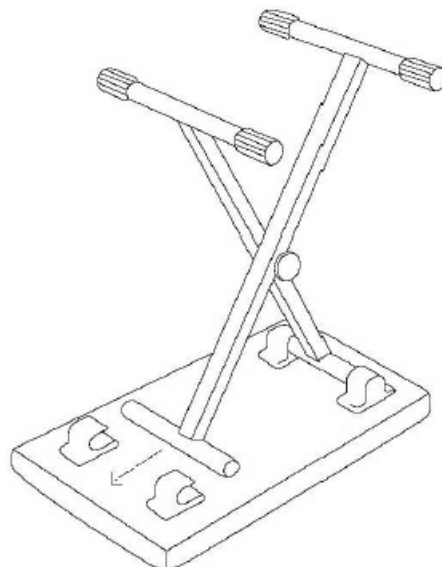

1. Place the feet on the floor in the position indicated in the illustration.

 - Using the screws, secure the X bracket onto the feet using the Allen wrench
- Place the upper support bars onto the upper part of the bracket and secure with the screws using the Allen wrench. Do not overtighten.

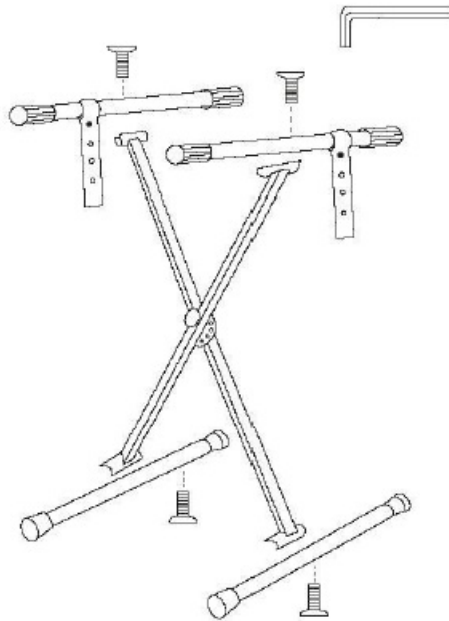

CONTROLS



1. MASTER VOLUME

Press the [Master Vol +] or [Master Vol -] button to raise or lower the master volume.

2. TEMPO

Press the [Tempo +] or [Tempo -] button to increase or decrease the rhythm speed.

3. TONE (T 00-07/T 08-15)

Press to choose a tone you want to add.

4. CHORD

- Single finger chord: Press [R00-R09] to choose the rhythm, and press [SINGLE] to enter this mode. Then play one of any 1-20 keys on the most left hand side to start the chord.
- Finger chord: Press [R00-R09] to choose the rhythm, and press [FINGER] to enter this mode. Then play according to the fingering of any 1-20keys on the most left hand side to start the chord.

5. TEACHING

Press the [TEACHING] button and next press any white keys, it will start to play background music from the

demos. You can play any key which will be automatically correct as the demos. This is a mode to help you practice and learn the demo for fun.

6. **FOLLOW**

Press the [FOLLOW] button, and next press any white keys, it will start to play background music from the demos, and you can play the keys to follow this background music.

7. **STOP**

Press the [STOP] button under the mode of RHYTHM, PLAY, DEMO, SINGLE, FINGER, FOLLOW, and TEACHING, to exit the mode.

8. **FILL IN**

Press the [R00-R09] button to choose the rhythm, and press [FILL-IN] to add the percussions in the rhythm.

9. **RECORD**

Press the [RECORD] button and you can record the music you play.

10. **PROGRAM**

Press the [PROGRAM] button to enter this mode, and press the percussion buttons to record your own percussions

11. **PLAY**

Press the [PLAY] button to playback recorded notes or rhythms.

12. **DRUM COMBINATION**

There're 8 percussions with 8 different buttons.

13. **DEMO**

Press the [DEMO] button, it will play the 1st song and enter into single cycle mode. The song will replay when it is finished. If you want to stop, then press [STOP] button. There're 6 demos totally. (appendix)

14. **RHYTHM**

There're totally 10 rhythms, press [R00-R09] to choose

15. **SPEAKERS**

Loudspeakers to reproduce the sound of the music played. sound level is determined on the basis of the volume setting.

CONNECTIONS

16. **DC INPUT**

Socket for plugging in the supplied micro USB power cable.

17. **POWER ON/OFF**

 
Switch to turn the keyboard on or off.

18. **MICROPHONE INPUT**

Connect a microphone to the MIC port to sing while playing the keyboard.

19. **HEADPHONES/OUTPUT**

When connecting headphones to the PHONES/OUTPUT port, the loudspeaker will be disenabled automatically. You can perform without disturbing others and other disturbing you.

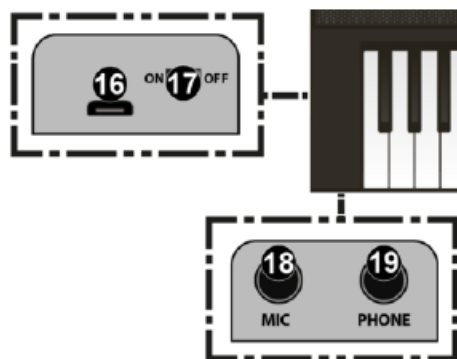

START PLAYING

Press the power switch ON/OFF button and play any white or black keys, if there is a piano rings up, the keyboard works.

Sleep function

1. When the keyboard is not playing more than 3 minutes it will automatically enter the sleep function.
2. To wake it up, press any white or black keys.

APPENDIX TABLE

Appendix I (Voice)		Appendix II (Rhythm)	
T00	PIANO	R00	DISCO
T01	HARP	R01	DANCE
T02	ORGAN	R02	FUNK
T03	BELL	R03	BALLAD
T04	JAZZ GUITAR	R04	JAZZ MUSIC
T05	VIOLIN	R05	BOSSA NOVA
T06	STRING	R06	CHA-CHA
T07	GUITAR	R07	WALTZ
T08	TRUMPET	R08	MARCH
T09	TUBA	R09	POLKA
T10	BASS	Appendix III Demo Songs	
T11	SAXOPHONE		
T12	FLUTE	D00	BEAMING WITH JOY
T13	BANJO	D01	FOR WHOM
T14	OBOE	D02	BRING SPRING DAY
T15	HORN	D03	FENGYANG FLOWER DRUM
		D04	GO HOME OFTEN
		D05	ATTAIN EMINENCE STEP BY STEP

TECHNICAL SPECIFICATION

- **Number of keys** : 61
- **Display** : LCD
- **Weight** : 4.0 kg
- **Dimensions** (L x W x H) : 820 x 260 x 80mm (stand 810 x 345 x 65mm)

The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

The products referred to in this manual conform to the European Community Directives to which they are subject

European Union

Tronios B.V.,
Bedrijvenpark Twente Noord 18, 7602KR Almelo, The Netherlands

- 2014/35/EU
- 2014/30/EU
- 2011/65/EC



United Kingdom

Tronios Ltd.,
130 Harley Street,
London W1G 7JU, United Kingdom

- S.I. 2016:1101
- S.I. 2016:1091
- S.I. 2012:3032



Specifications and design are subject to change without prior notice.

www.tronios.com

Copyright © 2024 by Tronios The Netherlands

Documents / Resources



[max music KB15 Electronic Keyboard 61 keys Set](#) [pdf] Instruction Manual
KB15 Electronic Keyboard 61 keys Set, KB15, Electronic Keyboard 61 keys Set, Keyboard 61 k
eys Set, 61 keys Set, keys Set

References

- [🌐 Samen zijn we open. Samen staan we sterk. - Stichting Open](#)
- [🌐 Sound & Light distributor - Tronios.com](#)
- [User Manual](#)

Manuals+, [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.