



## max KB4 Electronic Keyboard Instruction Manual

[Home](#) » [max](#) » max KB4 Electronic Keyboard Instruction Manual 



## Contents

- 1 KB4 Electronic Keyboard Instruction Manual
- 2 UNPACKING INSTRUCTION
- 3 POWERSUPPLY
- 4 CONTROLS
- 5 CONNECTIONS
- 6 AUTO RHYTHM
  - 6.1 Rhythm selection
  - 6.2 Rhythm control
  - 6.3 Tempo adjustment
- 7 EFFECT CONTROL
  - 7.1 Sustain function
  - 7.2 Vibrato function
- 8 EFFECT CONTROL
  - 8.1 Sustain function
  - 8.2 Vibrato function
- 9 TRAINING METHODS
  - 9.1 Training I: One key
  - 9.2 Training II: Follow
  - 9.3 Training III: Ensemble
- 10 PIANO.
- 11 PIANO DUST BUSTER
- 12 PIANO MAESTRO
  - 12.1 SIMPLY PIANO (IOS and ANDROID COMPATIBLE)
  - 12.2 APPENDIX I. TIMBRE TABLE AND RHYTHM TABLE
  - 12.3 Appendix Timbre Table
  - 12.4 Appendix Rhythm Table
- 13 TECHNICAL SPECIFICATION
- 14 Documents / Resources
  - 14.1 References
- 15 Related Posts

## KB4 Electronic Keyboard Instruction Manual



**Congratulations** to the purchase of this Max product. Please read this manual thoroughly prior to using the product in order to benefit fully from all features.

Read the manual prior to using the product. Follow the instructions in order not to invalidate the warranty. Take all precautions to avoid fire and/or electrical shock. Repairs must only be carried out by a qualified technician in order to avoid electrical shock. Keep the manual for future reference.

- Prior to using the product, please ask advice from a specialist. When the unit is switched on for the first time, some smell may occur. This is normal and will disappear after a while.
- The unit contains voltage carrying parts. Therefore do NOT open the housing.
- Do not place metal objects or pour liquids into the product. This may cause electrical shock and malfunction.
- Do not place the product near heat sources such as radiators, etc. Do not place the unit on a vibrating surface. Do not cover the ventilation holes.
- The product is not suitable for continuous use.
- Be careful with the mains lead and do not damage it. A faulty or damaged mains lead can cause electrical shock and malfunction.
- When unplugging the product from a mains outlet, always pull the plug, never the lead.
- Do not plug or unplug the unit with wet hands.
- If the plug and/or the mains lead are damaged, they need to be replaced by a qualified technician.
- If the product is damaged to such an extent that internal parts are visible, do NOT plug the unit into a mains outlet and DO NOT switch the product on. Contact your dealer. Do NOT connect the product to a rheostat or dimmer.
- To avoid fire and shock hazard, do not expose the product to rain and moisture.
- All repairs should be carried out by a qualified technician only.
- Connect the product to an earthed mains outlet (220-240Vac/50Hz) protected by a 10-16A fuse.
- During a thunderstorm or if the product will not be used for a longer period of time, unplug it from the mains. The rule is: Unplug it from the mains when not in use.
- If the product has not been used for a longer period of time, condensation may occur. Let the unit reach room temperature before you switch it on. Never use the product in humid rooms or outdoors.
- During operation, the housing may become hot.
- To prevent accidents in companies, you must follow the applicable guide lines and follow the instructions.
- Do not repeatedly switch the product on and off. This shortens the life time.
- Keep the unit out of the reach of children. Do not leave the unit unattended.
- Do not use cleaning sprays to clean switches. The residues of these sprays cause deposits of dust and grease. In case of malfunction, always seek advice from a specialist.
- Only operate the product with clean hands.
- Do not force the controls.
- If the product has fallen, always have it checked by a qualified technician before you switch the product on again.
- Do not use chemicals to clean the unit. They damage the varnish. Only clean the product with a dry cloth.
- Keep away from electronic equipment that may cause interference.
- Only use original spares for repairs, otherwise serious damage and/or dangerous radiation may occur.
- Switch the product off prior to unplugging it from the mains and/or other equipment. Unplug all leads and cables prior to moving the product.
- Make sure that the mains lead cannot be damaged when people walk on it. Check the mains lead before every use for damages and faults!
- The mains voltage is 220-240Vac/50Hz. Check if power outlet match. If you travel, make sure that the mains voltage of the country is suitable for this product.
- Keep the original packing material so that you can transport the product in safe conditions

## Warnings:

- This mark attracts the attention of the user to high voltages that are present inside the housing and that are of sufficient magnitude to cause a shock hazard.
- This mark attracts the attention of the user to important instructions that are contained in the manual and that he should read and adhere to.

The product has been certified CE. It is prohibited to make any changes to the product. They would invalidate the CE certificate and their guarantee!

**NOTE:** To make sure that the unit will function normally, it must be used in rooms with a temperature between 5°C/41°F and 35°C/95°F.

**Disposal:** Electric products must not be put into household waste. Please bring them to a recycling centre. Ask your local authorities or your dealer about the way to proceed. The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

Do not attempt to make any repairs yourself. This would invalid your warranty. Do not make any changes to the product. This would also invalid your warranty. The warranty is not applicable in case of accidents or damages caused by inappropriate use or disrespect of the warnings contained in this manual. Max cannot be held responsible for personal injuries caused by a disrespect of the safety recommendations and warnings. This is also applicable to all damages in whatever form.

## UNPACKING INSTRUCTION

**CAUTION!** Immediately upon receiving the product, carefully unpack the carton, check the contents to ensure that all parts are present and have been received in good condition. Notify the shipper immediately and retain packing material for inspection if any parts appear damaged from shipping or the package itself shows signs of mishandling. Save the package and all packing materials. If the product must be returned to the factory, it is important that the product is returned in the original factory box and packing.

If the device has been exposed to drastic temperature fluctuation (e.g. after transportation), do not switch it on immediately. The arising condensation water might damage your device. Leave the device switched off until it has reached room temperature.

## Supplied contents:


- MAX KB4 keyboard
- Power supply
- Music sheet stand

## POWERSUPPLY

The label on the bottom of the product indicates to what type of power supply the product must be connected. Check that the mains voltage corresponds to this, all other voltages may cause irreparable damage. The product must also be directly connected to the mains, no dimmer or adjustable power supply.

Always connect the device to a protected circuit (circuit breaker or fuse). Make sure the device has an appropriate electrical ground to avoid the risk of electrocution or fire.

## CONTROLS

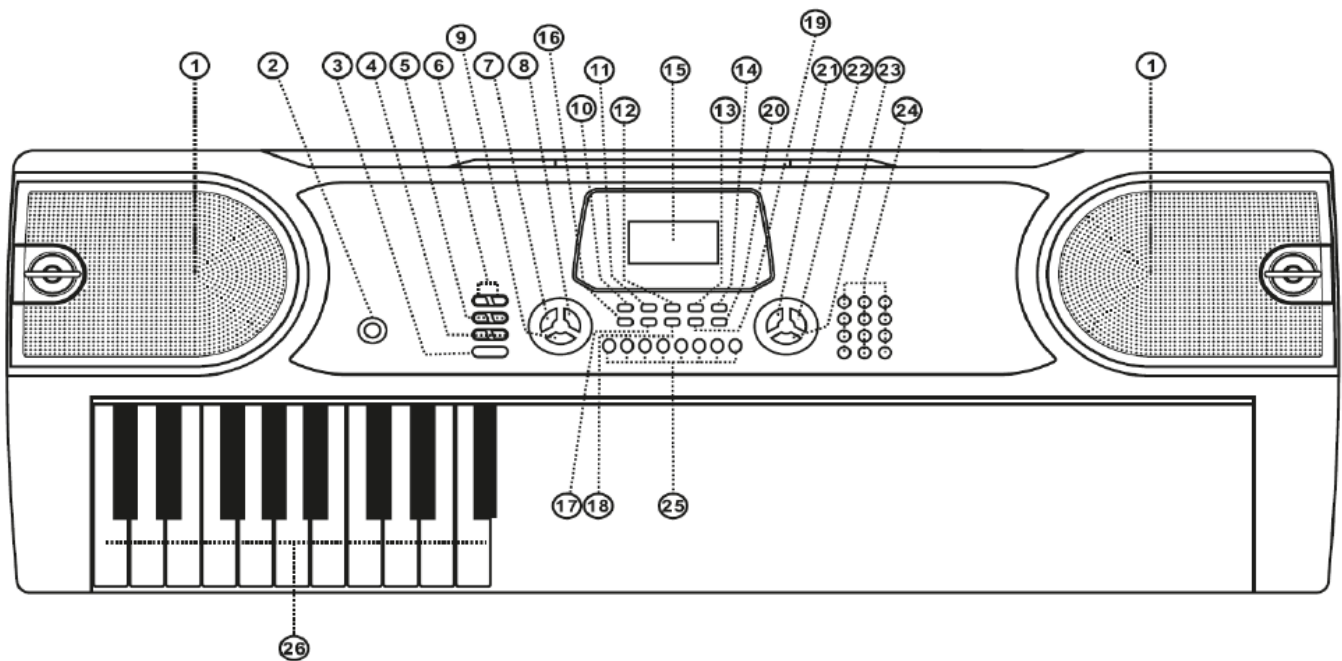

### 1. SPEAKERS

Loudspeakers to reproduce the sound of the music played. sound level is determined on the basis of the volume setting.

### 2. POWER ON/OFF

Switch to turn the keyboard on or off.

### 3. KEYBOARD PERCUSSION

This Keyboard provides 61 kinds of keyboard percussions. Press [Keyboard Percussion] to turn the keyboard into percussion keyboard, and each key corresponds to one percussion instrument. Press this button again to disenable the keyboard percussion function.

### 4. TEMPO

Press [Tempo +] or [Tempo -] to increase or decrease the tempo. Press the two buttons simultaneously may reset to the default value of 120 tempo/min.

### 5. ACCOM VOLUME

Press [Accomp Vol +] or [Accomp Vol -] to raise or lower the accomp volume. Press both simultaneously to reset to default value.

### 6. MASTER VOLUME

Press [Master Vol +] or [Master Vol -] to raise or lower the master volume. Press both simultaneously to reset to default value.

### 7. SYNC

When in rhythm mode, press [SYNC]. "SYN" will show on the display. Play any key in the chord key zone (the 1st-19th key, from left) to activate the accomp rhythm.

### 8. FILL-IN

Press the [FILL IN] button to add an interlude to the rhythm. The fill played is determined by accompaniment rhythm selected. After the fill, the selected accompaniment rhythm will continue playing. The Fill In function can be used as often as desired.

### 9. START/STOP

Press to start or stop playing selected program.

#### 10. **SUSTAIN**

Press [SUSTAIN] and the sustain effect will be activated. Press this button again and the sustain effect will be disabled.

#### 11. **VIBRATO**

Press the [VIBRATO] and the vibrato effect will be activated. Press this button again and the vibrato effect will be disabled.

#### 12. **ONE-KEY TRAINING**

Press [ONE KEY] to enable the single key training function. Press “+”/“-” button to select the song to be learned. One key training aims at duration learning, and there is no requirement on pitch or creativeness. This mode allows for mistakes when playing the keys, but the keyboard still plays correct notes and the display will show the correct notes. After one song is finished, repeat the current song to be learned. Press [START/STOP] or press the [ONE KEY] button to disable the training function.

#### 13. **FOLLOW TRAINING**

Press [FOLLOW] to enable the follow function. Press “+”/“-” button to select the song to be learned. With Follow training, you can learn by following the correct playing notes. The program will wait for you to play the correct note before it moves to the next one. Notes: In this mode, the Keyboard plays only the correct notes and gives no response to the wrong notes. Press [START/STOP] or press [FOLLOW] to disable the training function.

#### 14. **ENSEMBLE TRAINING**

Press [ENSEMBLE] to enable the ensemble function. Press “+”/“-” button to select the song to be learned. The Ensemble training aims at the correct and comprehensive learning of the song duration and notes. The keynote will be shielded for ensemble and you need to play the correct note according to the correct duration of the song. If you fail to play within 3 seconds, the keyboard will automatically play the correct note. After one song is finished, repeat the current song to be learned. Press the [START/STOP] button or press [ENSEMBLE] to disable the training function.

#### 15. **LCD DISPLAY**

Displays current mode, notes to play, rhythm, tempo, etc.

#### 16. **SINGLE CHORD**

Under the state that the rhythm is activated, press [SINGLE CHORD]. After “Sin” shows on the display, you can play a single chord on the keys in the chord zone of the keyboard. Press [SINGLE CHORD] again, “OFF” will appear on the display. The single chord function will be disabled.

#### 17. **FINGERED CHORD**

In this mode, you play the individual notes of the chord in your left hand. Under the state that the rhythm is activated, press [FINGERED CHORD]. After the “Fin” shows on the display, you can play a fingered chord on the keys in the chord zone of the keyboard. Press [FINGERED CHORD] again, “OFF” will appear on the display. The fingered chord function will be disabled.

#### 18. **RECORD**

Press [REC] to enable the recording function, “REC” will show on the display. In this mode all played notes will be recorded. When storage is full, “FUL” will appear on the display and recording will stop automatically. Press [PLAY] to playback the recorded notes, “PLA” will show on the screen. On completion of playback, “REC” will show on the display. You can record a new rhythm, or you can press [PLAY] to playback the recorded rhythm.

#### 19. **PROGRAM**

Press [PROG] to enable the rhythm programming function, “PRG” will show on the display and the keyboard percussion function will be activated. 32 Percussions can be programmed at maximum, after that “FUL” will

appear on the display and programming will stop automatically. Press [PLAY] to playback the programming rhythm. Press [START/STOP] or press [PROG] again to disable the programming function. All recorded rhythms will be removed.

#### 20. **PLAY**

Press to playback recorded notes or rhythms.

#### 21. **TIMBRE**

Press [TIMBRE] to enable the tone selection function. This keyboard provides 255 timbres ("000" to "254") for your selection. The Tone is defaulted to be "000", and it can be adjusted by pressing the corresponding number buttons or pressing the "+" / "-" button.

#### 22. **RHYTHM**

Rhythm selection:

This Keyboard provides 255 rhythms ("000" to "254") for your selection. The rhythm is defaulted to be "000".

Press [RHYTHM] to initiate the rhythm selection function. Press the numeric keys or the "+" / "-" buttons to select other rhythms.

##### **Rhythm enabling:**

Press [START/STOP] to start accomp rhythm. While in enable state: Press [SYNC], "SYN" will show on the display. Play any key in the chord key zone (1st-19th key from left). The accomp rhythm will be activated. Press [START/STOP] to stop the accomp rhythm.

##### **Interlude:**

After the accomp rhythm is activated, press [FILL IN] to have a temporary rhythm play during the accomp rhythm.

#### 23. **DEMO SONG**

This keyboard has 24 stored demo songs ("000" to "023") for your selection. Press [DEMO SONG] and the demo songs will start to play in order. During playing process, press [DEMO SONG] to play the next demonstration song. Press [START/STOP] to stop playing. During the playing process, you can also press the num pad buttons or the "+" / "-" buttons to select other demonstration songs. The selected demonstration song will then play repeatedly.

#### 24. **NUM PAD**

Numeric keys to enter an accurate value.


#### 25. **PERCUSSIONS**

This Keyboard provides 8 kinds of panel percussions. Press one of eight to play the corresponding percussion. Percussion instruments can be added to enhance the atmosphere as required.

#### 26. **CHORD ZONE**

Chord key zone (1st-19th key from left).

## **CONNECTIONS**

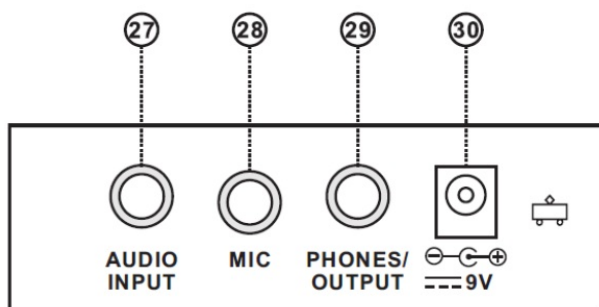

### 27. AUDIO INPUT

Turn off the keyboard and external audio device of choice. Connect one end of the audio cable to the INPUT port on the rear panel of the keyboard, connect the other end to the audio port of the device.

### 28. MICROPHONE INPUT

Connect a microphone to the MIC port to sing while playing the keyboard.

### 29. HEADPHONES/OUTPUT

When connecting headphones to the PHONES/OUTPUT port, the loudspeaker will be disabled automatically. You can perform without disturbing others and other disturbing you.

### 30. DC 9V INPUT

Socket for plugging in the supplied power

## AUTO RHYTHM

### Rhythm selection

This Keyboard provides 255 rhythms ("000" to "254") for your selection. The rhythm is defaulted to be "000". Press [RHYTHM] to initiate the rhythm selection function. Press the numeric keys or the "+" "/" "-" buttons to select other rhythms.

### Rhythm control

#### 1. Rhythm enabling

Press [START/STOP] to start accomp rhythm. While in enable state: Press [SYNC], "SYN" will show on the display. Play any key in the chord key zone (1st-19th key from left). The accomp rhythm will be activated.

#### 2. Interlude

After the accomp rhythm is activated, press [FILL IN] to have a temporary rhythm play during the accomp rhythm.

#### 3. Stop rhythm

Press [START/STOP] to stop the accomp rhythm.

### Tempo adjustment

Press [Tempo +] or [Tempo -] to increase or decrease the tempo. Press the two buttons simultaneously may reset to the default value of 120 tempo/min.

## EFFECT CONTROL

## **Sustain function**

Press [SUSTAIN] and the sustain effect will be activated. Press this button again and the sustain effect will be disenabled.

## **Vibrato function**

Press the [VIBRATO] and the vibrato effect will be activated. Press this button again and the vibrato effect will be disenabled.

## **EFFECT CONTROL**

### **Sustain function**

Press [SUSTAIN] and the sustain effect will be activated. Press this button again and the sustain effect will be disenabled.

### **Vibrato function**

Press the [VIBRATO] and the vibrato effect will be activated. Press this button again and the vibrato effect will be disenabled.

## **TRAINING METHODS**

### **Training I: One key**

Press [ONE KEY] to enable the single key training function. Press “+”/“-” button to select the song to be learned. One key training aims at duration learning, and there is no requirement on pitch or creativeness. This mode allows for mistakes when playing the keys, but the keyboard still plays correct notes and the display will show the correct notes. After one song is finished, repeat the current song to be learned. Press [START/STOP] or press the [ONE KEY] button to disenable the training function.

### **Training II: Follow**

Press [FOLLOW] to enable the follow function. Press “+”/“-” button to select the song to be learned. With Follow training, you can learn by following the correct playing notes. The program will wait for you to play the correct note before it moves to the next one. Notes: In this mode, the Keyboard plays only the correct notes and gives no response to the wrong notes. Press [START/STOP] or press [FOLLOW] to disenable the training function.

### **Training III: Ensemble**

Press [ENSEMBLE] to enable the ensemble function. Press “+”/“-” button to select the song to be learned. The Ensemble training aims at the correct and comprehensive learning of the song duration and notes. The keynote will be shielded for ensemble and you need to play the correct note according to the correct duration of the song. If you fail to play within 3 seconds, the keyboard will automatically play the correct note. After one song is finished, repeat the current song to be learned. Press the [START/STOP] button or press [ENSEMBLE] to disenable the training function.

## **RECOMMENDED TRAINING APPS / GAMES**

MAX highly recommends the below apps to support you on your journey of piano exploration. It has never been this easy to dip your toes in the deep and majestic waters of playing the piano. Train yourself from novice to king of the keys with help from PIANO DUST BUSTER, PIANO MAESTRO and SIMPLY

## PIANO.

Please note: downloading the below apps is free of charge. Expanding the apps with more training, songs and other additives might involve costs.



### PIANO DUST BUSTER

**PIANO DUST BUSTER** is the ultimate introduction to piano for kids. No previous piano experience needed!



### PIANO MAESTRO

An in depth educational tool to study piano. From a single note to complete pieces, **PIANO MAESTRO** makes sheet music come to life!



### SIMPLY PIANO

Explore the piano step-by-step, from scratch. **SIMPLY PIANO** will help you learn the basics from sight-reading to playing with both hands.

## PIANO DUST BUSTER

Help granny dusting off her piano while collecting points and bonuses. Piano Dust Buster is a great tool to get excited about playing your piano and improving your skills. Piano Dust Buster is an ultimate introduction to piano, no previous piano experience needed. You have the option to begin practicing reading notation, compete against other players or challenge yourself to hundreds of songs ranging from Beethoven to Adele. (\*IOS compatible only!)



## PIANO MAESTRO

#1 ranked Education App. An in depth educational tool for beginning to study piano. **PIANO MAESTRO** helps practicing and learning sight reading, rhythm, technique, playing with both hands and much more!

In addition you will Progress up in chapters, unlock new songs and raise the difficulty level along the way. Learn to play songs step by step and have access to practice options. You're able to personalize your learning experience.

### Piano Method Books Included

Learn songs from some of the most well-known and beloved piano method books used today. A digital way to compliment the use of your favorite method book, all books can be found in the Library in the 'Methods' section. (\*IOS-IPAD compatible only!)



## SIMPLY PIANO (IOS and ANDROID COMPATIBLE)

Whether you're a complete beginner or want to learn piano on your own, SIMPLY PIANO will guide you to become the piano player you always wanted to be. Just place your IOS or Android device on your piano and play. Your device will immediately recognize what you are playing!

- Learn the piano basics from sight-reading to playing with both hands
- Tons of fun songs ranging from classical to top-charting hits
- Listens to how you play, giving you instant feedback to quickly learn and improve your skills
- Courses for different tastes and levels including pop chords, essentials, blues and more

(\* Compatible with both IOS and ANDROID devices)



## APPENDIX I. TIMBRE TABLE AND RHYTHM TABLE

### Appendix Timbre Table

000-104	135 Celesta 3	167 Synth Strings 2	199 Reverse Cymbal	231 Electric Guitar (Muted) 2
Refer to the unit panel	136 Glockenspiel 1	168 Choir Aahs 1	200 Bassoon 2	232 Electric Guitar (Clean) 4
105 Wind Organ	137 Marimba 3	169 Voice Oohs 1	201 English Horn 3	233 Electric Guitar (Jazz) 2
106 Viola Attack	138 Xylophone 2	170 Synth Voice 1	202 Oboe 2	234 Acoustic Guitar (Steel) 2
107 Bari & Tenor	139 Tubular Bells 2	171 Orchestra Hit 1	203 Baritone Sax 2	235 Acoustic Guitar (Nylon) 2
108 Soft Sax 2	140 Dulcimer 3	172 Trombone 1	204 Tenor Sax 3	236 Tango Accordion 2
109 Attack Harp 2	141 Drawbar Organ 1	173 Tuba 1	205 Soprano Sax 2	237 Harmonica 2
110 Diddgeridoo 2	142 Percussive Organ 1	174 Muted Trumpet 1	206 Synth Brass 3	238 Reed Organ 4
111 Dual Horns 2	143 Rock Organ 1	175 French Horn 1	207 Brass Section 2	239 Church Organ 2
112 Hard Bassoon 2	144 Church Organ 1	176 Brass Section 1	208 French Horn 2	240 Rock Organ 2
113 Kawala 2	145 Reed Organ 3	177 Synth Brass 2	209 Muted Trumpet 2	241 Percussive Organ 2
114 Soft Guitar 2	146 Harmonica 1	178 Soprano Sax 1	210 Tuba 2	242 Drawbar Organ 2
115 Mute Barafon 2	147 Tango Accordion 1	179 Tenor Sax 2	211 Trombone 2	243 Dulcimer 4
116 Lead (Sawtooth)	148 Acoustic Guitar (Nylon) 1	180 Baritone Sax 1	212 Orchestra Hit 2	244 Tubular Bells 3
117 Lead (Calliope)	149 Acoustic Guitar (Steel) 1	181 Oboe 1	213 Synth Voice 2	245 Xylophone 3
118 Lead (Bass+Lead)	150 Electric Guitar (Jazz) 1	182 English Horn 2	214 Voice Oohs 2	246 Marimba 4
119 Pad (Warm)	151 Electric Guitar (Clean) 3	183 Bassoon 1	215 Choir Aahs 2	247 Glockenspiel 2
120 Sitar	152 Electric Guitar (Muted) 1	184 Piccolo	216 Synth Strings 3	248 Celesta 4
121 Banjo	153 Overdriven Guitar 1	185 Flute	217 Synth Strings 4	249 Clavi 4
122 Shamisen 2	154 Distortion Guitar 1	186 Recorder	218 String Ensemble 3	250 Harpsichord 3
123 Koto 3	155 Electric Bass (Pick) 1	187 Pan Flute	219 Timpani 2	251 Chorused Piano 2
124 Kalimba 3	156 Fretless Bass 1	188 Blown Bottle	220 Pizzicato Strings 2	252 Rhodes Piano 2
125 Bag Pipe 2	157 Slap Bass 1	189 Shakuhach	221 Tremolo Strings 2	253 Honky-tonk Piano 2
126 Fiddle	158 Slap Bass 2	190 Whistle	222 Contrabass 2	254 Electric Grand Piano 2
127 Shanai 2	159 Synth Bass 1	191 Ocarina	223 Synth Bass 3	
128 Trumpet 2	160 Synth Bass 2	192 Tinkle Bell	224 Synth Bass 4	
129 Electric Grand Piano 1	161 Contrabass 1	193 Agogo	225 Slap Bass 3	
130 Honky-tonk Piano 1	162 Tremolo Strings 1	194 Steel Drums	226 Slap Bass 4	
131 Rhodes Piano 1	163 Pizzicato Strings 1	195 Woodblock 2	227 Fretless Bass 2	
132 Chorused Piano 1	164 Timpani 1	196 Taiko Drum	228 Electric Bass (Pick) 2	
133 Harpsichord 2	165 String Ensemble 2	197 Melodic Tom	229 Distortion Guitar 2	
134 Clavi 3	166 Synth Strings 1	198 Synth Drum	230 Overdriven Guitar 2	

## Appendix Rhythm Table

000-125	153 Pasodoble 2	182 68 Beat Ballad 1	211 Jazz Big Band 3	240 Rumba 3
Refer to the unit panel	154 Samba 3	183 Big Band Ballad 1	212 Pub Piano 3	241 Club Dance 3
126 Blue Grass 5	155 Samba 4	184 West Shuffle	213 Swing Beat 2	242 USA March 3
127 Blue Grass 6	156 Schlager Rock 3	185 Calypso	214 Slow & Easy 3	243 Uk pop 3
128 Slow Soul 2	157 SchlagerAlp 1	186 Casa	215 Reggae 3	244 Pop New Age 3
129 Bright Pop 1	158 Tarantella 2	187 Chrliston	216 Rock Ballad 3	245 Dixie Jazz 3
130 Club Latin 2	159 Tijuana Beat 1	188 Detroit	217 R&B Ballad 3	246 Disco Samba 3
131 Disco Chocolate 2	160 Electro Pop 2	189 Dance Pop	218 Piano Ballad 3	247 Disco Party 3
132 Disco Fox 2	161 Fusion 2	190 Espag Nol	219 Acoustic Ballad 3	248 Disco Latin 3
133 Disco Funk 2	162 Hip Beat 1	191 Fast Gospel	220 Limbo Rock 3	249 Disco Hands 3
134 Disco Hands 2	163 Limbo Rock 2	192 Ground Beat	221 Hip Beat 2	250 Disco Funk 3
135 Disco Latin 2	164 Acoustic Ballad 2	193 Guad Dance	222 Fusion 3	251 Disco Fox 3
136 Disco Party 2	165 Piano Ballad 2	194 Modern Cha Cha	223 Electro Pop 3	252 Disco Chocolate 3
137 Disco Samba 2	166 R&B Ballad 2	195 Merengue	224 Tijuana Beat 2	253 Club Latin 3
138 Dixie Jazz 2	167 Rock Ballad 2	196 Ballet	225 Tarantella 3	254 Bright Pop 2
139 Pop New Age 2	168 Reggae 2	197 Rave	226 SchlagerAlp 2	
140 Uk pop 2	169 Slow & Easy 2	198 Sy Boogie	227 Schlager Rock 4	
141 USA March 2	170 Swing Beat 1	199 Seville	228 Samba 5	
142 Club Dance 2	171 Pub Piano 2	200 Big Band Ballad 2	229 Samba 6	
143 Rumba 2	172 Jazz Big Band 2	201 68 Beat Ballad 2	230 Pasodoble 3	
144 8 Beat Modern 2	173 Jazz Club 2	202 16 Beat Ballad 2	231 Modern R&B 3	
145 Country Ballad 2	174 Jazz Beat 1	203 68 Beat Blues 2	232 Modern Country Pop 3	
146 Hard Rock 2	175 Jazz Beat 2	204 Show Tune 3	233 Medium Jazz 3	
147 Hully Gully 2	176 Jazz Rock 2	205 Analog Ballad 3	234 Love Song 3	
148 Jive 2	177 Salsa 2	206 Salsa 3	235 Jive 3	
149 Love Song 2	178 Analog Ballad 2	207 Jazz Rock 3	236 Hully Gully 3	
150 Medium Jazz 2	179 Show Tune 2	208 Jazz Beat 3	237 Hard Rock 3	
151 Modern Country Pop 2	180 68 Beat Blues 1	209 Jazz Beat 4	238 Country Ballad 3	
152 Modern R&B 2	181 16 Beat Ballad 1	210 Jazz Club 3	239 8 Beat Modern 3	

## TECHNICAL SPECIFICATION

- Power Supply: 100-240VAC 50/60Hz
- Weight : 7,90 kg

- Dimensions : 834 x 265 x 87mm

The specifications are typical. The actual values can slightly change from one unit to the other. Specifications can be changed without prior notice.

The products referred to in this manual conform to the European) Community Directives to which they are subject:


- Low Voltage(LVD) 2014/35/EU
- Electromagnetic Compatibility (EMC) 2014/30/EU CE
- Restriction of Hazardous Substances (RoHS) 2011/65/EU

Specifications and design are subject to change without prior notice.

[www.tronios.com](http://www.tronios.com)

Copyright © 2020 by Tronios The Netherlands

## Documents / Resources

 <p>max KB4 Electronic Keyboard 61 key</p> <p>INSTRUCTION MANUAL</p>	<p><a href="#">max KB4 Electronic Keyboard</a> [pdf] Instruction Manual</p> <p>KB4 Electronic Keyboard</p>
--	--

## References

- [🌐 Sound & Light distributor - Tronios.com](#)