



maxell ER-TW True Wireless Earhooks User Manual

[Home](#) » [Maxell](#) » maxell ER-TW True Wireless Earhooks User Manual 

Contents

- [1 maxell ER-TW True Wireless Earhooks](#)
- [2 Specification](#)
- [3 DESCRIPTION](#)
- [4 FEATURES](#)
- [5 Earhook Controls](#)
- [6 WARRANTY INFORMATION](#)
- [7 FCC INFORMATION](#)
- [8 Documents / Resources](#)

maxell

maxell ER-TW True Wireless Earhooks



Specification

- Chipset Solution: 5616A
- Driver Size: 10mm
- Impedance: 160
- Battery Capacity :
- Earhooks: 40mAh
- Charging Box: 300mAh
- Play Time: 15 hours in total with charging case
- Power Input: 3mW
- Speaker Output Power: 2x 1 0mW
- Charging Time Earhooks: 1 .5 – 2Hrs
- Charging Type: Type C

DESCRIPTION

- Microphone
- LED Indicator
- Charging Connectors 0Flexible Earhook
- TYPE C Fast Charge Connection
- LED Case Battery Life Indicator

FEATURES

- **Power ON:**

The ear hooks will automatically turn on, once removed from the case.

- **Power OFF:**

Earhooks will automatically turn off, once you put them back into the case.

- **Charging the Case:**

To charge the case plug in the Type-(cable and connect to a computer or wall charger. When fully charged, the battery life indicator will show a solid blue LED.

Using for the first time: It is recommended to fully charge the earhooks in the charging case, for up to 2 full hours.

- **Charging the Earhooks:**

Place the ear hooks in the charging case. The ear hook LEDS will be solid blue when charging. The LEDs will turn off when fully charged.

*When both ear hooks are fully charged, the charging case will turn off the charging function automatically and turn to standby.

- **Pairing a New Device:**

Remove the ear hooks from the case, then place ear hooks back into the case. Remove again and this will automatically turn the earhooks on. The flashing LEDs indicate that you are now in pairing mode. Now go to your device's Bluetooth list and select "Maxell Sync Up EH" to get connected. No need to pair again, your Bluetooth device will auto-connect to the ear hooks for all future use.

Earhook Controls

- **Pause/Play Music:** Touch on either ear hook once
- **Volume+:** Touch for two seconds on the Right Hook
- **Volume -:** Touch for two seconds on the Left Hook
- **Next Track:** Touch twice on the Right Hook
- **Previous Track:** Touch twice on the Left Hook
- **Take and End call:** Touch on either ear hook once during a call.
- **Reject a Call:** Touch on either ear hook for two seconds. Once rejected your music will automatically resume.

Solo:

You can use either ear hook separately in solo mode, just in case you want to hear and be aware of your surroundings. Just place either earhook back into the case and that earhook will turn off. The other earhook will remain on and playing music.

WARRANTY INFORMATION

- Maxell warrants this product to be free from all defects for a period of 90 days from the date of original purchase. This Warranty does not apply to normal wear or damage due to accident, abnormal use, misuse or neglect. This Warranty only applies to personal and individual use of the product and not for commercial, institutional or any other use. Any defective item will be replaced, at no charge, upon reasonable confirmation by Maxell of its defective condition, if returned with proof of purchase to an authorized Maxell dealer or directly to Maxell Warranty Replacement, 3 Garret Mountain Plaza, Suite 300, Woodland Park, New Jersey 07424. Neither Maxell nor any authorized Maxell dealer shall be liable for consequential damages arising from this Warranty unless otherwise provided by law.

- Maxell garantit que ce produit exempt de tout défaut pendant une période de 90 jours à compter de la date d'achat d'origine. Cette garantie ne s'applique pas à l'usure normale ni aux dommages dus à un accident, à une utilisation anormale, à une mauvaise utilisation ou à une négligence. Cette garantie s'applique uniquement à une utilisation personnelle et individuelle du produit et non à une utilisation commerciale, institutionnelle ou autre. Tout article defectueux sera remplacé, sans frais, sur confirmation raisonnable par Maxell de son état defectueux, s'il est renvoyé avec la preuve d'achat à un revendeur Maxell agréé ou directement à Maxell New Jersey 07424. Ni Maxell ni aucun revendeur Maxell agréé ne pourront être tenus pour responsables des dommages résultant de cette garantie, sauf disposition contraire de la loi.
- Maxell garantiza que este producto está libre de defectos por un período de 90 días a partir de la fecha de compra original. Esta garantía no se aplica al desgaste o daño normal debido a un accidente, uso anormal, mal uso o negligencia. Esta garantía solo se aplica al uso personal e individual del producto y no al uso comercial, institucional o de otro tipo. Cualquier artículo defectuoso será reemplazado, sin cargo, luego de que Maxell confirme razonablemente su condición defectuosa, si se devuelve con el comprobante de compra a un distribuidor autorizado de Maxell o directamente a un reemplazo de la garantía de Maxell, 3 Garret Mountain Plaza, Suite 300, Woodland Park, New Jersey 07424. Ni Maxell ni ningún distribuidor autorizado de Maxell serán responsables de los daños consecuentes derivados de esta Garantía, a menos que la ley disponga lo contrario.

FCC INFORMATION

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes or modifications to this device not explicitly approved by the manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Documents / Resources

 maxell SYNC UP True Wireless Earhooks ER-TW FCC ID: [illegible]	maxell ER-TW True Wireless Earhooks [pdf] User Manual WKA-ER-TW, WKAERTW, ER-TW True Wireless Earhooks, ER-TW, ER-TW Wireless Earhook s, True Wireless Earhooks, Wireless Earhooks, Earhooks
---	--