

maxell SY-TWS Sync Up-True Wireless Twin Speakers User **Manual**

Home » Maxell » maxell SY-TWS Sync Up-True Wireless Twin Speakers User Manual



Contents

- 1 maxell SY-TWS Sync Up-True Wireless Twin **Speakers**
- 2 Specification
- 3 Speaker Functions
- 4 Bluetooth Pair Together or Separately
- **5 WARRANTY INFORMATION**
- **6 FCC INFORMATION**
- 7 Documents / Resources
- **8 Related Posts**

maxell

maxell SY-TWS Sync Up-True Wireless Twin Speakers



Specification

• Power Output: 3W*2

• Power Input: DCSV = 1A


• Frequency Response: 25Hz-20KHz

Battery: 3.7V 600mAh*2Playtime: 6 hours*2


• Charging Time: 2-3 hours

• Supports: Bluetooth 5.0, Micro SD Cards, USBs

Speaker Functions

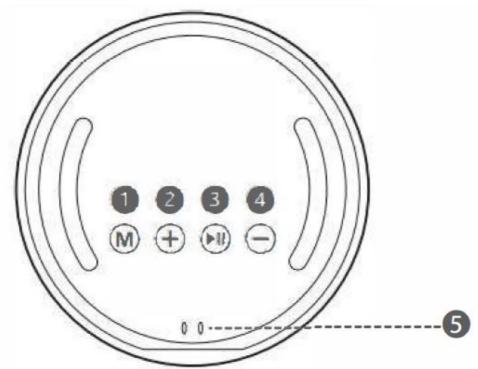

- 1. Press "M" to switch between modes
- 2. Press"+" short press Next Track/ long press for Volume Up
- 3. Press ">II" long press Power On/ Off and short press for Pause/ Play
- 4. Press"-" short press Previous Track/ long press for Volume Down
- 5. Lanyard/ Sling (included 2x)

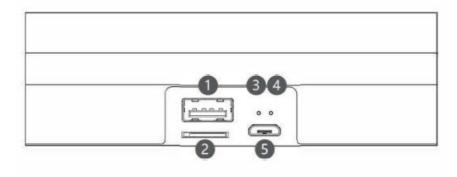

- 1. **USB Port** Insert USB and it will be followed by a prompt sound, then audio files will play. Once the USB is removed, the speakers will automatically return to Bluetooth mode.
- 2. **Micro SD Card Slot** Insert card and it will be followed by a prompt sound, then audio files will play (Supports 32GB) . Once the SD card is removed, the speakers will automatically return to Bluetooth mode.
- 3. **LED Indicator** When the speaker turns on the Blue LED will blink slowly. Once connected the Blue LED will

- stay on. The Blue LED will flash slowly when playing under Bluetooth or Micro SD function.
- 4. **Built-In Microphone** For an incoming call, accept through your phone. To reject the call press decline on your phone. Once call is finished music will begin automatically.
- 5. **Micro USB Charging Port** The Red LED light will be displayed in charging mode and will turn off once charging is complete.

Bluetooth - Pair Together or Separately

Solo Mode:

- 1. Long press ">II" button to turn on the speaker, the speaker will be in Bluetooth mode.
- Go to your Bluetooth settings and select" SY-TWS "you will hear a prompt sound and now you're connected.
 Next time your speaker is on it will auto pair to your Bluetooth device.

Pair Together:

- 1. Long Press ">II" on both speakers for about 3-5 seconds. Then double click the ">II" on one speaker to enter True Wireless Pairing mode.
- 2. After paired you will hear a prompt sound on both speakers. The LED indicator for the Master Speaker will keep Flashing, and the secondary speaker will stop flashing (they both stop flashing when they are paired). This indicates that you have successfully connected both speakers together.

Note:To return to solo mode press the ">II" button twice, and two press it again for True Wireless mode.

WARNING:

- 1. This product is not a toy; do not let the children use it without adult supervision.
- 2. Do not put the product into fire, or expose to sources of high temperature, it might cause explosion.
- 3. Do not burn or bury batteries.
- 4. Do not puncture or crush.
- 5. Do not use the product while driving or cycling and while operating any machinery. Music playing during driving might be an offense of local laws in some regions. Users should check with local authorities, and decide the usage of the product under their own responsibilities.
- 6. Do not use the product at a high volume for any long period of time. This may lead to hearing damage.
- 7. To avoid hearing damage by sudden loud sound, please minimize the volume on the playback device before connecting the product to the playback device.
- 8. Do not disassemble, modify or attempt to repair the product.
- 9. To prevent fire or shock hazards, please disconnect the unit from charger when cleaning.
- 10. In case of liquid leakage from the battery, do not touch with bare hands. If liquid gets into the eye, do not rub, please flush with plenty of clean water immediately and consult a doctor; if liquid gets onto the body and clothes, please clean with plenty of clean water and consult a doctor if necessary.
- 11. Please refer to the user guide and use the accessories provided.

WARRANTY INFORMATION

Maxell warrants this product to be free from all defects for a period of 90 days from the date of original purchase. This Warranty does not apply to normal wear or damage due to accident, abnormal use, misuse or neglect. This Warranty only applies to personal and individual use of the product and not for commercial, institutional or any other use. Any defective item will be replaced, at no charge, upon reasonable confirmation by Maxell of its defective condition, if returned with proof of purchase to an authorized Maxell dealer or directly to Maxell Warranty Replacement, 3 Garret Mountain Plaza, Suite 300, Woodland Park, New Jersey 07424. Neither Maxell nor any authorized Maxell dealer shall be liable for consequential damages arising from this Warranty, unless otherwise provided by law.

FCC INFORMATION

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

CAUTION: Any changes or modifications to this device not explicitly approved by the manufacturer could void your authority to operate this equipment. This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. The device has been evaluated to meet general RF exposure requirements. The device can be used in portable exposure conditions without restriction.

Documents / Resources



<u>maxell SY-TWS Sync Up-True Wireless Twin Speakers</u> [pdf] User Manual SY-TWS, SYTWS, 2AN4U-SY-TWS, 2AN4USYTWS, Sync Up-True Wireless Twin Speakers, S Y-TWS Sync Up-True Wireless Twin Speakers

Manuals+