



MAXHUB V6 C5530 Collaboration Display User Guide

[Home](#) » [MAXHUB](#) » MAXHUB V6 C5530 Collaboration Display User Guide 

Contents

- 1 MAXHUB V6 C5530 Collaboration Display
- 2 Product Information
- 3 Product Usage Instructions
- 4 Power:
- 5 Screen:
- 6 Safety Warnings
- 7 Unboxing Checklist
- 8 Installation Guide
- 9 Reference for Wall Mounting
- 10 Installing the Wireless Module
- 11 Installing the OPS/Android Module
- 12 Removing the OPS/Android Module
- 13 Product Appearance Introduction
- 14 Back Interface
- 15 Interface function
- 16 First Start of MAXHUB Interactive Flat Panel
- 17 Maintenance
- 18 Warranty
- 19 Documents / Resources
 - 19.1 References



MAXHUB V6 C5530 Collaboration Display



Product Information

The MAXHUB V6 Classical Series is a range of interactive displays designed for collaboration and communication purposes. The series includes four models: C5530, C6530, C7530, and C8630. These displays offer advanced features and functionality to enhance productivity in various settings, such as classrooms, meeting rooms, and conference halls.

Product Usage Instructions

Safety Warnings:

- Do NOT expose the product to direct sunlight or heat sources.
- Do NOT place the product on a slope or mount it on an unstable stand.
- Avoid placing the product near devices that generate strong magnetic fields.
- Do NOT place heavy objects on the product.
- Avoid placing the product in a humid environment or exposing it to water splashes as it is not waterproof.

Power:

1. Check the product's operating voltage and frequency to ensure they match the local power configuration.
2. Unplug the device during thunderstorms.
3. If the product will not be used for an extended period, unplug the power cable.
4. Avoid physically or mechanically damaging the power cable.
5. Use the MAXHUB cable provided and do NOT modify it.
6. Ensure the AC is properly grounded.

Screen:

- Use only the MAXHUB stylus on the screen and avoid using hard or sharp objects.
- Unplug the power before cleaning the product.
- Clean the screen with a soft, dustless, and dry cloth. Do NOT use water or liquid detergent.
- Contact the authorized reseller for thorough cleaning.
- Avoid displaying a high-brightness image on the screen for a long period of time.

Viewing Distance:

The optimal viewing distance is 3-4 times the diagonal length of the screen.

Temperature & Humidity:

Ensure proper ventilation by leaving at least a 10cm space on the left, right, and back, and a 20cm space above the product.

Earphone:

Turn down the volume before using earphones to prevent temporary or permanent hearing loss.

Standby:

A brief press of the power button will switch the product into standby mode, with only the screen turned off. To shut down the product completely, press and hold the power button for approximately 3 seconds and confirm the shutdown command on the screen.

Notes for Cleaning:

Avoid spraying any liquid on the device, especially on the heat vents at the back.

Rocker Switch Status:

“I” indicates the power-on state, while “0” indicates the power-off state.

Maintenance:

Contact a MAXHUB authorized reseller for maintenance or repair services.

Warranty Exclusions:

The MAXHUB warranty does not cover products that match any of the following descriptions:

1. Consumables, including batteries.
2. Products with removed or defaced Product Labels, preventing warranty and ownership identification.
3. Products with damaged Warranty Stickers.
4. Products without a certificate of purchase.
5. Regular maintenance, repairs, or replacement of parts due to normal wear and tear.

Classical Series (C5530, C6530, C7530, C8630)

Quick Start Guide

Thank you for choosing MAXHUB product.

Please read this document carefully and thoroughly before using the product. Should you have any technical questions, please contact MAXHUB technical support.

Safety Warnings

Placement

1. Should be NOT expose the product to direct sunlight or heat source.
2. Please do NOT place the product on a slope, mount on an unstable stand or an insufficiently.
3. Please do NOT put the product near devices that generate strong magnetic fields.
4. Please do NOT place any heavy objects on the product.
5. Please do NOT place the product in a humid environment for it is NOT water-proof. Keep it from water splashes.

Power

1. Please check the product's operating voltage and frequency to ensure they match the local power configuration.
2. Please unplug the device during thunderstorms.
3. Please unplug the power cable if the product will not be used for an extended period.
4. Please do NOT physically or mechanically damage the power cable.
5. Please use the MAXHUB cable and do NOT modify it.
6. Please make sure the AC is grounded.

Screen

1. Please do NOT use hard or sharp objects on the screen other than the MAXHUB stylus.
2. Please unplug the power before cleaning the product. Use a soft, dustless, and dry cloth to clean the screen.
3. Please do NOT use water or liquid detergent to clean the product.
4. Please contact the authorized reseller for thorough cleaning.
5. Please do NOT display a high-brightness image on the screen for a long period of time.

Viewing Distance

The optimal viewing distance is 3-4 times the diagonal length of the screen.

Temperature & Humidity

1. Please do NOT place the product near a heater or radioactive source.
2. If the product is moved from a cold environment to a warm one, please unplug the power cable and allow the product to gradually warm up for at least two hours to reduce moisture.
3. Operating temperature of the product is 0°C – 40°C. Operating humidity is between 0% – 90%RH.

Ventilation

Please place the product in an area with adequate ventilation, leaving at least a 10cm-space on the left, right and back, and a 20cm-space above the product.

Earphone

High volume may cause temporary or permanent hearing loss.
Please turn down the volume before you put on the earphone.

Standby

A brief press of the power button will NOT shut down the product. It will switch the product into standby mode, with only the screen turned off. To shut down the product, please press and hold the power button for approximately 3 seconds. Confirm the shutdown command in the center of the screen

Notes for Cleaning

There are numerous heat vents at the back of the device. Please do NOT spray any liquid on the device.

Rocker Switch Status

“1” means power-on state. “0” means power-off state.

Maintenance

Please contact a MAXHUB authorized reseller for maintenance or repair.

Warranty Exclusions

 
MAXHUB does not warranty Products that match any one or few of the following descriptions:

1. Product damage caused by disregarding the user manual's instructions.
2. Hardware damage caused by improper set up.
3. Product damage caused by unauthorized product modification or maintenance.
4. Product damage caused by using the product in an unsuitable environment.
5. Product damage caused by subjecting the product to abnormal external force.
6. Product damage caused by natural disasters or other force majeure.
7. Damage caused by freight or shipping.
8. Deliberate or accidental damage resulting from a cleaning regime not in accordance with the cleaning and maintenance instructions specified in the user manual.

Additional exclusions:

1. The Warranty does not cover consumables, including but not limited to batteries.
2. The Warranty does not cover, or is void for, products whose Product Label has been removed or defaced, as this prevents warranty and ownership identification.
3. The Warranty does not cover products with a damaged Warranty Sticker.
4. The Warranty does not cover products for which there is no certificate of purchase.
5. The Warranty does not cover regular maintenance, nor does it cover repairs or replacement of parts due to normal wear and tear.

Unboxing Checklist

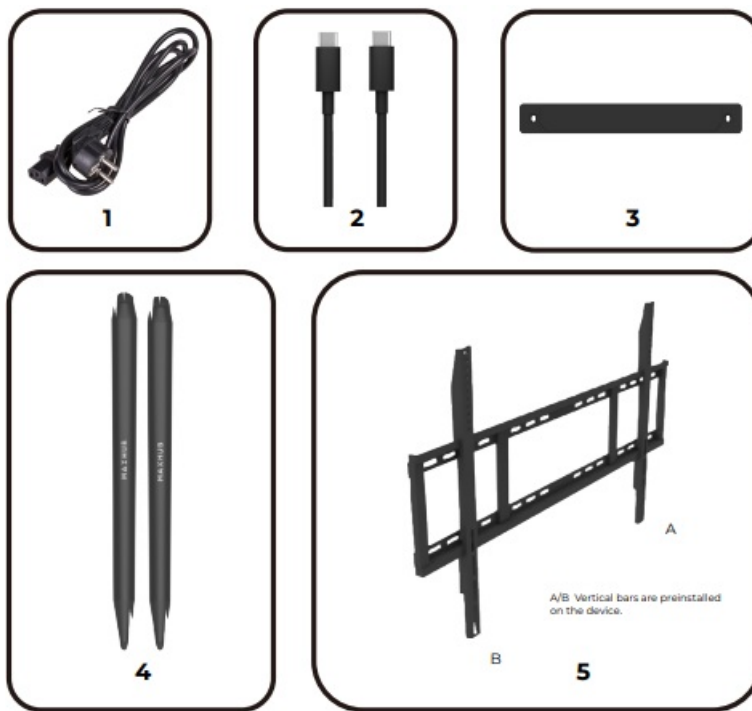


| | |
|---|--------------------------------|
| 1 | 3m Power Cord*3 EU*1,AU*1,UK*1 |
| 2 | 1.8m USB Type-C Cable*1 |
| 3 | Wi-Fi Module*1 |
| 4 | Passive Stylus*2 |
| 5 | VESA Wall Mounting Bracket*1 |

*All photoes here are for reference only,Specifications are subject to the phisycal product.



Installation Guide

 1. Remove the panel from the box and prepare for installation.

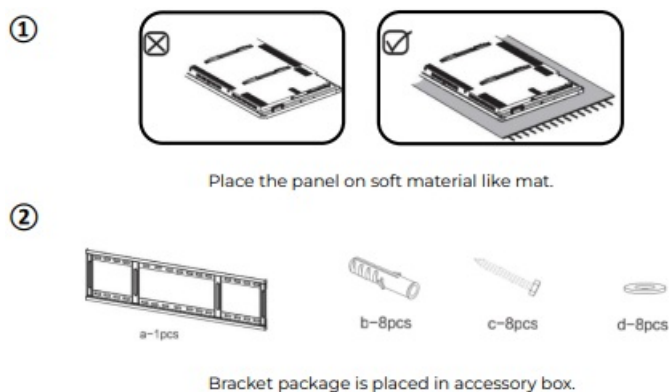

2. Confirm the panel installation position.

  The height and pictures are only for reference, please refer to the actual installation size on site.

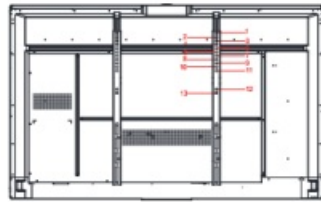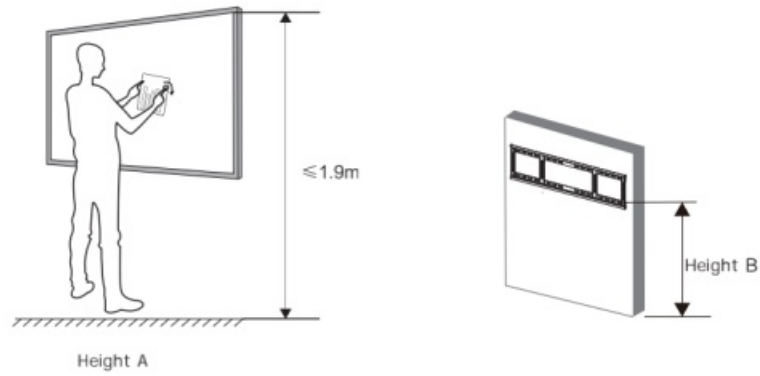


(The picture is for reference only)


Height A: The height from the center of touch screen to the ground.
Height B: Distance from the bottom screw hole to ground.

| Series | Size | Height B (cm) | Bracket and holes |
|----------|------|---------------|--------------------|
| C Series | 55 | 120 | WIB9060G- hole #13 |
| | 65 | 128 | WIB9060G- hole #11 |
| | 75 | 132 | WIB9060G- hole #4 |
| | 86 | 133 | WIB9060G- hole #1 |
| V Series | 65 | 128 | WIB9060G- hole #11 |
| | 75 | 132 | WIB9060G- hole #4 |
| | 65 | 127 | WIB9060G- hole #4 |
| T Series | 86 | 127 | WIB9060G- hole #4 |

 3. Take 8 pcs expansion rubber plug B and screw them into the wall. It is recommended to use a 10mm impact drill bit.
4. Fix the wall bracket onto the 8pcs expansion plug B, using a combination of 8pcs screw C and gasket D.

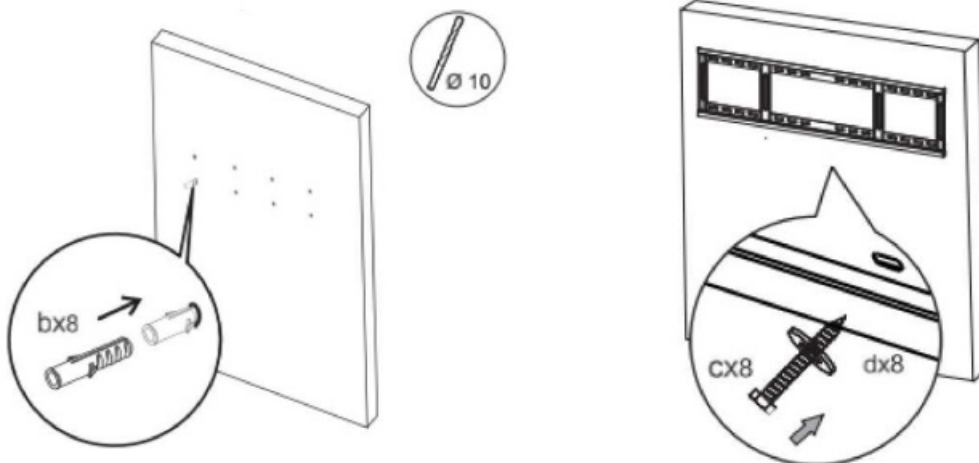

 5. Reverse-tighten the safety screw to make the top of the screw reach the second screw hole.
6. Hang the panel vertically on the bracket and finish installation.

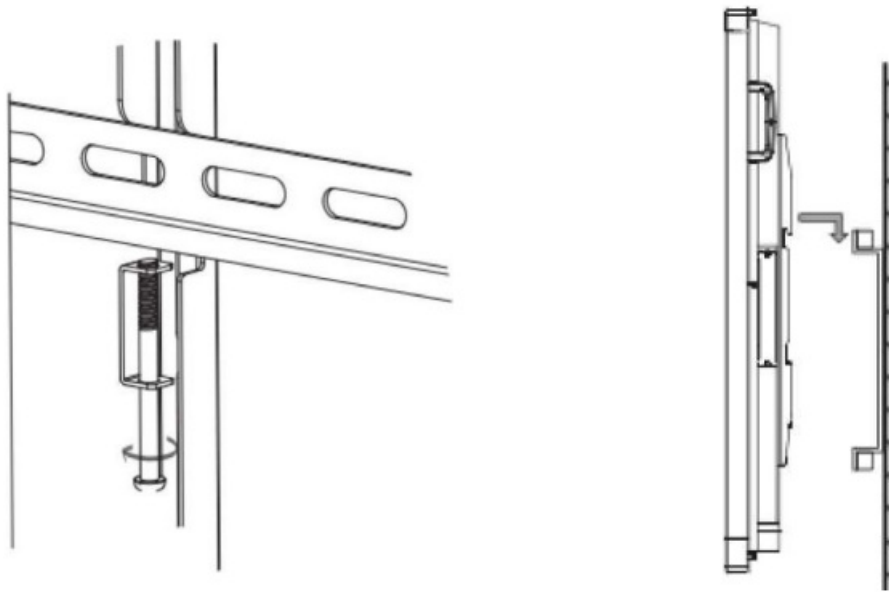


Note: This step is especially important for installation on the mobile stand. Tightening the safety screw will make the device more stable.

Note: Please keep the panel in the center of the bracket.

Reference for Wall Mounting

 The physical dimensions listed below should be taken into consideration for wall mounting. For ease of operation, maintain a proper distance between the wall and rear of the product panel.

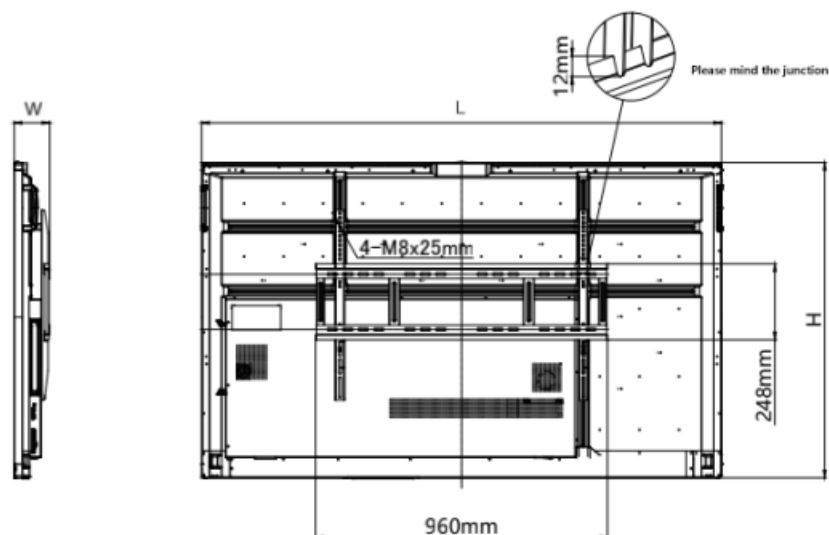


| Series | Classic | | | |
|-----------|---------|--------|--------|--------|
| Dimension | 55" | 65" | 75" | 86" |
| L | 1263mm | 1488mm | 1709mm | 1957mm |
| H | 776mm | 903mm | 1026mm | 1160mm |
| W | 118mm | 118mm | 117mm | 130mm |

NOTE: The table and diagram are for reference only.


Installing the Wireless Module

Please make sure that the following items are ready before setting up the wireless module. 1×Interactive Flat Panel

 - 1×Wireless Module SI06
- 2×Screws (CM3×6mm, Black)
- **Step 1:** Remove the Mylar on the bottom of the interactive flat panel.

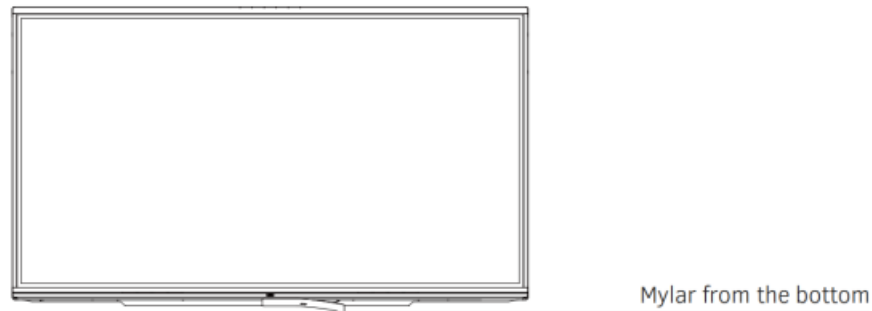

 
- Step 2: Insert the wireless module SI06 into the wireless module slot and screw securely into place.

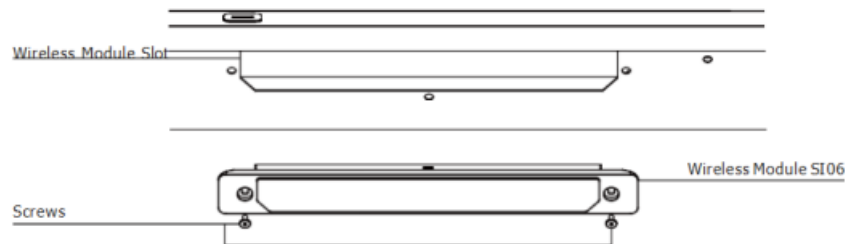


Installing the OPS/Android Module

Note: Please make sure the power is off before proceeding with the installation.

 - Step 1: Unscrew and remove the cover.
- Step 2: Prepare the OPS/Android Module.
- Step 3: Correct positioning of the modules and slots.

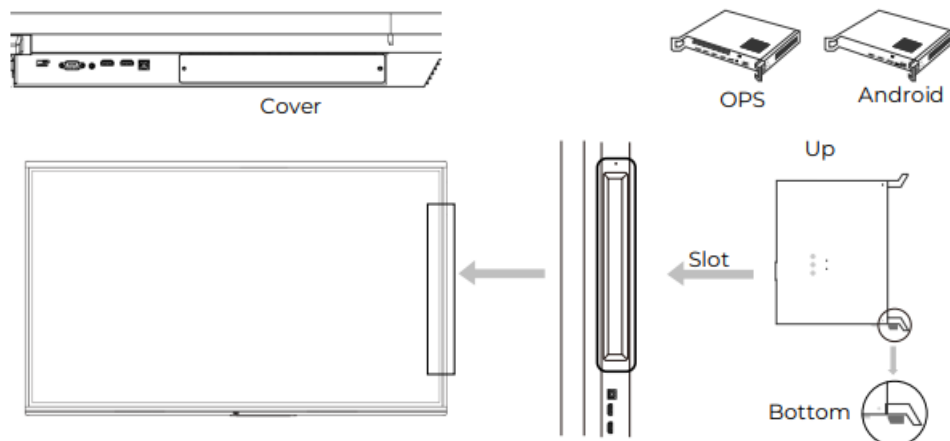


 - Step 4: Installation of OPS/Android module.

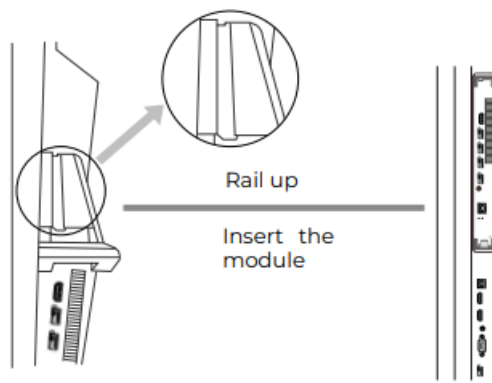


Removing the OPS/Android Module

 Note: Please make sure the power is off before proceeding with the removal.

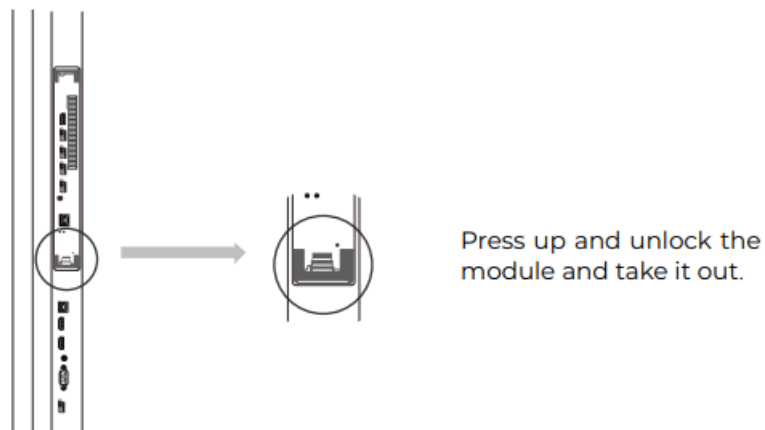


 
Turn the MAXHUB Interactive Flat Panel on and off

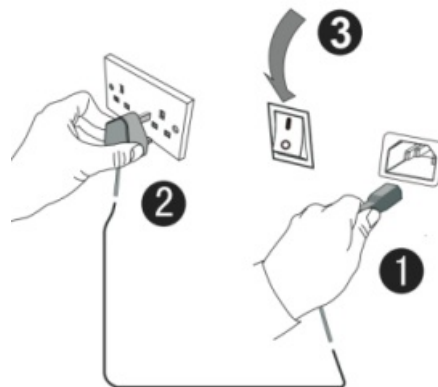

1. Plug the power cable into the power socket of the product.
2. Plug the power cable to the power supply.
3. Flip the rocker switch and press on power button to boot the product. The indicator will turn blue.

 Product Appearance Introduction

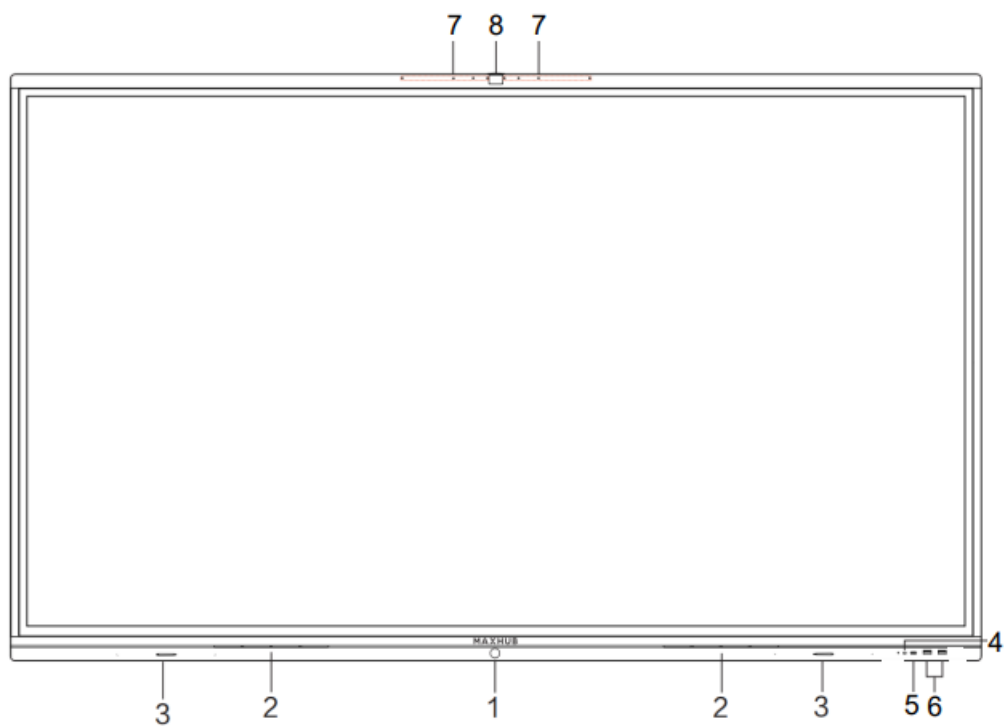


| Number | Description | Number | Description |
|--------|---|--------|-------------|
| 1 | <p> Press briefly to start the display or to switch from On to Standby Mode.</p> <p>Press and hold for 3 seconds to shut down the product.</p> | 5 | USB Type-C |
| 2 | Speaker | 6 | USB 3.0 |
| 3 | Stylus Magnet Area | 7 | Microphone |
| 4 | Infrared Receiver | 8 | 48MP Camera |

Note: USB Type-C does not support HDMI OUT function

Back Interface

 *Integrated in Interactive Flat Panel device



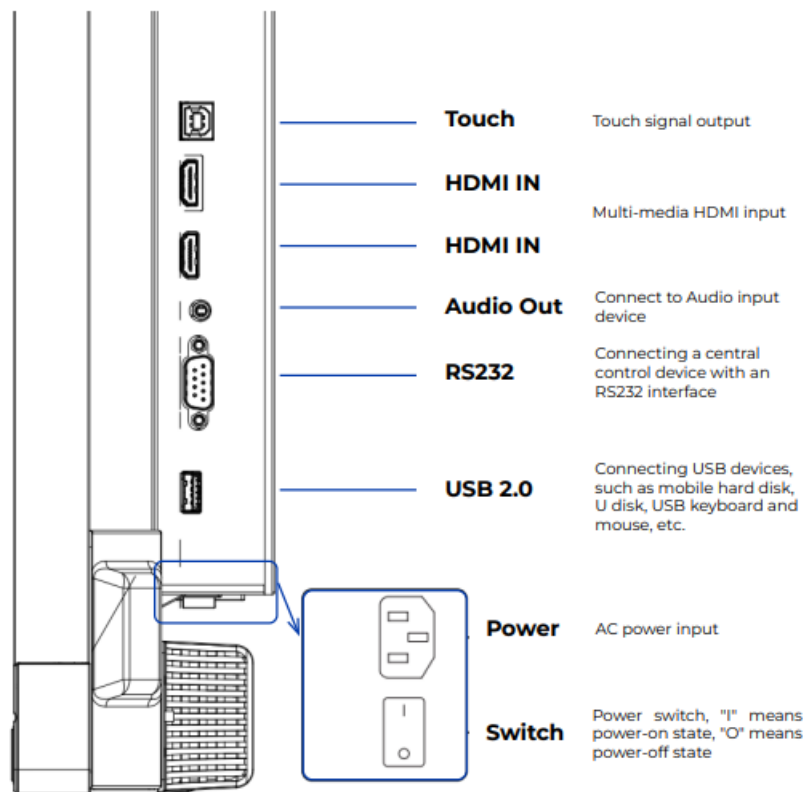


Interface function

1. HDMI signal input



   
2. External computer and touch connection

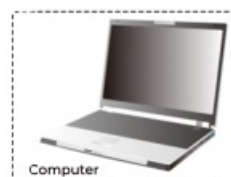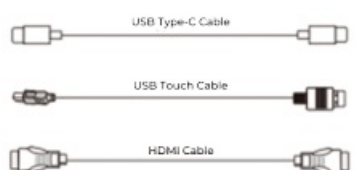


3. Audio signal output

4. RS232 device connection

 5. USB device connection

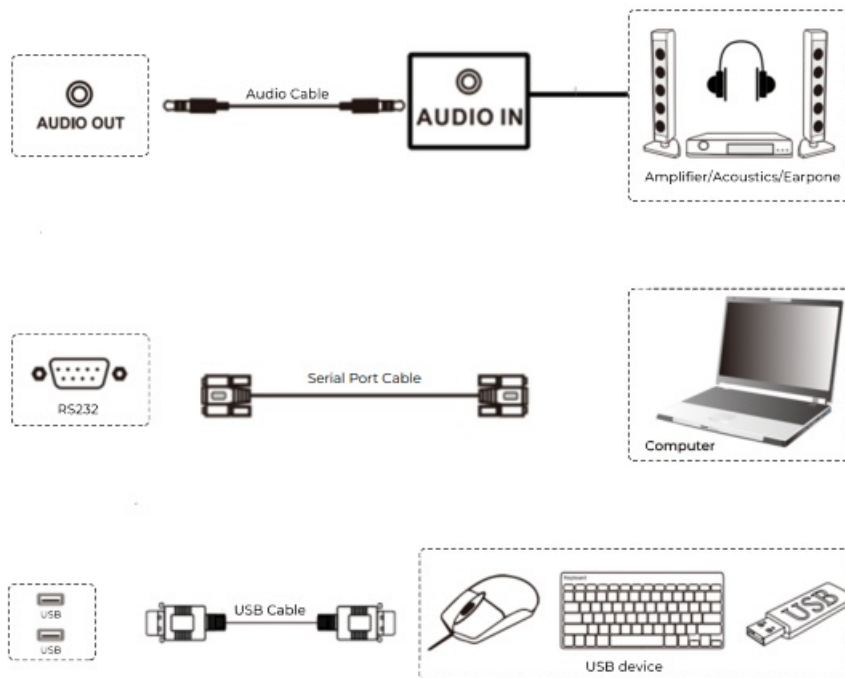

 First Start of MAXHUB Interactive Flat Panel

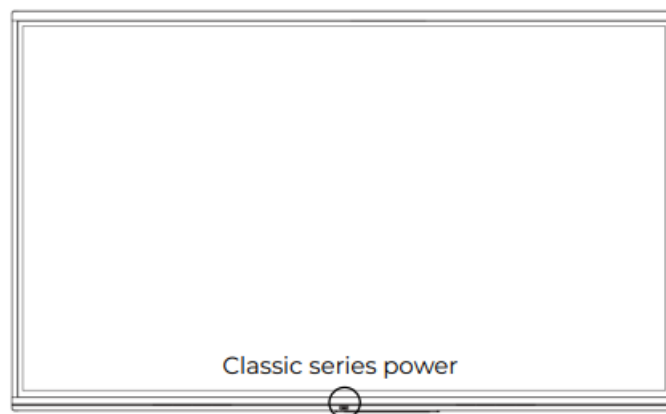

Press the power key to start the MAXHUB V6. Device is ready to be used with all the features.

Maintenance

Protecting the product from dust and moisture will help to prevent unexpected failures. Please clean the product regularly with a soft, dustless, dry cloth. Make sure to unplug the product before cleaning.

Cleaning the Screen

1. Dissolve the fabric softener or detergent in 75% alcohol.
2. Soak a piece of soft cloth in the solution.
3. Squeeze the cloth dry before use.
4. Do NOT allow the cleaning solution to drip onto other components of the product.

Cleaning the Touch Frame

1. Use dry, soft and dust-free wipes to clean the touch frame.
2. Unplug power.

3. During the stormy season or when you are not going to use the device for extended periods, please unplug the power.

Warranty

MAXHUB warrants its products to be free from defects in material and workmanship during the warranty period. If a product proves to be defective in material or workmanship during the warranty period, MAXHUB will, at its sole option, repair or replace the product with a similar product. Replacement Product or parts may include re-manufactured or refurbished parts or components. The replacement unit will be covered by the balance of the time remaining on the customer's original limited warranty. MAXHUB provides no warranty for any third-party software whether included with the product or installed by the customer, installation of any unauthorized hardware parts or components.

warranty coverage for MAXHUB products starts from the date of purchase. In order to receive warranty service, proof of purchase of the MAXHUB product is required. To obtain warranty service, please contact the MAXHUB service team.

MAXHUB Service Portal

Please Scan the QR Code to Contact Us OR log in at this address:

 
<https://www.maxhub.com/en/service-portal>

HDMI

NOTICE: The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing LLC in the United States and other countries.

- www.maxhub.com/en/
- sales@maxhub.com
- <https://www.youtube.com/c/MAXHUB>
- <https://www.facebook.com/MAXHUB.Global>
- <https://www.linkedin.com/company/maxhub-overseas/>

Documents / Resources
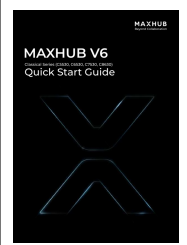
| | |
|---|--|
|  | <p>MAXHUB V6 C5530 Collaboration Display [pdf] User Guide M10279.1, M10279.2, M10279.4, M10279.3, V6 C5530 Collaboration Display, V6 C5530, Collaboration Display, Display</p> |
|---|--|

References

- [✕ MAXHUB - Beyond Collaboration](#)
- [✕ MAXHUB - Support](#)

- [User Manual](#)

Manuals+.