

MAXIM®
UHD20153T Top
Cabinet Extension



MAXIM UHD20153T Top Cabinet Extension Installation Guide

[Home](#) » [MAXIM](#) » MAXIM UHD20153T Top Cabinet Extension Installation Guide 

Contents

- [1 MAXIM UHD20153T Top Cabinet Extension](#)
- [2 Specifications](#)
- [3 Product Usage Instructions](#)
- [4 FEATURES](#)
- [5 PARTS LIST](#)
- [6 ASSEMBLY INSTRUCTIONS](#)
- [7 DIMENSION](#)
- [8 FAQ](#)
- [9 Documents / Resources](#)
 - [9.1 References](#)



MAXIM UHD20153T Top Cabinet Extension



Specifications

- **Model Numbers:** WEB346, WEB640, UHD20153T, UHD133T
- **Color Options:** White, Granite Graphite, Red
- **Dimensions:** 19.41 cm x 44.7 cm x 46.99 cm
- Mounts on top of UHD16236, UHD20143, UHD20153, UHD20133 UltraHD Tall Cabinet

Product Usage Instructions

Parts List:

 
Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department.

- (#1) Left Panel x 1 PC
- (#2) Right Panel x 1 PC
- (#3) Top Panel x 1 PC

Assembly Instructions:

 
 
 
 

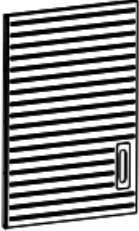 

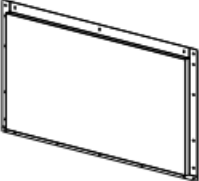 
- **Step 1:** Install Right Panel (#2) to the Top Panel (#3)
Place the Right Panel (#2) on the ground vertically. Make sure the front of the panel faces downward. Place the Top Panel (#3) next to the Right Panel (#2). Line up the screw holes, use 3 pcs of Screw F (#41) to tighten.
- **Step 2:** Install Left Panel (#1)
Place the Top Panel (#3) and Left Panel (#1) vertically. Line up the screw holes, use 3 pcs of Screw F (#41) to tighten.
- **Step 3:** Install Bottom Panel (#4)
Attach the Bottom Panel (#4) to the Left and Right Side Panels (#1 and #2). Make sure the front of the panel faces downward. Use 6 pcs Screws G (#42) to assemble the panels.
- **Step 4:** Install Back Panel (#8-A)
[Additional steps can be added as per the manual]









FEATURES

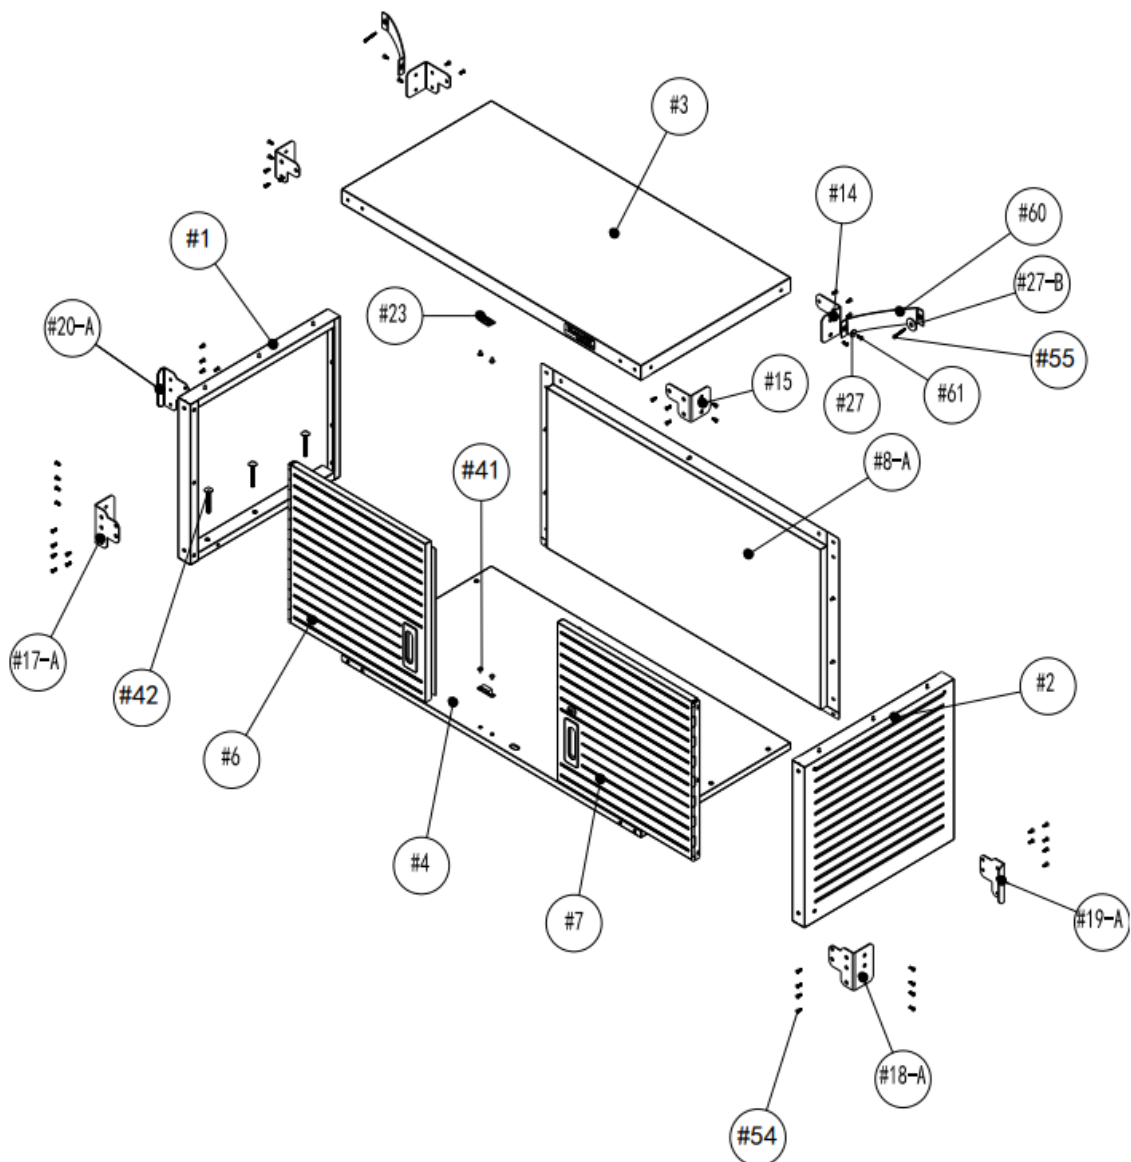






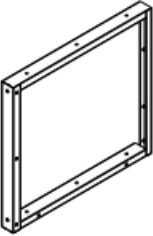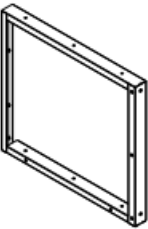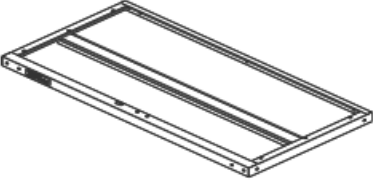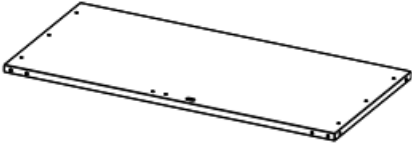

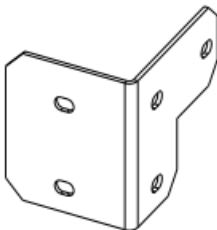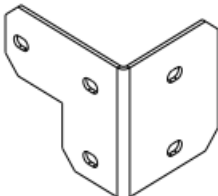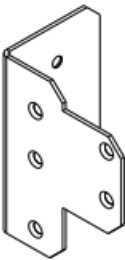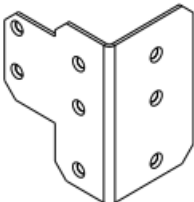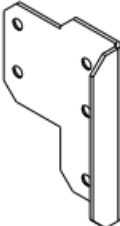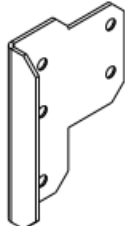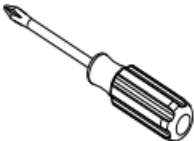        

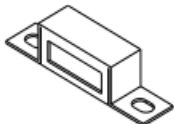PARTS LIST

Please check the parts carefully according to the parts list. If you are missing any parts, please contact our customer service department.

	
(#1) Left Panel x 1 PC	(#2) Right Panel x 1 PC
	
(#3) Top Panel x 1 PC	(#4) Bottom Panel x 1 PC
	
(#60) Mounting Strap x 2 PCS	(#6) Left Door x 1 PC
	
(#7) Right Door x 1 PC	(#8-A) Back Panel x 1 PC

	
<p>(#14) Corner Protection A x 2 PCS</p>	<p>(#15) Corner Protection B x 2 PCS</p>
	
<p>(#17-A) Left Front Bottom Corner Protection x 1 PC</p>	<p>(#18-A) Right Front Bottom Corner Protection x 1 PC</p>
	
<p>(#19-A) Right Back Bottom Corner Protection x 1 PC</p>	<p>(#20-A) Left Back Bottom Corner Protection x 1 PC</p>
	
<p>(#21) Screw Driver x 1 PC</p>	<p>(#22) KEY x 2 PCS</p>

	
(#23) Magnet x 2 PCS	(#27) WASHER (M4) x 2 PCS
	
(#27-B) WASHER (M8)x 2 PCS	(#41) Screw F (M4 x 8L) x 46 PCS
	
(#42) Screw G (M4 x 30L) x 6 PCS	(#54) Screw N (M4 x 10L) x 26 PCS
	
(#55) Screw M (M6 x 50L) x 2 PCS	(#55-A) Wall Anchor x 2 PCS
	
(#61) Screw O (M4 x 12L) x 2 PCS	

ASSEMBLY INSTRUCTIONS

 
UltraHD® Cabinet Stacker (Model No. WEB346, WEB640, UHD20153T, UHD133T)

***NOTE:** We recommend using TWO people to assemble.

TIP: A magnetic screwdriver is included for your convenience. If a power screwdriver is used, keep on a low torque setting.

1. Install Right Panel (#2) to the Top Panel (#3)

Place the Right Panel (#2) on the ground vertically. Make sure the front of the panel faces downward. Place the Top Panel (#3) next to the Right Panel (#2). Line up the screw holes, use 3 pcs of Screw F (#41) to tighten.

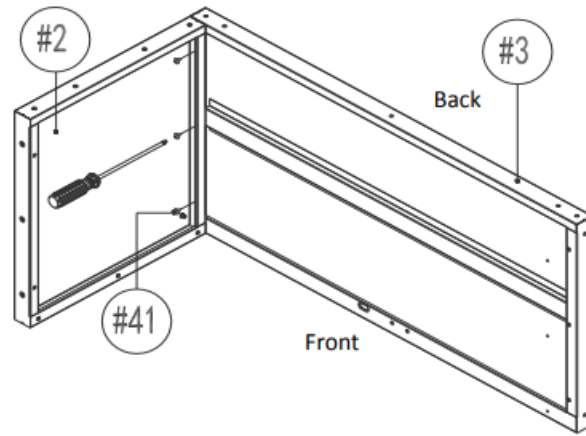


2. Install Left Panel (#1)

Place the Top Panel (#3) and Left Panel (#1) vertically. Line up the screw holes, use 3 pcs of Screw F (#41) to tighten.

3. Install Bottom Panel (#4).

 Attach the Bottom Panel (#4) to the Left and Right Side Panels (#1 and #2). Make sure the front of the panel faces downward. Use 6 pcs Screws G (#42) to assemble the panels.

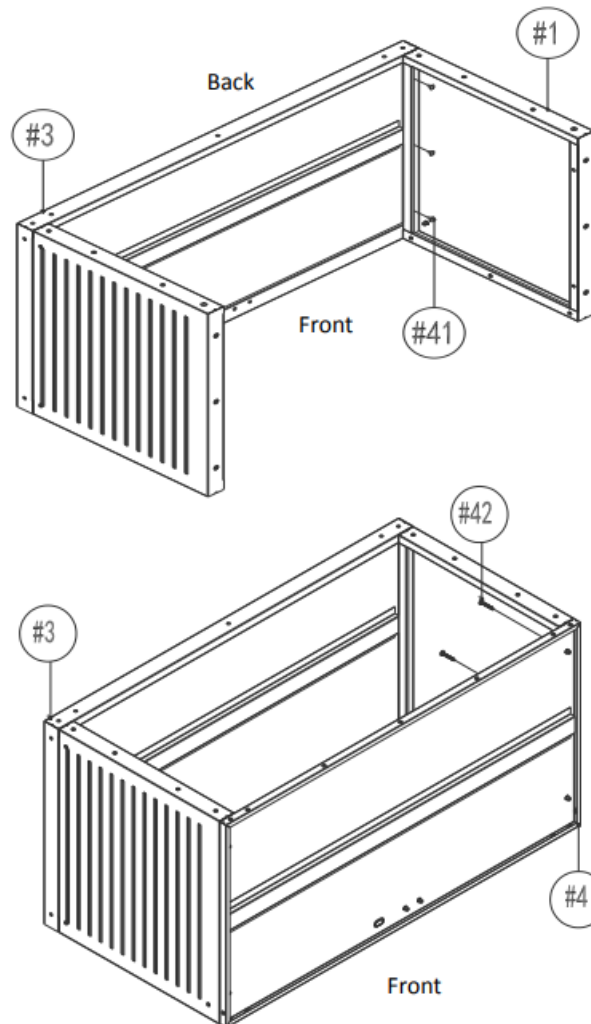


4. Install Back Panel (#8-A).

Place the Back Panel (#8-A) onto both Left and Right Side Panels (#1 and # 2) and Top and Bottom Panel (#3 and 4). Use the 10 pcs of Screw F (#41) to tighten.

5. Install Magnet (#23)

 
Use 4 pcs of Screw F (#41) to install the Magnet (#23) on the Top Panel (#3) and the Bottom Panel (#4).

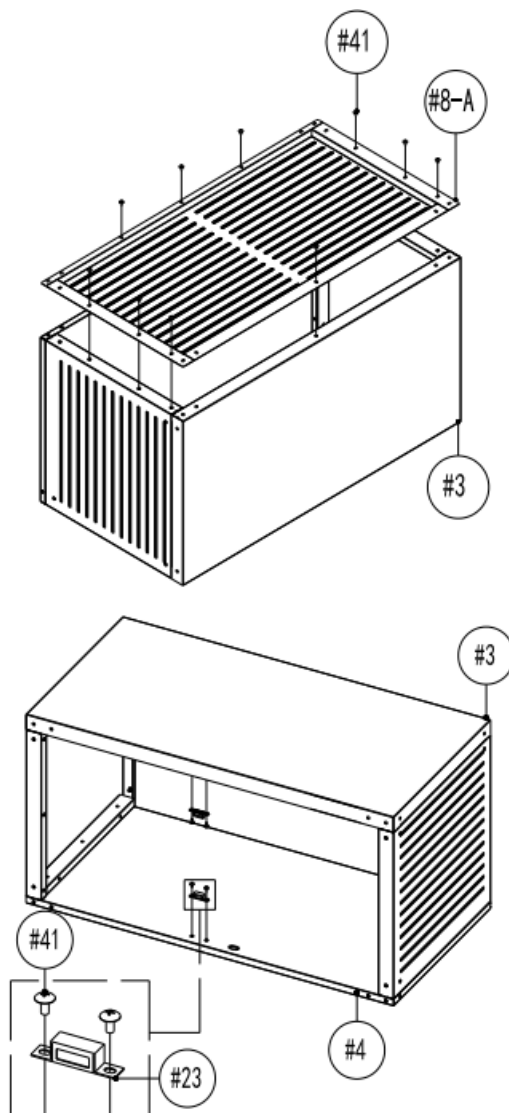

6. Install Left Door (#6)

Attach the Left Door (#6) to the Left Panel (#1). Use 3 pcs Screw F (#41) to tighten the Door Panel.

 Note: The screw holes on the door hinge have tolerance, enabling the door to be adjusted and centered in the door frame.

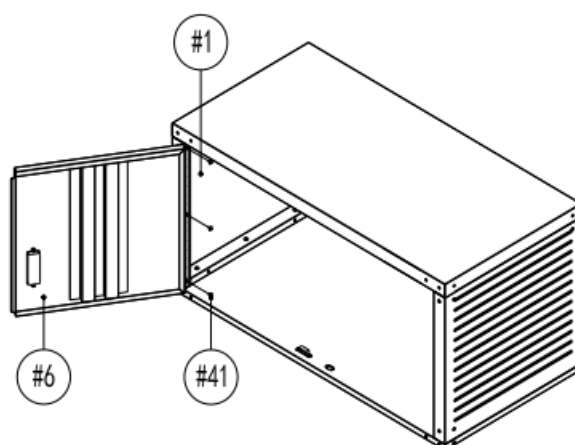

7. Install Right Door (#7)

 
Attach the Right Door (#7) to the Right Panel (#2). Use 3 pcs Screw F (#41) to tighten the Door Panel.

Note: The screw holes on the door hinge have tolerance, enabling the door to be adjusted and centered in the door frame.


8. Install the Corner Protection A&B (#14&15)

Use 20 pcs of Screws F (#41) to install the Corner Protection A and B (#14 and #15) onto the top of the cabinet.


Note: Fully tighten the screws after all the corner protections are attached.

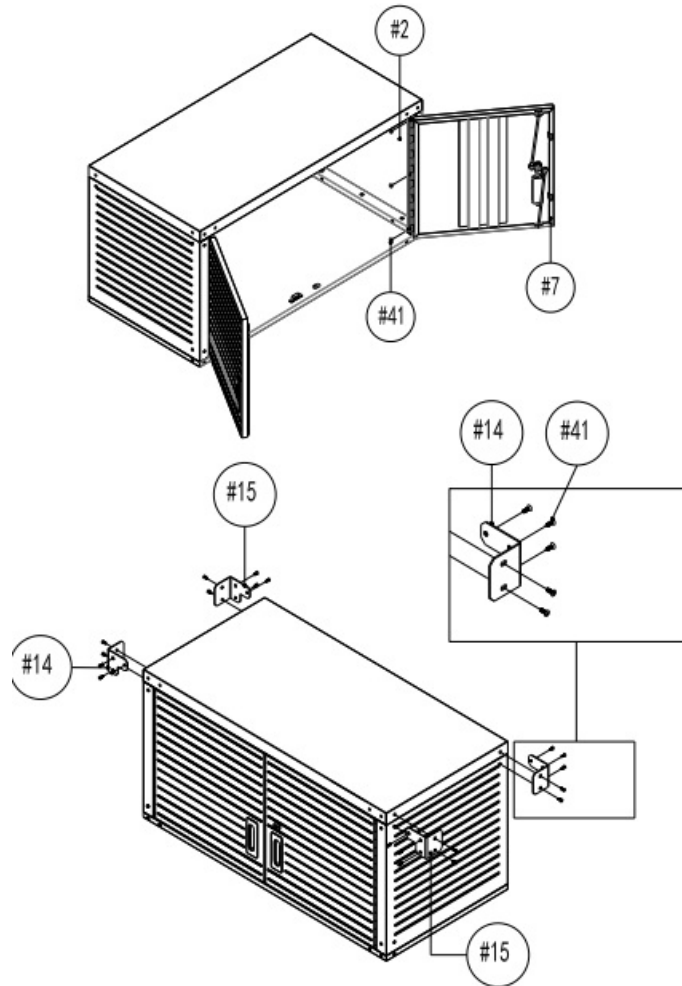

 9. Remove the top Corner Protection brackets from Model No. 16236 /20143B Tall Cabinet as the left photo shows.

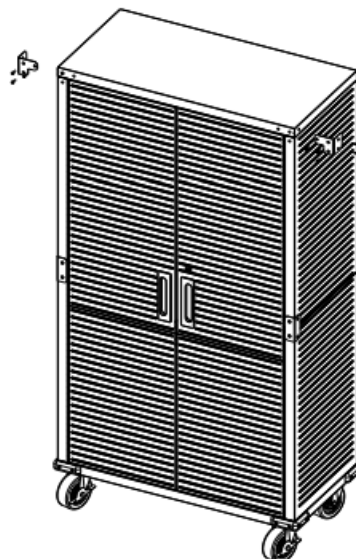


 10. Remove the 6 corner screws from the top back panel of 16236.

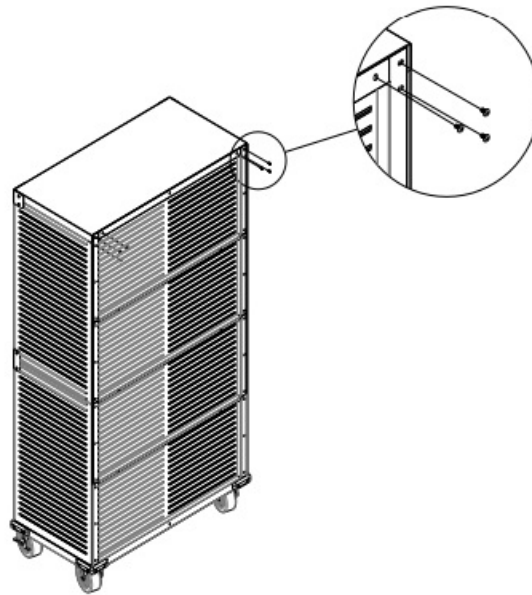


11. Attach Cabinet Stacker Model No. WEB346

 1. Place Cabinet Stacker Model No. WEB346 /WEB640 on top of 16236 / 20143B.
2. Attach the Left Front Bottom Corner Protection (#17-A), Right Front Bottom Corner Protection (#18-A), Right Back Bottom Corner Protection (#19-A), Left Back Bottom Corner Protection (#20-A) on the bottom of the cabinet, use 26 pcs of Screw N (#54) to tighten.

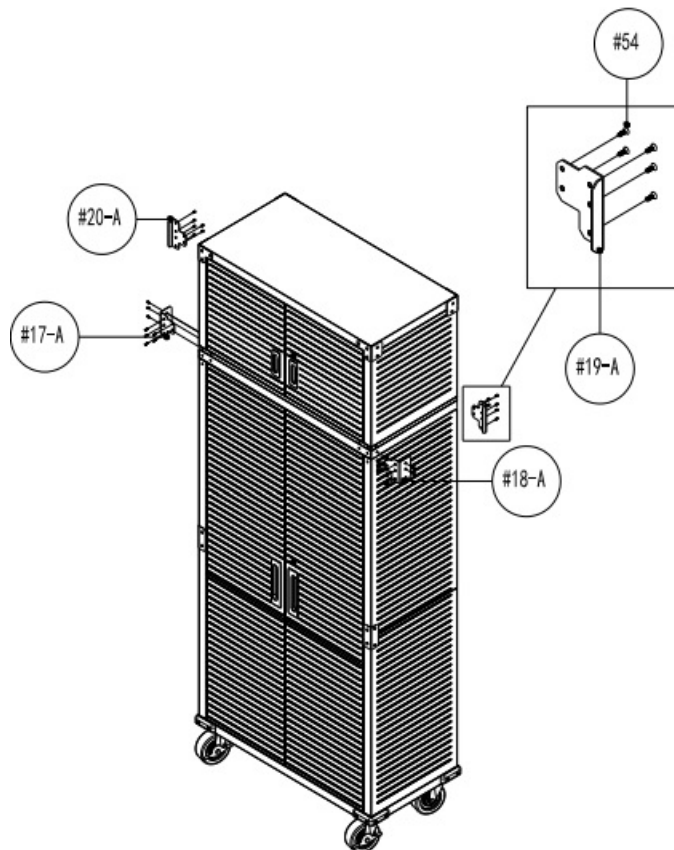

12. Install Mounting Strap (#60)

 
1. Remove 1 pc Screw F (#41) from the back corner protection.
2. Attach the Mounting Strap (#60) to the back Corner Protection brackets as the left photo shows using Screw O (#61) and Washer (#27).
3. Drill a hole in the wall with a 5/16" drill bit, insert the Wall Anchor (#55-A) into the hole.
4. Attach the other end of the Mounting Strap (#60) to the wall using Screw M (#55) and Washer (#27-B).

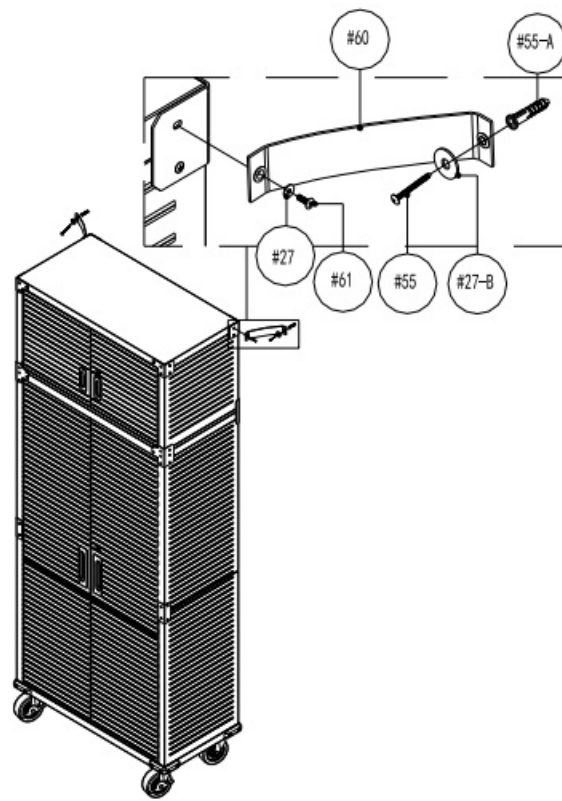

Repeat steps A through D to install the other mounting strap.

Warning: To prevent possible tipping, it is suggested that the Mounting Straps be installed. For safety, secure the mounting straps to wood studs whenever possible.

 DIMENSION

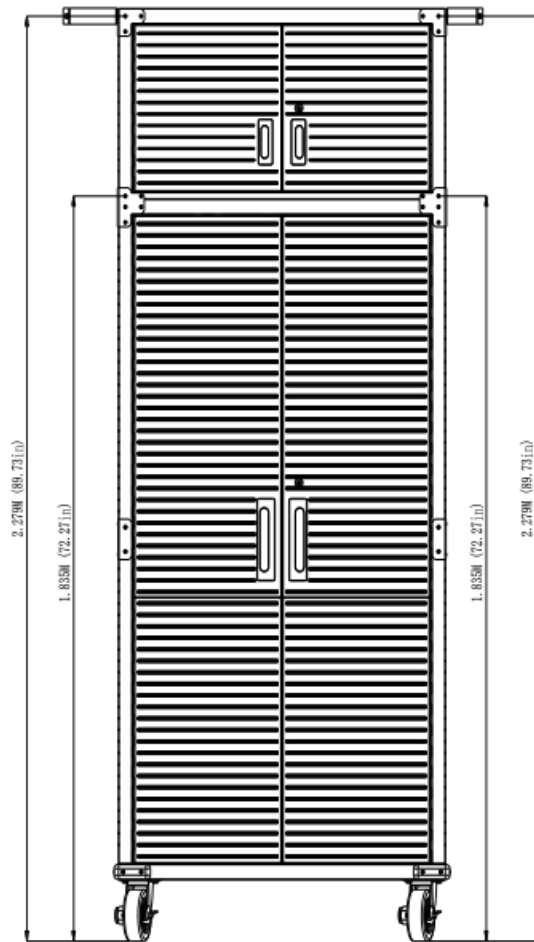

Stainless Steel Maintenance:

These parts have an UltraGuard® fingerprint-resistant finish. Do not use traditional stainless steel cleaners on this unit. Lightly wipe off once a month with clean warm water and a soft cloth (preferably a micro fiber cloth). This is the safest formula to prevent new stains from appearing over time and manage unwanted fingerprints or grease marks. Remember to always wipe in the direction of the surface grain (NEVER ACROSS) and always use a lint-free cloth. Once the surface is clean, thoroughly wipe dry with a soft absorbent cloth.

CONTACT INFORMATION

If you are missing any parts, have any questions, or need additional assistance in assembly please contact our customer service department at:


- sales@justprotools.com.au
- (02) 4721 7970
- www.justprotools.com.au

FAQ

Q: What should I do if I am missing parts?

A: If you are missing any parts, please contact our customer service department for assistance.

Documents / Resources

	<p>MAXIM UHD20153T Top Cabinet Extension [pdf] Installation Guide WEB346, WEB640, UHD20133T, UHD20153T, UHD20153T Top Cabinet Extension, UHD20153T, Top Cabinet Extension, Cabinet Extension, Extension</p>
--	--

References

-  [Just Pro Tools | Professional Toolboxes & Maxim Garage Storage Systems](#)
- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.