




maxtec R219M01 REV. C DFB Flowmeters Instruction Manual

[Home](#) » [maxtec](#) » maxtec R219M01 REV. C DFB Flowmeters Instruction Manual 



**DFB Flowmeters
DESIGNED FOR BLENDERS, DUAL TAPER
Instructions for Use**

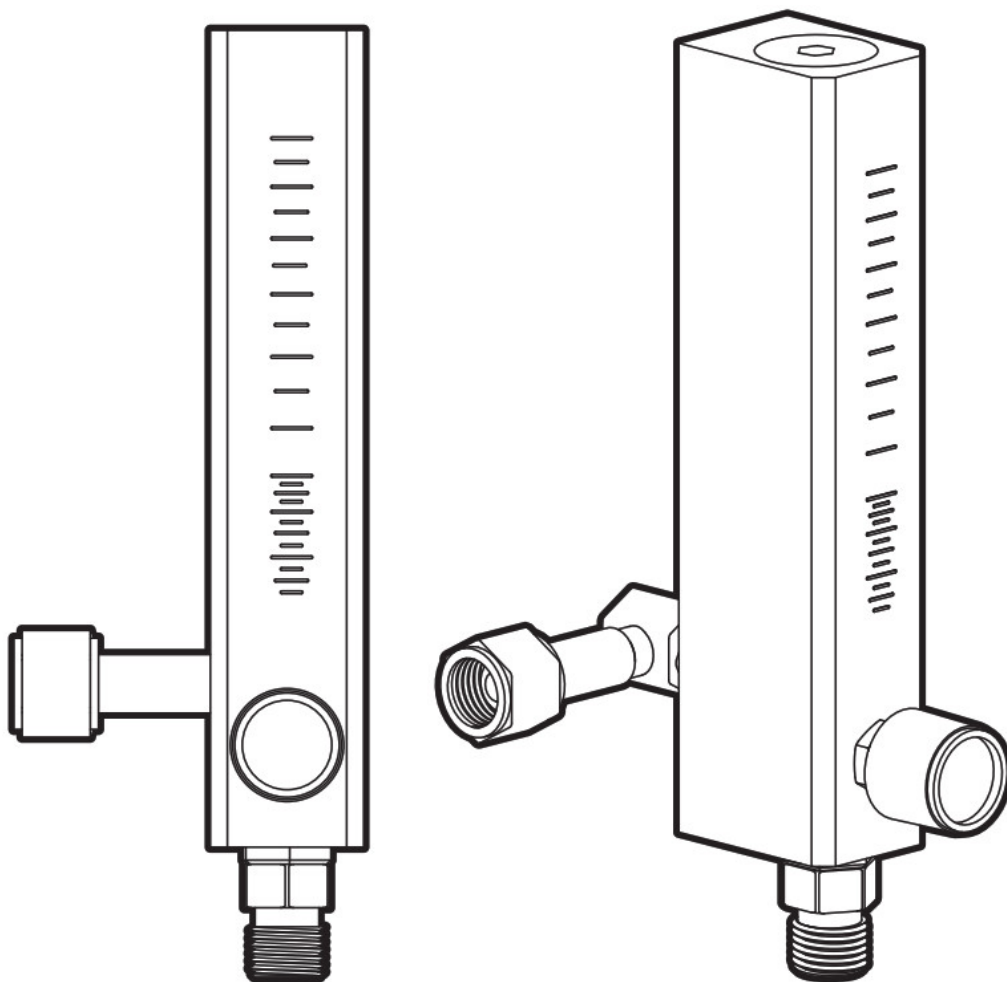

R219M01 REV. C



Maxtec
2305 South 1070 West
Salt Lake City, Utah 84119 USA

phone: (800) 748.5355
fax: (801) 973.6090
email: sales@maxtec.com
web: www.maxtec.com

CE-0123

Contents

- 1 WARRANTY
- 2 Symbol Guide
- 3 PRODUCT OVERVIEW
- 4 SPECIFICATIONS
- 5 Transport/Storage Requirements
- 6 OPERATING INSTRUCTIONS
- 7 TROUBLESHOOTING
- 8 RECOMMENDED MAINTENANCE
- 9 Documents / Resources
 - 9.1 References
- 10 Related Posts

WARRANTY

Under normal operating conditions, Maxtec warrants the Acrylic Flowmeters to be free from defects of workmanship or materials for the following period:

- a) Acrylic Housing A lifetime of the product
- b) Needle Valve Five (5) years from receipt
- c) All other parts not listed Two (2) years from receipt

Warranty does not cover breakage/abuse.






These warranties are from the date of receipt, provided that the product is properly operated and maintained in accordance with Aztec's operating instructions. based on Maxtecproduct evaluation, Maxtec's sole obligation under the foregoing warranty is limited to making replacements, repairs, or issuing credit for equipment found to be defective. This warranty extends only to the buyer purchasing the equipment directly from Maxtec or through Maxtec's designated distributors and agents as new equipment. Routine maintenance items, such as o-rings, are excluded from the warranty. Maxtec and any other subsidiaries shall not be liable to the purchaser or other persons for incidental or consequential damages or equipment that has been subject to abuse, misuse, misapplication, alteration, negligence, or accident. These warranties are exclusive and in lieu of all other warranties, expressed or implied, including the warranty of merchantability and fitness for a particular purpose. For product warranty returns, please contact Maxtec Customer Service for a Returned Materials Authorization (RMA).



WARNINGS






- ◆ This manual instructs a professional to install and operate the flowmeter. This is provided for your safety and to prevent damage to the flowmeter. If you do not understand this manual, DO NOT USE the flowmeter and contact your provider.
- ◆ Use flowmeters only for their "Intended Use" as described in this manual.
- ◆ ALWAYS confirm prescribed flow before administering to patient and monitor flow on a frequent basis.
- ◆ Flowmeters may contain magnetic, ferrous material that may affect the results of an MRI.
- ◆ Read this User Manual before installing or operating the flowmeter.




To Reduce the Risk of Fire or Explosion:

- ◆ ALWAYS follow ANSI and CGA standards for Medical Gas Products and flowmeters and Oxygen Handling.
-  DO NOT use or store oils, greases, organic lubricants or any combustible materials on or near this flowmeter.
 -  DO NOT use near any type of flame or flammable/explosive substances, vapors or atmosphere.
 -  DO NOT connect to source pressure greater than 100 psi.
 -  DO NOT disassemble the flowmeter while pressurized.
 -  DO NOT smoke in an area where oxygen is being administered.


















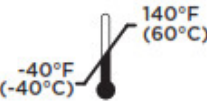

CAUTIONS

- ◆ Use caution to avoid cross-threading fittings during installation.
 - ◆ Always use a backing wrench when installing or removing connectors.
 - ◆ Flowmeters must be operated with the Flow Tube in a vertical, upright position.
 - ◆ Only personnel instructed and trained in its use should operate this flowmeter.
 - ◆ Ensure all connections are tight and leak-free.
 - ◆ Only use an oxygen-safe leak detector.
 - ◆ Only trained medical professionals should operate the flowmeter.
-  DO NOT drop the flowmeter.
 -  DO NOT autoclave.
 -  DO NOT gas sterilize with EtO (Ethylene Oxide).
 -  DO NOT clean with aromatic hydrocarbons.
 -  DO NOT immerse the flowmeter in any kind of liquid. This will void the warranty.

-  DO NOT use if damaged. Inspect the flowmeter for visual damage before each use.
-  DO NOT over-tighten the knob when turning it off. This will cause damage to the flowmeter.
-  DO NOT over-tighten any threaded connectors; the body may crack and cause leaks.
 - ◆ The flowmeter has been specifically calibrated for use on the outlet of an air/oxygen blender. The accuracy of the flow rates will be affected if the flowmeter is used in any other way
 - ◆ Gas temperatures other than 70° F (21°C) may affect the accuracy of the indicated flow.
 - ◆ Attaching accessories to the outlet (which may increase resistance to outlet flow) may change the indicated flow but will not affect the accuracy of the flow.

Symbol Guide

	Federal law (USA) restricts this device to sale on or by the order of a physician		Follow instructions for use.
	Authorized Representative in the European Community		Do Not
	Manufacturer		Contains no Polyvinyl Chloride
	Date of Manufacture		Medical Device
	Storage Temperature Range		Use No Oil
	MR Unsafe		Warning
	Catalog Number		Lot Number
	Made in USA		Humidity
	Not Manufactured with Natural Rubber Latex		

PRODUCT OVERVIEW

Description

Maxtec DFB flowmeters are designed and calibrated to provide increased accuracy compared to standard flowmeters when used on-air/oxygen blender outlets. By utilizing dual-scale graduations, the flowmeters provide two flowmeters in one for increased accuracy at lower flows. The flowmeters feature high-quality acrylic block bodies and precision valves. Each flowmeter comes equipped with a DISS outlet and DISS adapter for neat and compact attachment to the side of the blender.

Intended use

The flowmeter is intended for use as a secondary flowmeter for an air/oxygen blender, such as the Maxtec MaxBlend 2, and is to be used by physicians, respiratory therapists and other authorized hospital personnel to administer selected doses of medical gases to a patient.

SPECIFICATIONS

Flow Range Accuracy Chart

MODEL	FLOW	GRADUATIONS	ACCURACY
R219P99-400	0-3 LPM	0.1 (0.1-1) LPM 0.5 (1-3) LPM	± 0.5 LPM
R219P79-400	0-15 LPM	0.25 (0.5-3) LPM 1 (5-15) LPM	0.5-3: ± 0.5 LPM 5-15: ± 10% of indicated value
R219P88-400	0-30 LPM	0.25 (0.5-3) LPM 2.5 (5-30) LPM	0.5-3: ± 0.5 LPM 5-30: ± 10% of indicated value
R219P87-400	0-70 LPM	1 (2-15) LPM 5 (15-70) LPM	2-4: ± 0.5 LPM 5-70: ± 10% of indicated value

Transport/Storage Requirements

-40 °F (-40 °C) to 140 °F (60 °C)

NOTE: Storage/transport outside the specified range may cause damage to the flowmeter.

The above flowmeter models are calibrated for air/oxygen blenders at 70°F (21°C) and standard atmospheric pressure with inlet pressures at 50 PSI and 60% O₂. Specifications are subject to change without prior notice.

OPERATING INSTRUCTIONS

General Operation

1. Remove the air and oxygen line pressure to the air/oxygen blender and ensure the valve to the flowmeter is closed.
2. Apply a thread sealant that is appropriate for medical oxygen use to the male NPT thread of the supplied 90 degrees NPT to the DISS adapter.
3. Use a backing wrench to secure the female NPT fitting on the back of the flowmeter while hand-tightening the male NPT thread of the 90 degrees NPT to DISS adapter into the female NPT fitting.
4. With the backing wrench still in place, tighten the 90 degrees NPT to DISS adapter fitting at least one full revolution. Continue to tighten the fitting until it is aligned properly for the desired attachment configuration on the air/oxygen blender output.
5. Attach the flowmeter to the air/oxygen blender output using the DISS connection. The flowmeter must be mounted vertically for accurate measurements.
6. Restore pressure to the air/oxygen blender and verify that the float ball is at the very bottom of the flow tube.
7. NOTE: If the float is not resting at the bottom of the flow tube, the product is leaking; consult the "TROUBLESHOOTING" Section 4.0.
8. Adjust flow:
To increase- Turn the knob counterclockwise

To decrease- turn the knob clockwise

9. Set the flow by aligning the center of the float ball with the indicator lines on the flow tube. Adjusting flow beyond the last calibrated indicator line will result in an undetermined flow.

TROUBLESHOOTING

Troubleshooting Table

PROBLEM	CAUSE	REMEDY
Will not shut off	Leak Defective valve	Consult your provider or Maxtec
Sticking float ball or unable to set the desired flow	Debris in flow tube	
The knob will not turn	Valve seized	

RECOMMENDED MAINTENANCE

Cleaning Instructions

- Depressurize and disconnect all connections before cleaning.
- Clean exterior surfaces of the flowmeter with a cloth dampened with a mild detergent and water.
- Wipe dry with a clean cloth.



CAUTION: Do Not Autoclave




2305 South 1070 West Salt Lake City, Utah 84119

(800) 748-5355

www.maxtec.com

Documents / Resources

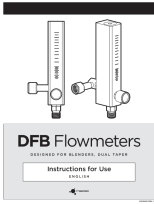	<p>maxtec R219M01 REV. C DFB Flowmeters [pdf] Instruction Manual DFB Flowmeters, R219M01 REV. C</p>
---	---

References

-  [Maxtec | The leader in oxygen analysis and delivery products](#)

Manuals+