

Maxtop NVR Wi-Fi Camera System User Guide

Home » maxtop » Maxtop NVR Wi-Fi Camera System User Guide 🖫

Contents

- 1 Maxtop NVR Wi-Fi Camera System
- 2 Before Installation
- 3 Applications
- **4 Safety Instructions**
- 5 Important Safeguard
- **6 General Precautions**
- 7 View on your TV, or Monitor
- **8 Adding Cameras**
- 9 View on Your Mobile Devices (iOS / Android)
- 10 How to Set up Motion Detection Alerts on the App?
- 11 View on Your Web Browser: Internet Explorer
- 12 How to Install a Hard Drive Disk (HDD)
- 13 Contact Us
- 14 Compliance Details
- 15 FCC Warning:
- 16 FAQs
- 17 Documents / Resources
 - 17.1 References
- **18 Related Posts**





Thank you for choosing us.

Before Installation

It is highly recommended that all products and components be tested prior to installation.

Applications

If your NVR does not include a built-in hard drive (Check your Order Details), you may install one of your own, so you can get it to record. By connecting the NVR to the internet, you can view the cameras anywhere anytime.

Tech Support

For products introduction & specifications, please visit <u>www.isansco.com</u>. For FAQ, troubleshooting, or customer support, email us at <u>support@isansco.com</u>, we guarantee a reply within 24 hours.

More Contact Details

• Email: support@isansco.com

• Facebook: www.facebook.com/sanscodirect

• Chat via Messenger: m.me/sanscodirect

Safety Instructions

CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN **CAUTION**: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

DANGEROUS VOLTAGE:

The lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclo- sure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

ATTENTION:

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

Product not intend for use by children under 8 years old
Keep the device and its cord out of the reach of children under 8 years old
Never leave the device unattended when connected to a power supply

If the supply cord is damaged, the appliance should be scrapped or have the cord replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard

Important Safeguard

In addition to the careful attention devoted to quality standards in the manufacture process of your video product, safety is a major factor in the design of every instrument. However, safety is your responsibility too. This sheet lists important information that will help to assure your enjoyment and proper use of the video product and accessory equipment. Please read them carefully before operating and using your video product

Installation

- 1. Read and Follow Instructions All the safety and operating instructions should be read before the video product is operated.
- 2. Retain Instructions The safety and operating instructions should be retained for future reference.
- 3. Heed Warnings Comply with all warnings on the video product and in the operating instructions.
- 4. Polarization Do not defeat the safety purpose of the polarized or grounding-type plug. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 5. Power Sources This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your location, consult your video dealer or local power company.
- 6. Overloading Do not overload wall outlets of extension cords as this can result in the risk of fire or electric shock. Overloaded AC outlets, extension cords, frayed power cords, damaged or cracked wire insulation, and broken plugs are dangerous. They may result in a shock or fire hazard. Periodically examine the cord, and if its appearance indicates damage or deteriorated insulation, have it replaced by your service technician.
- 7. Power-Cord Protection Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the video product.
- 8. Ventilation Slots and openings in the case are provided for ventilation to ensure reliable operation of the video product and to protect it from overheating. These openings must not be blocked or covered. The openings should never be blocked by placing the video equipment on a bed, sofa, rug, or other similar surface. This video

product should never be placed near or over a radiator or heat register. This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the video product manufacturer's instructions have been followed.

- 9. Attachments Do not use attachments unless recommended by the video product manufacturer as they may cause a hazard.
- 10. Camera Extension Cables Check the rating of your extension cable(s) to verify compliance with your local authority regulations prior to installation.
- 11. Water and Moisture Do not use this video product near water. For example, near a bath tub, wash bowl, kitchen sink or laundry tub, in a wet basement, near a swimming pool and the like.
 - Caution: Maintain electrical safety. Power line operated equipment or accessories connected to this unit should bear the UKCA mark on the accessory itself and should not be modified so as to defeat the safety features. This will help avoid any potential hazard from electrical shock or fire. If in doubt, contact qualified service personnel.
- 12. Accessories Do not place this video equipment on an unstable cart, stand, tripod, or table. The video equipment may fall, causing serious damage to the video product. Use this video product only with a cart, stand, tripod, bracket, or table recommended by the manufacturer or sold with the video product. Any mounting of the product should follow the manufacturer's instructions and use a mounting accessory recommended by the manufacturer.

Service

- 13. Servicing Do not attempt to service this video equipment yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.
- 14. Conditions Requiring Service Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions.
 - When the power supply cord or plug is damaged.
 - If liquid has been spilled or objects have fallen into the video product.
 - If the video product has been exposed to rain or water.
 - If the video product does not operate normally by following the operating instructions. Adjust only those
 controls that are covered by the operating instructions. Improper adjustment of other controls may result
 in damage and will often require extensive work by a qualified technician to restore the video product to
 its normal operation.
 - If the video product has been dropped or the cabinet has been damaged.
 - When the video product exhibits a distinct change in performance. This indicates a need for service.
- 15. Replacement Parts When replacement parts are required, have the service technician verify that the replacements used have the same safety characteristics as the original parts.
- 16. Safety Check Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks recommended by the manufacturer to determine that the video product is in safe operating condition.
- 17. Wall or Ceiling Mounting The cameras provided with this system should be mounted to a wall or ceiling only as instructed in this guide, using the provided mounting brackets.
- 18. Heat The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

Use

- 19. Cleaning Unplug the video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.
- 20. Product and Cart Combination Video and cart combination should be moved with care. Quick stops,

- excessive force, and uneven surfaces may cause the video product and car combination to overturn.
- 21. Object and Liquid Entry Never push objects for any kind into this video product through openings as they may touch dangerous voltage points or "short-out" parts that could result in a fire or electric shock. Never spill liquid of any kind on the video product.
- 22. Lightning For added protection for this video product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and power line surges.

General Precautions

- 1. All warnings and instructions in this manual should be followed.
- 2. Remove the plug from the outlet before cleaning. Do not use liquid aerosol detergents. Use a water dampened cloth for cleaning.
- 3. Do not use this unit in humid or wet places.
- 4. Keep enough space around the unit for ventilation. Slots and openings in the storage cabinet should not be blocked.
- 5. During lightning storms, or when the unit is not used for a long time, disconnect the power supply, antenna, and cables to protect the unit from electrical surge.

This equipment has been certified and found to comply with the limits regulated by FCC, EMC, and LVD. Therefore, it is designated to provide reasonable protection against interference and will not cause interference with other appliance usage.

However, it is imperative that the user follows this manuals guideline to avoid improper usage which may result in damage to the unit, electrical shock and fire hazard injury In order to improve the feature functions and quality of this product, the specifications are subject to change without notice from time to time.


Get Started – Connecting Your System

■ Connecting Your Cameras

Connect each camera to the wall socket using the power adapter



■ Connecting Your NVR

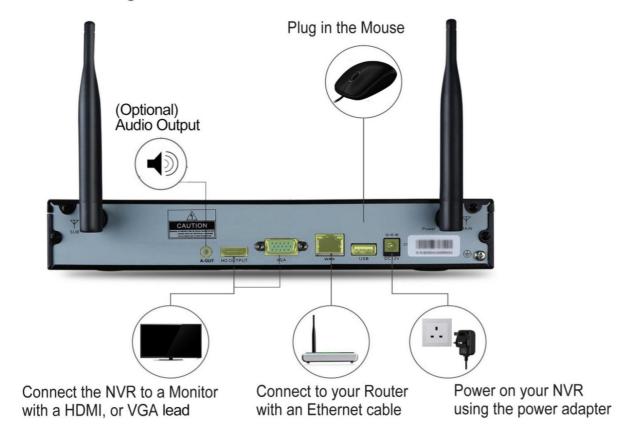


- 1. Step 1. [Important] Properly install the antennas for the cameras. (It's recommended to place the antenna vertically). And Power up the cameras by connecting them to the electrical sockets using their respective power supplies (12V 1A)
- 2. Step 2. Connect the NVR to the electrical socket using its power supply (12V 2A/3A)
- 3. Step 3. Connect the NVR to a HD monitor (Res. at least 1920x1080p) with either a HDMI or VGA lead (not included). Do not use laptop, or iMac as a monitor!
- 4. Step 4. Plug the USB mouse (included) into the USB port at the rear panel of the NVR.


Optional: Connect the NVR to your Router via a Network Cable (if you want to remotely view the systems over internet)

View on your TV, or Monitor

Setup Wizard (Guide)


Upon boot-up, you will be asked whether to start the setup wizard (Guide), or Skip it. If you choose to start, you will

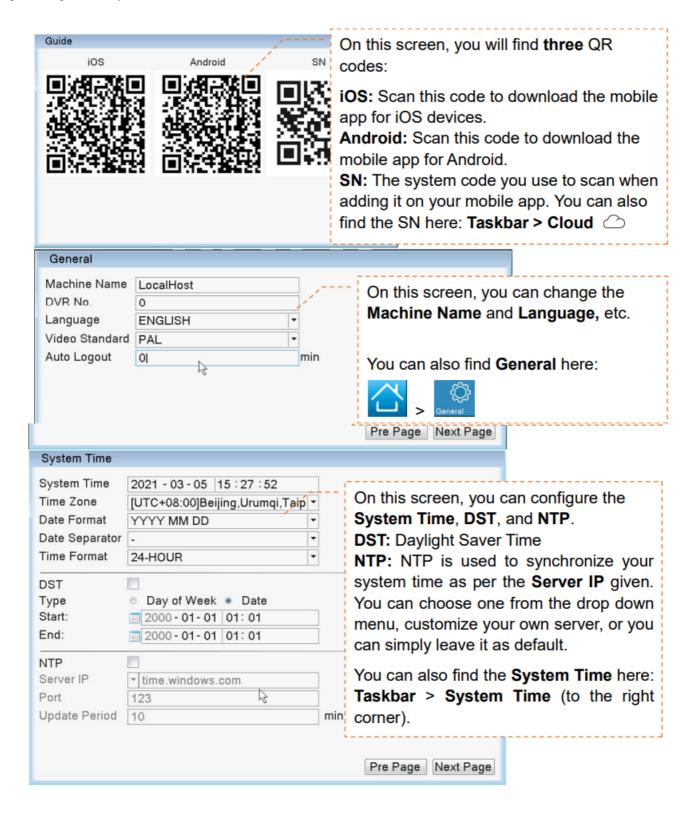

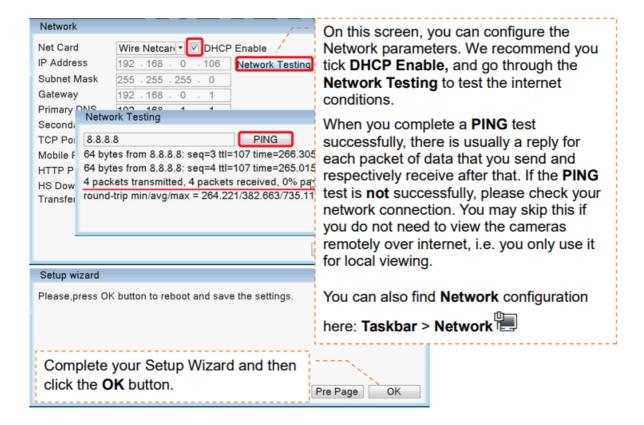


System Login


Once you click the OK button, you will enter the System Login screen below. If you previously skip the above Setup Wizard, you will enter the below screen directly. If the System Login screen does not come up, you may right click you mouse, and then choose Camera, which will also take you to the System Login screen, see below:

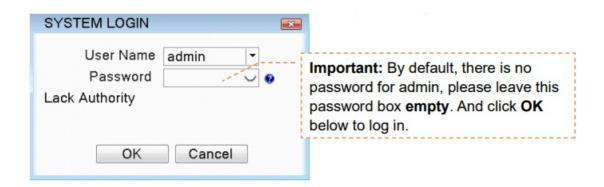

Adding Cameras

After login, you might find it blank on your screen after you login. See below:

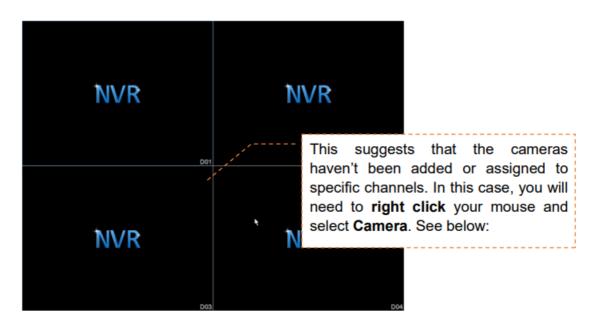

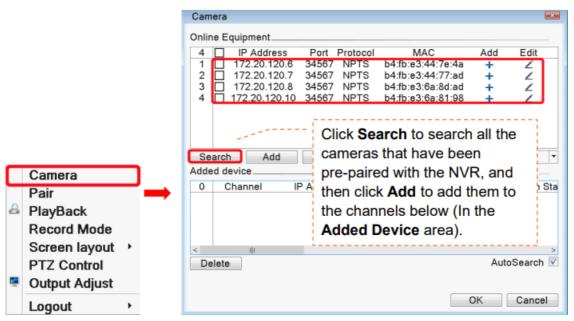



Live View

Once you have added all the cameras, you will see the screen below:



What's the Pair Function? When Do You Use it?

- Add extra cameras to your system.
- Re-pair the camera to the NVR if connection fails: Firstly delete it first from the Added Device area, and then repair it to any vacant channel again.

How to Use the Pair Function?






- 1. Step 1. Power up the camera and NVR by connecting them to their electrical sockets Step 2. Connect the camera to the NVR via Ethernet ports using a network cable. Skip this step if there is no Ethernet port on the camera.
- 2. Step 3. Long press the Reset button on the camera cable and hold it. Skip this step if there is no Reset button on the camera cable.
- 3. Step 4. On the NVR live view screen, right click > Pair. It will show up as Pairing. Step 5. The camera will then be automatically connected to the NVR, and a picture will show up on the screen, which means the paring is successful.

Tips: You may reboot your NVR if the camera does not show up on the screen

Set up Motion Detection Recording (HDD Required)

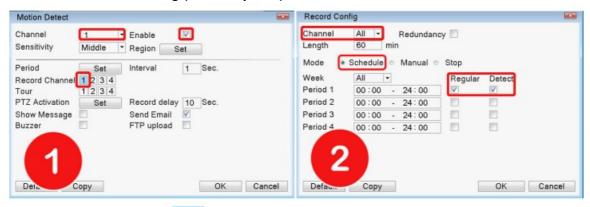

Step 1: On your TV/Monitor, click

Alarm > Motion Detect

Channel: 1 (Repeat on Channel 2, 3, 4)

• Enable: Check (Repeat on Channel 2, 3, 4)

• Record Channel: 1 (Repeat on Channel 2, 3, 4)

• Send Email: Check it if you want it to notify you by email once motion is detected.

Step 2: On your TV/Monitor, click

Record Config

· Channel: All

· Mode: Schedule

· Regular, Detect: Check both

Set up Email Notifications (Gmail)

Make sure your NVR is connected to your router via a network cable

The NAT Status is Connected (check it here: click



Version > NAT Status)



If Mail Testing is not successfully, you can troubleshoot per below:

 
- On your Gmail Account, go to Security > Allow less secure app access (Turn it on).
- On your Gmail, go to Settings > Forwarding and POP/IMAP > IMAP Access > Enable IMAP
- Try the other mailbox (We don't guarantee compatibility of all emails. We recommend either Hotmail or Outlook: Refer to FAQ for more details).


View on Your Mobile Devices (iOS / Android)

Get Started

Make sure your NVR is connected to your router via an Ethernet cable (Network Indicators on Your NVR: Blinking Amber & Solid Green)

The NAT Status is Connected (check it here: Click




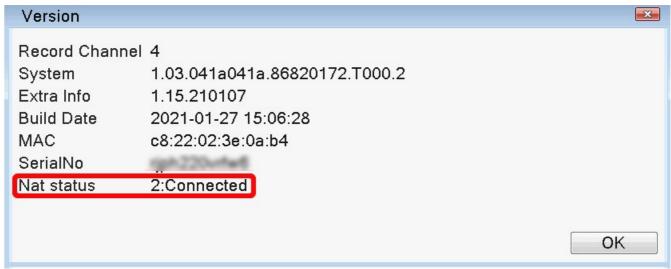

Where to Download the Mobile App?



Once you have downloaded the app, open it and sign up a TSEye account.

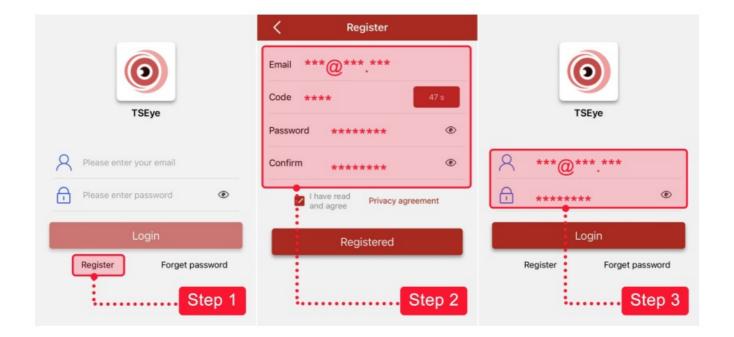

- 1. Step 1: Press Register to sign up an account
- 2. Step 2: Fill in the details, and press Registered
- 3. Step 3: Once you've registered successfully, press Login




- 4. Step 4: Press the top right icon + to add the device
- 5. Step 5: Choose XVR/NVR
- 6. Step 6: Create a name for your device. Fill in (or scan) the device's Cloud ID**, and enter the Password***, then press Add Device.

NOTE: Find more details about Cloud ID and Password below:

** Where do I find device's Cloud ID


You can find the Cloud ID in the following place.

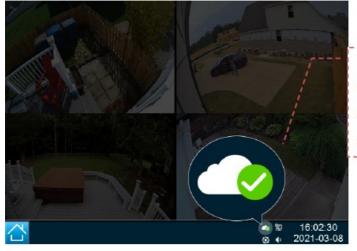

On your Monitor's taskbar, click and look for **Device ID**, or **SN** on the screen it pops up.

*** Password


By default, there is no password, so you can leave it empty, if you set a password to the device previously, please make sure to enter it correctly.

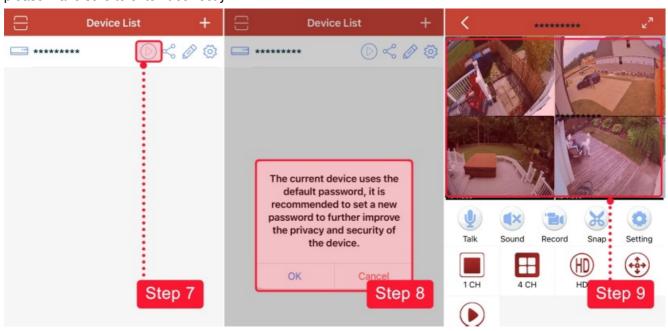

- 7. Step 7: Press the Play icon to watch the live video
- 8. Step 8: You might be asked to change the password for the device if you have not set up one yet. You can choose OK to change your password, or Cancel to still leave the password empty (by default)
- 9. Step 9: Live video play for the cameras

How to Set up Motion Detection Alerts on the App?

1.

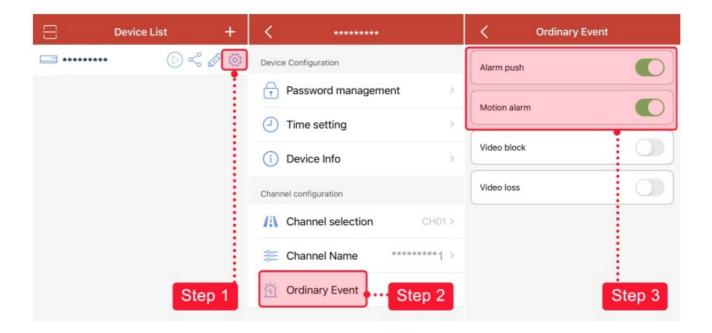

Step 1: On your App (TSEye), go to Device List and tab on to go to sett

2. Step 2: Choose Ordinary Event

Note: This is the setting only for one channel (In my case CH01). You may repeat the configurations on other channels if you want to receive motion alerts on other channels.

Step 3: Enable Alarm Push and Motion Alarm
 Note: For Android users, please contact us for instruction because it's slightly different.

I still do not receive the push alerts on my App, why?

Check your phone settings, for iPhone, go to Settings > Notifications > TSEye > Allow Notifications. Make sure to enable Allow Notifications. See below:




View on Your Web Browser: Internet Explorer

Open your Internet Explorer (IE) and go to www.topscloud.net. Choose By Device, and then enter your Device ID, Username, & Password to login.




Device ID: Refer to the instruction above. Username: admin Password: By default no password required, just leave it blank

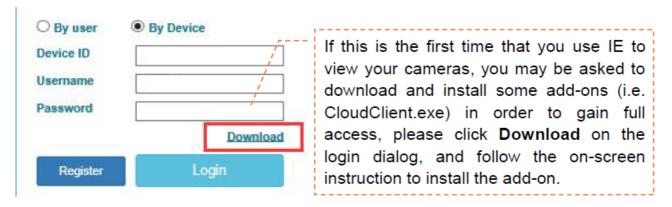

Once it is installed, close your IE and re-open it to enter the website. Meanwhile, on your IE, please go to: Tools > Internet Options > Security > Internet > Custom Level. Scroll down the mouse until you see ActiveX controls and plug-ins. If you have Internet Explorer 9 or 11, disable Allow ActiveX Filtering. Choose Prompt for the following:

- Download signed ActiveX controls
- Download unsigned ActiveX controls
- Initialize and script ActiveX controls not marked as safe for scripting

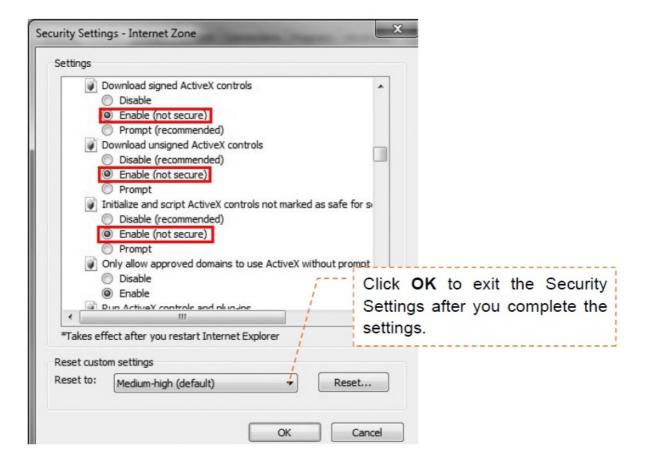


If the webpage does not work for you, you may also contact us to request a link to download the software client for the system (Windows).

How to Install a Hard Drive Disk (HDD)

Your system may not include an internal Hard Drive. (This depends on which model you bought, we sell both systems with & without hard drive). If your system does not include a hard drive, please install one of your own, this system works with most 3.5 inch SATA Hard Drive. (If your system has a preinstalled hard drive already, skip this section)

1. Step 1: Power off the NVR system and unplug all cables, NVR cover is secured with screws. Remove those screws and slide the cover off. See below:


2.

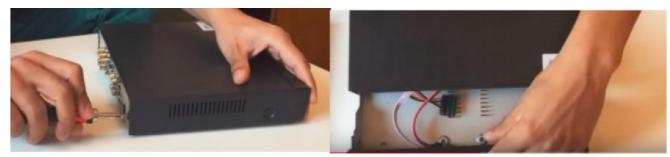

Step 2: Find the two SATA Connections (power and data) on the NVR main board, plug the two cable connections into the hard drive (they only go one way), place the HDD over the screw slots of your NVR and slide the HDD into place, then install the hard drive with the screws.




3. Step 3: Once the hard drive is installed, go to > HDD Manage, then click on Format Disk. Once the hard drive is formatted, reboot your NVR and it will be ready to use.

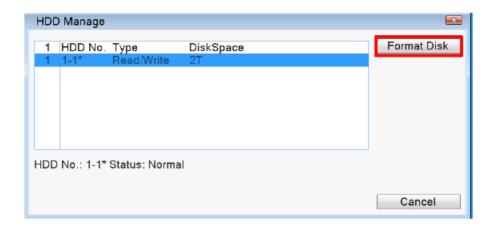

Video Playback on Your TV/Monitor

Right click > Playback (or go to > Playback). You can set search criteria: Date, Time, Channel, Recording Mode, and then click Search. Select the file and double-click to play, or click the Play button to play.

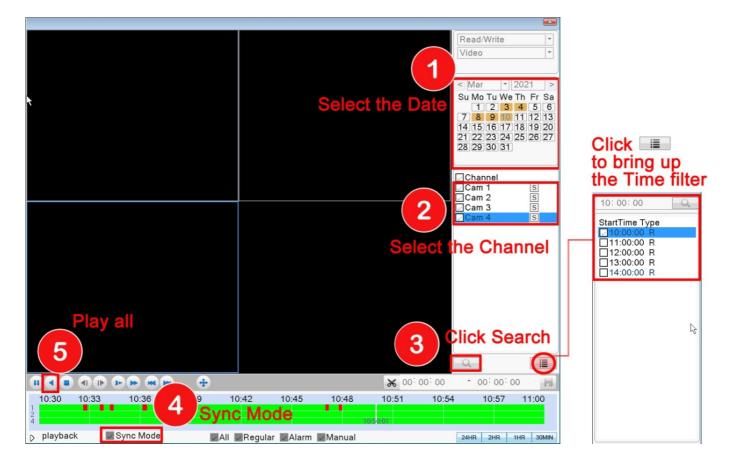

On the timeline, the red section means motion recording, the green means regular recording (no motion). You can use the function to cut a period of your footage and save it to USB memory stick, or you can use to back up footage from the search result to your USB memory stick.

Contact Us

If you have any inquiries regarding the setup or troubleshooters on the product, please feel free to Contact Us via the following methods:

Telephone: +44 07443107538 (UK CUSTOMER ONLY)

Email/Skype: <u>support@isansco.com</u>

Chat via Messenger: m.me/SanscoDirect (copy and paste to your web browser) Chat via WhatsApp: +86 15019239195 We reply all messages in 24 hours. Please expect a short delay on the reply due to different time zones. Telephone Service Hours: Mon through Fri 10 AM to 5PM GMT

Compliance Details

CCTV Security System				
Model	NVR	8x0y (x=1-100,y=4/8/16)	Camer a	x99 (x=1-999), 34y (y=1-999)
Electrical Rating	NVR	Input 12V-2A	Camer a	Input 12V-500mA
Manufacturer	Shenzhen Maituo Tech. Co., Ltd.			
Address	B1601, Rongdeguoji, Henggang, Longgang, Shenzhen, 518000 China			
Contact Info.	support@isansco.com			
Importer	Camstreet UK Limted Ltd			
Address	Unit 12, Drakes Mews Business Center, Crownhill, Milton Keynes MK80ER, UK			
Contact Info.	camstreetuk@outlook.com			
UK REP	Acumen IBC Ltd			
Address	Ground Floor, 94 Ock Street, Abingdon, OX14 5DH			
Contact Info.	info@ukacumen.com / +44 7706338663			
* The above model numbers are listed separately for NVR & camera.				



Made in China

FCC Warning:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmfulinterference e to radio or television reception, which can be determined by turning the equipmentoff and on, the user is encouraged to try to correct the interference by one or more of thefollowing measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- 1. This device may not cause harmful interference, and
- 2. This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator and your body.

FAQs

Question: The NVR keeps shutting down or rebooting. Answer:



- 1. Format the HDD: go to
- 2. Disconnect the hard drive from the NVR, you will need to slide off the NVR cover in order to do so, once it is disconnected, check whether the problem continues on a standalone NVR. If no, re-connect the hard drive back to the NVR and test again.
- 3. Replace the power adapter for NVR.
- 4. If the issue persists, that may be the problem of the NVR. Please contact us.

Question: I forget my login password and I am locked out?

Answer: You can use the following method to reset your system password if you forget it.





Question: How to reset the system?

Answer: On your TV/monitor, click on

> Restore to reset your system.

I have connected the system, but nothing is showing on my monitor? Answer:

Check the cable connection from the NVR to your Monitor TV. Try another HDMI, or VGA cable. HDMI signal is sometimes picky, use only GOLD PLATED HDMI, or use VGA connection for initial setup if HDMI does not work. Your Monitor TV does not support the default output of the NVR, make sure your Monitor TV's resolution is no less than 1080p 1920x1080 pixels. If there is no picture on the monitor only after you mistakenly change the NVR's output resolution, you need to change it back to default. In this case, you need to connect the NVR to a different monitor/TV with higher resolution support, and from there you can change the resolution back to a lower value. If you can access the NVR menu but there is no video feed on the monitor, you may need to check whether the cameras are being installed within the Wi-Fi range, if not, you may need to do wired connection, instead.

The system worked for a while then some channels started to lose signals, why?

Make sure all cameras are within the Wi-Fi range so none of them disconnects from Wi-Fi. Try use wired connection if cameras are to be installed outside the Wi-Fi range. Reset your system, and then re-pair all the cameras with the NVR. Check the instruction of Paring Function above. Check the firmware version and forward it to us, we will check for firmware update if applicable .

Email notification does not work, what do I enter in the Email settings if I use Outlook or Hotmail?

If you use outlook, enter the details below: Enable: Check SMTP Server: smtp.outlook.com Port: 587 Need SSL: Yes Username: Your email address (outlook) Password: Your email password Sender: Your email address (outlook) Receiver: It can be the same as Sender, or different

The night vision of my camera is terrible?

Make sure NOT to aim your camera towards something JUST in front of the lens, i.e. wall, flowers, etc. Do not face the camera towards glass, mirror, etc. They will reflect the IR lights from the camera. Do not face the camera lens towards direct lamps or sunlight. Light up the ambient area a little bit, in complete darkness, night performance may be affected.

My camera is getting misty inside, is there a known fix?

This is probably because of condensation, condensation occurs in a humid environment as a result of the difference of the temperatures of the air and the object on which it occurs. In most cases it will clear up itself. However, if the condensation remains, you may send it back for replacement, please contact us directly.

We sell NVR with / without hard drive, so make sure your NVR comes with a preinstalled hard drive. If your NVR does not include a hard drive, you can source one on your own, or you can purchase one from us. If you have a spare hard drive and you can install on your own, make sure it is a 3.5 inch internal hard drive with SATA connector. If your NVR comes with a hard drive but it is not recording, please verify the hard drive info, if it is not showing hard drive info, open the NVR case and verify the cable connection. If it shows up error under the hard drive info, go to HDD Manage, then click on Format Disk to format the hard drive. Note that because the hard drive records continuously 24/7, it may become corrupted after some time. We warrant the hard drive up to 12 month following the purchase date.

Is there an alternate App other than TSEye?

Yes you can use XVRView, if TSEye is not work right for you. XVRView is also compatible and it provides similar functions.

Documents / Resources

QUICK SETUP GUIDE
WH CREATE System (Age TERY)
That you for exceeding any
That you for exceeding any
End of the exceeding

Maxtop NVR Wi-Fi Camera System [pdf] User Guide

K8204-W, 2BNKS-K8204-W, 2BNKSK8204W, NVR Wi-Fi Camera System, NVR, Wi-Fi Camera System, Camera System, System

References

- Your request has been blocked. This could be due to several reasons.
- Working...
- Sansco-reliable cctv producer Powered by Onephp

 Output

 Description:
- P2P Web starting
- User Manual

Manuals+, Privacy Policy

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.