

maxwest A63 Automatic Zoom



maxwest A63 Automatic Zoom Installation Guide

[Home](#) » [maxwest](#) » maxwest A63 Automatic Zoom Installation Guide 

Contents

- [1 maxwest A63 Automatic Zoom](#)
- [2 What is a SIM card?](#)
- [3 About the SIM card slot](#)
- [4 Remove the battery](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



maxwest

maxwest A63 Automatic Zoom




Things to know before we begin.

What is a SIM card?

A SIM card contains your phone number and other necessary data. Your device has a SIM 1&2 slot that supports 4G (LTE).

About the SIM card slot

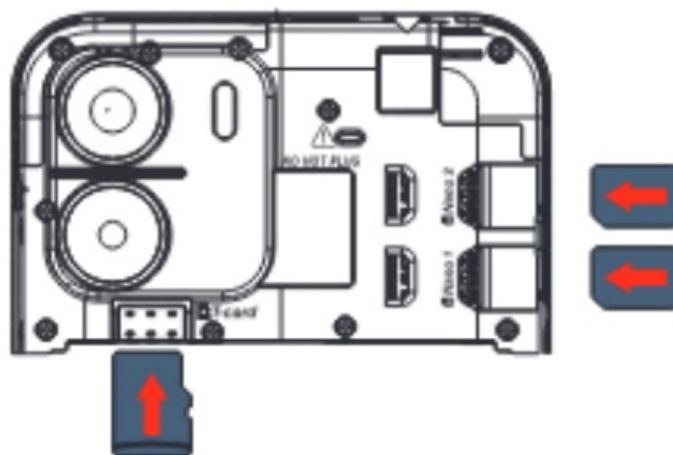

(Fits NANO SIM Card)
(Insert the Micro SD card first)

NOTE:

- The phone can support Dual SIM cards.
- SIM1&2 supports 4G (LTE). If you need an operation 4G, insert the 4G card into slot 1. Some SIM cards may not have 4G function, nor be compatible with your device.
- Please, Consult your service provider for a double card replacement if necessary [fees may occur]

Let us begin


Start by removing the back

- Make sure the device is turned off and facing down. Hold the device firmly and notch at the bottom corner to loosen it Use material with a hard, thin border on your fingernail or a credit card to carry along the cover, then lift the cover completely.



Remove the battery if it

Remove the battery

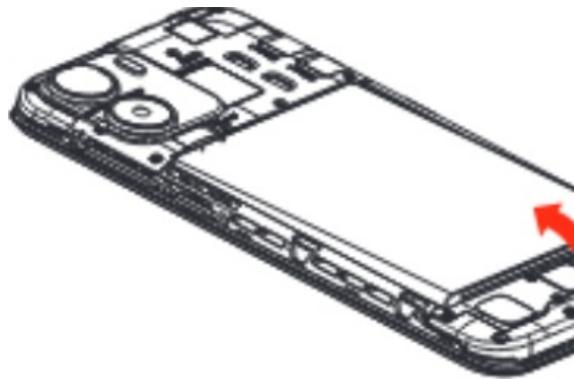

Documents / Resources



[maxwest A63 Automatic Zoom](#) [pdf] Installation Guide
A63 Automatic Zoom, A63, Automatic Zoom, Zoom

References

- [User Manual](#)

[Manuals+](#), [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.