



## maxwest NEO2 Mobile Phone User Manual

[Home](#) » [maxwest](#) » maxwest NEO2 Mobile Phone User Manual 

### Contents

- [1 maxwest NEO2 Mobile Phone](#)
- [2 DEVICE LAYOUT](#)
- [3 Status Icons](#)
- [4 Changing Audio Profiles](#)
- [5 Turn the device ON or OFF](#)
- [6 Calling Options](#)
- [7 Send Text/Multimedia Messages](#)
- [8 View Messages](#)
- [9 Display Settings](#)
- [10 Contact Menu](#)
- [11 Typing with keyboard](#)
- [12 Phone Settings](#)
- [13 WARNING](#)
- [14 FCC](#)
- [15 Documents / Resources](#)
- [16 Related Posts](#)



maxwest

**maxwest NEO2 Mobile Phone**



## DEVICE LAYOUT



### 1. Left Soft Key

Press to select the Contacts Option in the Home Screen

### 2. Confirm Button

Press to confirm any command

### 3. Call Button

Press to call loaded number or to accept incoming call

### 4. Voicemail Button

Long press in Home Screen to enter your voicemail

### 5. Lock/Unlock Button

Long press in Home Screen to Lock device

### 6. Right Soft Key

Press to select the Menu Option in the Home Screen

#### 7. **Power/Cancel Button**

Long press to Power on/off device Press to cancel any command

#### 8. **Navigation Button**

Navigate the device by pressing up, down, right, or left




 





 
#### 9. **Change Audio Profile**

Long press in Home Screen to change the Audio Profile

#### 10. **Torch Light Button**

Long press in Home Screen to turn on the Light Torch

### **Status Icons**

	Airplane Mode		GSM Network
	No SIM Inserted		SD Card Inserted
	Meeting Mode		Silent Mode
	Indoor Mode		Outdoor Mode
	Battery Percentage		Unread Message

### **Changing Audio Profiles**

Changing the Audio Profiles allows you to change the device volume levels. This menu will be found in Home Screen > Menu (-) > Settings > Profiles



**There are preset Audio Profiles:**

1. **General** – These are the default audio levels recommend
2. **Silent** – These settings mute all audio notification
3. **Meeting** – These settings put all audio to vibration
4. **Indoor** – These settings make all audio levels low
5. **Outdoor** – These settings make all audio to max




You can edit any of these settings by selecting Option (  )

In these settings you will be able to change the ringtones, adjust volume levels, select ring type, and additional audio settings



### **Turn the device ON or OFF**

- Long Press the Power Button (  ). Enter Unlock Pin, if necessary.
- To Unlock the device Press the Left Soft Key (  ), then the Star key ( \* )

## Make or answer a Call

- To make a call, go to the Home Screen and enter the number. Once the number is completed, Press the Call button (  )
- For incoming calls, to accept the call press the Call button (  ). To reject the call, press the Cancel button (  )

## Calling Options

- To Enter Speaker Mode during a phone call, press the Confirmation Button
- To Adjust the volume levels, press up and down on the Navigation Button
- To End the call press the Cancel button (  )
- For more options, select Menu by pressing Left Soft Key (  ) In this menu you can Add a new call, Place call on Hold, Start recording call, Mute Call, adjust volume, use contacts, call logs, or open messages.

## Send Text/Multimedia Messages

Enter the Message Application by entering the Menu (Left Soft Key) and scroll up with the navigation button to the Application Message.

Select Write message, (1) for Text Message press SMS

1. To Enter the recipient, enter the phone number. Scroll down to enter the message portion of the text. Once complete, select Options and Select Send

## View Messages


- To View the received messages, press Inbox.
- To View the sending messages, press Outbox.
- To View the draft messages, press Draft.
- To View the sent messages, press Sentbox.

## Display Settings

In the Display setting, you are able to change your wallpaper, adjust brightness settings, change screen timeout, change the keypad lock time, and change your screensaver settings.



You will find this menu in Homescreen > Menu (  ) > Settings > Display Settings

## Contact Menu

- In the Contact Menu you can save, edit, import, and export your contacts.
- You can access your contacts by Home Screen > Contacts (  )


## Adding a New Contact

### To add a new contact select

1. Select Options LSK (  )
2. Select New
3. Insert a Profile Picture, Name, Mobile number, Home number, add to a group, or set the ringtone
4. Select Save LSK (  )


## Setting up Speed Dial

To add a number to speed dial, follow the steps below:

1. Select Options LSK (  )
2. Select Others
3. Select Speed dial
4. Select which number you want to set up
5. Input the number
6. Select ok

## Importing/Exporting Contacts

To import/export your contacts you must have them in cvf Format:

1. Select Options LSK (  )
2. Select Import/Export
3. Select which one you would like to do

## Typing with keyboard

**The device uses T9 keyboard settings.**

These are the keys for each letter

- 1 – Press multiple times to select different punctuation marks
- 2-ABC
- 3-DEF
- 4-GHI
- 5-JKL
- 6 – MNO
- 7 – PORS
- 8 -TUV
- 9-W XYZ
- 0 – Space
- \*- All the symbols in this menu
- #- Allows you to change Abc, abc, ABC, 123, or writing lang.

**To create text, see this sample:**

**To spell out the word “World”**

- W – Press number 9 key one time
- O Press number 6 key three times
- r – Press number 7 key three times
- l- Press number 5 key three times
- d – Press number 3 key one time

**To input a number in text**

1. Select the # key and select 123
2. input the number

## **Phone Settings**

**To access the phone settings, go to:**

Home Screen > Menu > Settings > Phone Settings

### **Date & Time**

In this menu you will be able to set time, set date, change time format, change date format, or change update time settings

### **Language Settings**

This menu can allow you to change the language from English, French, Spanish, or Portuguese

### **Shortcut Settings**

This menu allows you to change the home screen shortcut keys to different applications.

### **Auto power on/off**

This menu can set your device to automatically power on/off on preset times.

### **Power Management**

This menu shows the battery percentage of the device.

### **Restore factory**

This menu will erase all data on the device, password is 0000

## **WARNING**

## **FCC**

Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This device complies with part 15 of the FCC Rules.

**Operation is subject to the following two conditions:**

1. This device may not cause interference

2. This device must accept any interference, including interference that may cause undesired operation of the device.

**Note:**

This equipment has been tested and found to comply with the limits for a Class digital device, pursuant to part 15 of the FCC rules.

These limits are designed to provide reasonable protection against harmful interference in residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

1. Reorient or relocate the receiving antenna.
  2. Increase the separation between the equipment and receiver.
  3. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
  4. Consult the dealer or an experienced radio/TV technician for help.
- SAR tests are conducted using standard operating positions accepted by the FCC with the device transmitting at its highest certified power level in all tested frequency bands, although the SAR is determined at the highest certified power level, the actual SAR level of the device while operating can be well below the maximum value, in general, the closer you are to a wireless base station antenna, the lower the power output.
  - Before a new device is available for sale to the public, it must be tested and certified to the FCC that it does not exceed the exposure limit established by the FCC. Tests for each device are performed in positions and locations as required by the FCC.
  - For body worn operation, this device has been tested and meets the FCC RF exposure guidelines when used with an accessory designated for this product or when used with an accessory that contains no metal and that positions the handset a minimum of 5 mm from the body.
  - Non-compliance with the above restrictions may result in violation of RF exposure guidelines.

## Documents / Resources



[maxwest NEO2 Mobile Phone](#) [pdf] User Manual  
NEO2, 2ASP8NEO2, NEO2 Mobile Phone, Mobile Phone