



[Home](#) » [Support](#) » **Maxx Bubbles 470507 Tiki Torch Bubble Machine User Manual** 

Contents [[hide](#)]

- [1 Maxx Bubbles 470507 Tiki Torch Bubble Machine](#)
- [2 INTRODUCTION](#)
- [3 SPECIFICATIONS](#)
- [4 WHAT'S IN THE BOX](#)
- [5 FEATURES](#)
- [6 SETUP GUIDE](#)
- [7 CARE & MAINTENANCE](#)
- [8 TROUBLESHOOTING](#)
- [9 PROS & CONS](#)
- [10 WARRANTY](#)
- [11 FREQUENTLY ASKED QUESTIONS](#)
- [12 VIDEO – PRODUCT OVERVIEW](#)
- [13 References](#)

MAXX BUBBLES

Maxx Bubbles 470507 Tiki Torch Bubble Machine



INTRODUCTION

With the Maxx Bubbles 470507 Tiki Torch Bubble Machine, you can add a touch of the

tropics and some bubbly fun to your outdoor festivities. Designed by Maxx Bubbles, a company renowned for producing inventive and secure play experiences, this exciting outdoor toy will be available in 2025 for only **\$14.99**. This rechargeable bubble machine, which is shaped like a tiki torch and is an amazing 4 feet tall, mixes continuous bubbles, lively tropical music, and LED lighting to create an outdoor party unlike any other. Refilling is quick and simple because of its top-fill design, and kids can play with bubbles while on the go thanks to the detachable top wand. It is perfect for birthday celebrations, summer barbecues, or unplanned family fun because it is made of non-toxic, kid-safe materials and has ground stabilizers for outside security. The Maxx Bubbles Tiki Torch, which comes with a 3.7V 1200mAh rechargeable battery and 4 oz of bubble solution, is your ticket to an instant island atmosphere.

SPECIFICATIONS

Product Name	Maxx Bubbles 470507 Tiki Torch Bubble Machine
Type	Outdoor Bubble Machine with Lights & Music
Price	\$14.99
Height	4 feet tall
Bubble Output	Continuous bubble stream
Music Feature	Plays upbeat tropical tunes
Lighting Feature	Built-in LED mimics a real tiki torch
Dual-Use Function	Removable top doubles as a handheld bubble wand
Assembly	Easy setup with connectable poles
Stability	Ground stabilizers included; base can be filled with water or sand
Power Source	3.7V 1200mAh rechargeable battery included
Bubble Solution	Includes 4 oz of non-toxic bubble solution

Material	Sturdy, child-safe, non-toxic plastic
Recommended Age	3 years and up
Ideal For	Backyard fun, pool parties, beaches, parks, and outdoor events
Visual Appeal	Tiki torch design with glowing lights for a tropical vibe
Top Fill Design	Makes refilling bubble solution easy and mess-free
Product Dimensions	4 feet tall
Item Weight	1.9 lbs



WHAT'S IN THE BOX

- Bubble Machine
- bubble solution
- User Manual

FEATURES

- **Bubbles and Music Together:** This fun machine blows bubbles continuously while playing tropical-themed music, creating a lively outdoor vibe.
- **Lights Up Like a Torch:** The built-in LED light glows like a real tiki torch, adding charm and a warm glow to your evenings.
- **Dual Function Top:** The top part comes off and doubles as a handheld bubble wand, so kids can carry the fun with them.



LIFT OFF & PLAY

**DOUBLES AS
A HANDHELD
BUBBLE WAND!**

- **Tall and Eye-Catching:** Standing four feet tall, it's perfect for backyard fun, beach parties, or poolside entertainment.
- **Easy to Set Up:** Designed with simple snap-together poles and a base that fills with water or sand for stability.



- **Kid-Friendly Design:** Made from non-toxic, safe materials that are sturdy enough for both kids and adults to enjoy.
- **Rechargeable Battery:** Comes with a built-in 3.7V rechargeable battery, so there's no need to keep buying replacements.
- **Ready-to-Go Starter Kit:** Includes 4 ounces of bubble solution so you can get started right after assembly.
- **Perfect for All Ages:** Suitable for kids as young as 3, but teens and adults will have just as much fun.

- **Top-Fill Design:** Pour bubble solution easily into the top of the unit—no mess, no fuss.



- **Great for Parties:** Adds fun and flair to birthdays, BBQs, family gatherings, or everyday playtime.
- **Portable Wand Fun:** Kids can detach the wand and run around blowing bubbles on the go.
- **Eye-Catching Display:** The combination of lights, bubbles, and music creates a magical outdoor experience.
- **Strong Base Support:** Fill the base with water or sand to keep the machine steady while it runs.
- **Affordable Fun:** A fun-filled experience at a low cost—great entertainment for under \$15



SETUP GUIDE

- **Unpack Components:** Remove all parts, including poles, base, top unit, cable, and bubble solution.
- **Assemble the Poles:** Snap pole sections together firmly until locked in place.
- **Attach Top Unit:** Secure the bubble-blowing top onto the assembled pole structure.
- **Stabilize the Base:** Fill the base with sand or water to prevent tipping.
- **Charge the Battery:** Use the included USB cable to fully charge the built-in battery.
- **Insert Charged Battery:** Place the battery into its compartment once fully charged.
- **Add Bubble Liquid:** Pour the bubble solution into the top reservoir carefully.
- **Power On Machine:** Flip the switch to activate bubbles, lights, and music.
- **Choose a Spot:** Place on flat, open ground for best bubble distribution.
- **Test LED Light:** Ensure the LED torchlight glows, especially if using it in the evening.
- **Try Wand Mode:** Detach the top if your child wants to run around with bubbles.

- **Use Outdoors Safely:** Ideal for lawns, patios, and backyards with plenty of open air.
- **Avoid Windy Spots:** Strong wind may reduce bubble output or blow them away too quickly.
- **Supervise Children:** Always watch young kids while playing with the machine.
- **Store Accessories:** Keep the charging cable and extra bubble solution in a safe place.

CARE & MAINTENANCE

- **Empty After Use:** Drain out leftover solution to prevent gunk or stickiness.
- **Rinse Bubble Wand:** Clean nozzle and wand with water to remove dried soap.
- **Wipe Down Exterior:** Use a soft cloth to clean off residue or splashes.
- **Keep Dry Inside:** Never allow water into the battery or motor sections.
- **Store Indoors:** Keep in a cool, dry area when not in use to extend lifespan.
- **Allow to Air Dry:** Let all parts dry completely before packing away.
- **Use Approved Solutions:** Stick to non-toxic bubble liquids to protect internal components.
- **Inspect for Damage:** Regularly check for cracks or loose parts.
- **Recharge Regularly:** Keep the battery charged to maintain strong bubble output.
- **Protect Charging Port:** Keep it free from dust and moisture.
- **Avoid Overfilling:** Pour solution to the marked level to avoid overflow.
- **Check Base Stability:** Ensure the base remains filled and balanced.
- **Monitor LED Light:** If the light dims, it may be time to recharge.
- **Handle Gently:** Avoid dropping or shaking the unit.
- **Clean frequently:** Especially after events or outdoor use to keep it performing well.

TROUBLESHOOTING

Issue	Possible Cause	Solution
No bubbles produced	Low battery or empty solution tank	Recharge the battery or refill the bubble solution
The bubble machine is not turning on	The battery is not charged, or the power switch is off	Fully recharge and ensure the switch is in the ON position

Issue	Possible Cause	Solution
Weak bubble flow	Blocked bubble wand or low-quality solution	Clean the wand and use the recommended bubble solution
Music not playing	Speaker malfunction or low battery	Recharge or check the internal speaker connection
LED light is not working	Faulty bulb or battery drain	Recharge or inspect the LED unit for damage
The top wand is not producing bubbles	Solution not reaching the wand	Dip the wand fully into the solution and ensure proper use
Unstable base	The base is not filled with sand or water	Add weight to the base to stabilize the unit
Frequent solution refills	Small solution tank	Keep spare bubble solution on hand for longer play
Loud operational noise	The motor is working at full power	Normal for high-output motors—reduce playtime if necessary
Battery not charging	Loose cable or damaged port	Check the USB cable connection or try a different charger

PROS & CONS

PROS

- **2-in-1 Design:** Acts as both a stationary bubble machine and a handheld wand.
- **LED & Music Features:** Mimics a glowing tiki torch and plays tropical tunes.
- **Rechargeable Battery:** No constant battery replacement needed.
- **Tall & Stable:** Stands 4 feet high with optional sand/water fill for balance.
- **Safe & Easy Setup:** Quick assembly and made with child-safe materials.

CONS

- **Limited Solution Included:** Only 4 oz of bubble solution in the box.
- **Indoor Use Limited:** Best suited for outdoor events.
- **Music Volume Not Adjustable:** May be loud in quiet settings.
- **Manual Refill Needed Frequently:** Requires attention during long events.
- **Plastic Poles May Be Fragile:** Needs gentle handling during setup.

WARRANTY

The Maxx Bubbles 470507 Tiki Torch Bubble Machine is covered by a limited manufacturer's warranty, typically valid for 30 to 90 days from the purchase date. This warranty includes protection against defects in materials and workmanship. Users must provide proof of purchase when submitting a claim. The warranty excludes damage from misuse, neglect, weather exposure, or unauthorized modifications. To ensure coverage remains valid, follow the assembly instructions carefully, store the machine in a dry environment, and use only recommended bubble solutions.

FREQUENTLY ASKED QUESTIONS

What makes the Maxx Bubbles 470507 Tiki Torch Bubble Machine unique for outdoor fun?

The Maxx Bubbles 470507 features a 4-foot-tall tiki torch design, built-in LED lights, and tropical music, turning any backyard or beach party into a bubble-filled island escape.

Is the Maxx Bubbles 470507 Tiki Torch Bubble Machine safe for kids?

Absolutely. The Maxx Bubbles 470507 is made of sturdy, child-safe, and non-toxic materials, suitable for children ages 3 and up.

How is the Maxx Bubbles 470507 powered?

The Maxx Bubbles 470507 Tiki Torch Bubble Machine includes a rechargeable 3.7V 1200mAh battery, eliminating the need for disposable batteries.

Can the Maxx Bubbles 470507 be used at night?

It includes a built-in LED light that mimics a real tiki torch, adding a magical glow to night-time outdoor events.

Does the Maxx Bubbles 470507 Tiki Torch include a bubble wand?

The removable top of the bubble machine acts as a handheld bubble wand, letting kids run around and create bubbles manually.

What type of solution should be used in the Maxx Bubbles 470507?

Use premium, non-toxic bubble solution. The machine includes 4oz, but more may be needed for extended play. Avoid thick or sticky solutions that may clog the system.

Why is my Maxx Bubbles 470507 Tiki Torch Bubble Machine not blowing bubbles?

Ensure the bubble solution is filled, the top is securely attached, and the battery is fully charged. Check the wand opening for clogs or dried solution.

VIDEO – PRODUCT OVERVIEW

<https://manuals.plus/wp-content/uploads/2025/07/Maxx-Bubbles-470507-Tiki-Torch-Bubble-Machine-User-Manual.mp4>

References

- [User Manual](#)

Leave a comment

Your email address will not be published. Required fields are marked *

Comment *

Name

Email

Website

☐ Save my name, email, and website in this browser for the next time I comment.

Post Comment

Search:

Search

[Manuals+](#) | [Upload](#) | [Deep Search](#) | [Privacy Policy](#) | [@manuals.plus](#) | [YouTube](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.