




Maxxima MEW-PT1875 7 Button Countdown Timer Switch Instruction Manual

[Home](#) » [Maxxima](#) » Maxxima MEW-PT1875 7 Button Countdown Timer Switch Instruction Manual 



INSTALLATION INSTRUCTION MEW-PT1875 / MEW-PT1875B 7-BUTTON PRESET TIME

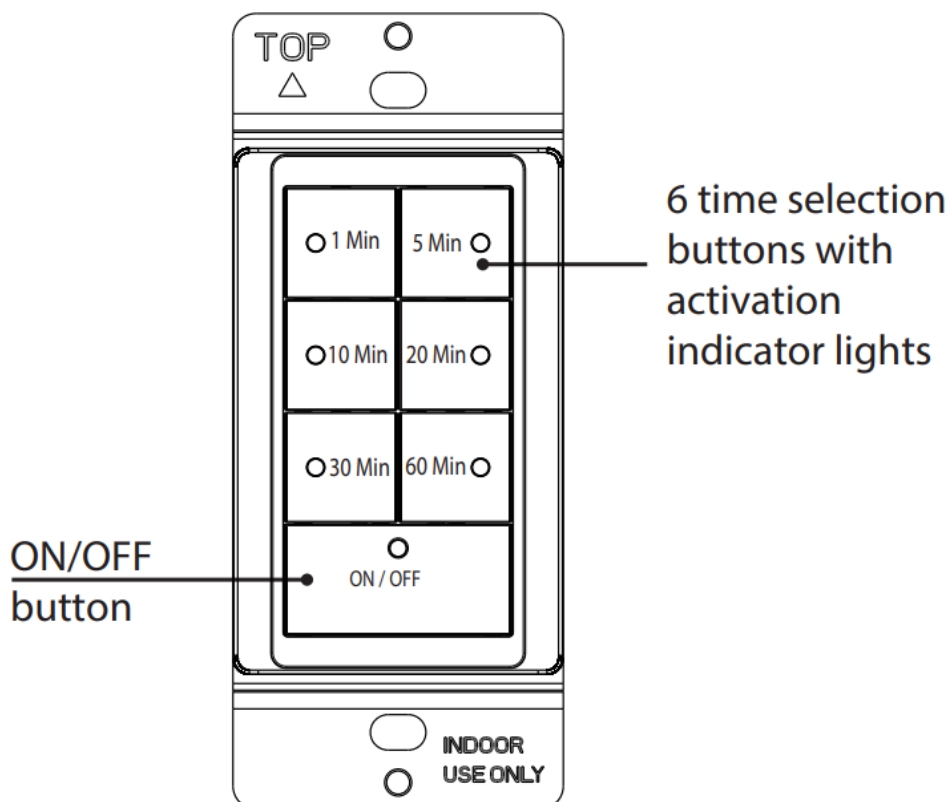

Contents

1 SPECIFICATIONS

2 DESCRIPTION & OPERATION

3 INSTALLATION & WIRING

4 WARRANTY INFORMATION

5 Documents / Resources

SPECIFICATIONS

Voltage.....	125v 60HZ
Load(Single Pole Circuit)	
Tungsten.....	1250W-125VAC
Fluorescent.....	1250VA-125VAC
Resistive.....	1875W-125VAC
Motor.....	1/2Hp
Time Delay.....	1,5,10,20,30,60mins
Humidity.....	95% RH, non-condensing
Operation Temperature.....	32°F –131°F
Protection Class.....	IP 20
Insulation Class.....	II
Neutral Wire Required	
Wire Gauge.....	14 AWG

Important: inductive (starting load) should always be calculated especially when controlling lighting (because of variable inductive loads). If this load exceeds 8 Amps then it is imperative that a contactor be used.

INTRODUCTION

MEW-PT1875 switches replace standard single-pole wall switches for energy savings throughout the home. It turns controlled lights or fans off when the selected time expires. Turning lights on with MEW -PT1875 is accomplished by pressing the desired time selection or ON/OFF button. Lights will remain on for the duration of the time-out setting that was last used and turn on the indicator light for that active time interval. Lights can be turned off before the time-out setting expires by pressing the ON/OFF button. To change the time-out setting, press the desired time selection button and MEW-PT1875 will reset to that countdown interval.

FEATURES

- Seven-button Preset Time Switch.
- Adjustable time delay: 1, 5, 10, 20, 30, 60 MIN.
- Replace a standard light or fan single pole switch.
- Work with the most common lighting types.
- Ideal for closet, pantry, garage, laundry room, outdoor lighting and spa.

DESCRIPTION & OPERATION

The MEW-PT1875 is a timer switch that turns off the connected light or fan when the selected time expires. After finish cables connection, switch ON the main power, LEDs under buttons flash one by one in a circle, then you can start to set the switch ON/OFF time.

This timer switch can work in two ways:

1. Countdown mode
2. Constant ON mode

COUNTDOWN MODE

1. Press any time button from 1 min to 60 min.

The output (your room light, fan, or other device) will be turned on. It will turn off automatically after the selected amount of time.

2. The indicator light on the button that was pressed will stay on. Ten seconds before the time expires, the indicator light will flash as an indicator that it is about to time out. If you need the output to stay on longer, you can press the time button again, and the output can run for the same length of time again. After the output turns off, the indicator light on the ON/OFF button will turn off .
3. Next time, if you press the ON/OFF button, the timer will remember your previous choice and run for the same length of time.
4. To choose a different length of time, simply press a different time button.
5. If you wish to turn off the output before the countdown time has expired, press the ON/OFF button. The output will turn off immediately.
6. Changing the selected countdown time: If more or less countdown time than your originally selected countdown time is required while the Timer is counting down, just simply press the time button that matches your desired length of time and the timer will timeout after that amount of additional time.

CONSTANT ON MODE

1. When you do not want the timer to count down and turn off automatically, it can be put into a manual override.
2. To do this, press and hold the ON/OFF button for more than 5 seconds. During constant on mode, all led indicators on time buttons are unlit. The indicator light on ON/OFF button turns on. The output will now stay on till you turn it off manually.
3. You can turn it off by simply pressing the ON/OFF button once.
4. Now the timer is back on standby, and it will remember your last choice of duration. The indicator light of the last selected time button will remain on.


INSTALLATION & WIRING

CAUTION

For your safety: Connecting a proper ground to MEW-PT1875 switch provides protection against electrical shock in the event of certain fault conditions. If a proper ground is not available, consult with a qualified electrician before continuing installation.

Only connect MEW-PT1875 to a Single Pole Circuit. MEW-PT1875 is not suitable for 3-way switching. If the existing wiring does not match the description for a Single Pole Circuit, you should consult with a qualified electrician.

Wiring Diagram:

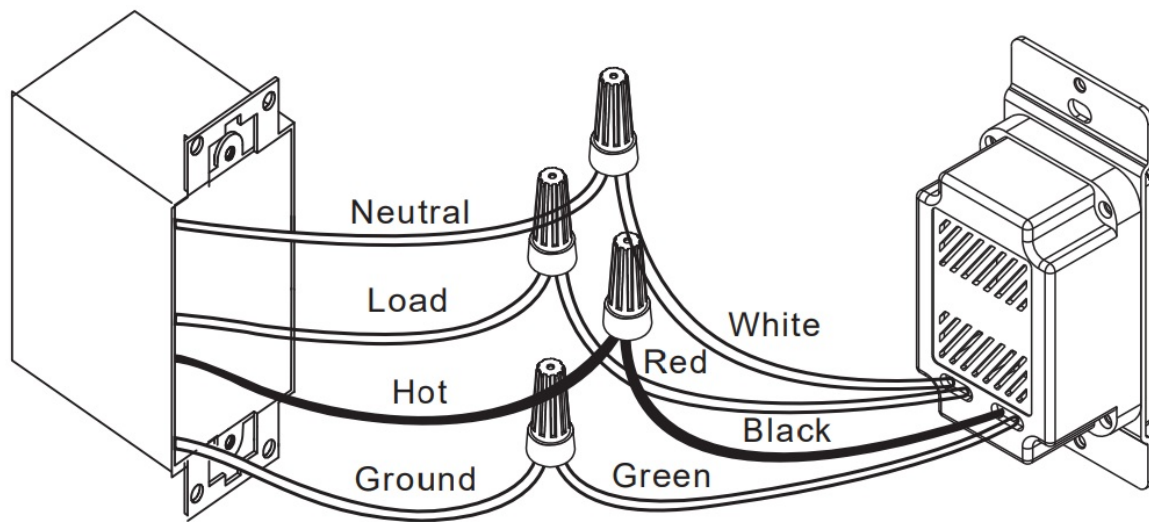

Connect the timer switch

Twist the existing wires together with the wire leads on the timer switch as indicated in the drawing. Cap them securely using the wire nuts provided.

- Connect the green or non-insulated (copper) GROUND wire from the circuit to the green GROUND wire on the timer.
- Connect the power wire from the circuit (HOT) to the black wire on the timer.
- Connect the power wire to the lamp or fan (LOAD) to the red wire on the timer.
- Connect the NEUTRAL wire from the circuit (neutral) to the white wire on the timer.

TROUBLE SHOOTING

Light or fan will not turn on (the indicator under the ON/OFF button is on).

Press ON/OFF button. The connected light or fan should turn on. If not, please

- Check the light bulb and / or motor switch on the fan mechanism.
- Turn off power to the circuit then check wire connections.

Light or fan will not turn on (the indicator under the ON/OFF button is off).

- Check the light bulb and/or motor switch on the fan mechanism, make certain the circuit breaker is on and functioning
- Turn off power to the circuit then check wire connections.

Light or fan will not turn off.

Press the ON/OFF button. If connected light or fan does not turn off, turn off power to the circuit then check wire connections.

WARRANTY INFORMATION

Maxxima extends a 1 year limited warranty to the original purchase that the products listed are free from defects in material and/or workmanship only.

Maxxima will replace any warranted product to the original consumer/purchaser if the product fails because of defects due to workmanship and/or materials within the limited warranty period.

Limited warranty is not transferable and applies to the original installation of the Maxxima product.

This offer does not constitute in any way a product guarantee and Maxxima does not hereby assume any obligation whatsoever beyond sending a free replacement product.

Documents / Resources



[Maxxima MEW-PT1875 7 Button Countdown Timer Switch](#) [pdf] Instruction Manual
MEW-PT1875, MEW-PT1875B, MEW-PT1875 7 Button Countdown Timer Switch, MEW-PT1875, 7 Button Countdown Timer Switch, Countdown Timer Switch, Timer Switch, Switch

