



Maxxima MEW-RS100W Single Pole Combination Rocker Light Switch Installation Guide

[Home](#) » [Maxxima](#) » Maxxima MEW-RS100W Single Pole Combination Rocker Light Switch Installation Guide 

Contents

- [1 Maxxima MEW-RS100W Single Pole Combination Rocker Light Switch](#)
- [2 SPECIFICATION](#)
- [3 INSTALLATION INSTRUCTIONS](#)
- [4 1 YEAR WARRANTY](#)
- [5 Documents / Resources](#)
 - [5.1 References](#)
- [6 Related Posts](#)



Maxxima MEW-RS100W Single Pole Combination Rocker Light Switch



WARNINGS

- Risk of electric shock – Disconnect power at the source before installation.
- If you are unsure about the installation or the maintenance of the wall light, please consult an electrician.
- Use only copper or copper-clad wire.

CAUTIONS

- To ensure personal safety, proper grounding of the electrical fixture is required.
- The fixture must be wired in accordance with the National Electric Code and applicable local codes or ordinances.

SPECIFICATION

- 15A 60Hz 120VAC – 1800W Max – Separate Feed Wiring Capable
- **Maximum Tightening Torque:** 14 in-lbs (1.6 Nm)


INSTALLATION INSTRUCTIONS

Tools Needed: Screwdriver, wire nuts, electrical tape.

If you are replacing an existing fixture, remove and disconnect the old fixture first.

Note: For Separate Feed and/or Switched Outlet Configuration wiring, the break-off fin located in between the dark-colored screws should be removed before wiring. Use a Flat Head screwdriver to bend the fin until it breaks off.

1. Shut off power at the circuit breaker or fuse. See Warning.
2. Remove insulation from wires (approximately 3/8" to 5/8"). The HOT terminals have dark-colored screws. Loop each wire around its respective terminal screw per the diagram below.
3. Fasten Screws securely. Terminal screws accept up to #12AWG copper or copper-clad wire
4. Mount the switch using the long mounting screws provided. Attach the wall plate.
5. Restore power at the circuit breaker or fuse. See Warning.

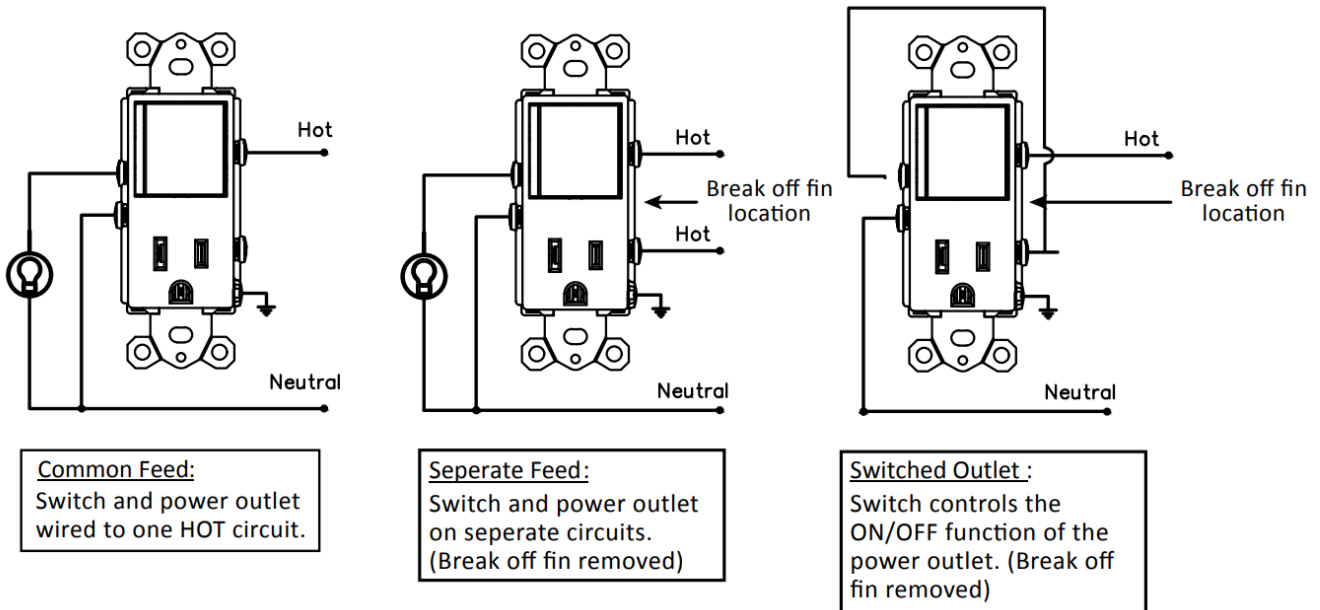

1 YEAR WARRANTY

- Risk of electric shock – Disconnect power at the source before installation.
- If you are unsure about the installation or the maintenance of the wall light, please consult an electrician.
- Use only copper or copper-clad wire.

CAUTIONS

- To ensure personal safety, proper grounding of the electrical fixture is required.
- The fixture must be wired in accordance with the National Electric Code and applicable local codes or ordinances.


WARNINGS

Maxxima extends a 1-year limited warranty to the original purchaser that the products listed are free from defects in material and/or workmanship only. Maxxima will replace any warranted product with the original consumer/purchaser if the product fails because of defects due to workmanship and/or materials within the limited warranty period. A limited warranty is not transferable and applies to the original installation of the Maxxima product. This offer does not constitute in any way a product guarantee and Maxxima does not hereby assume any obligation whatsoever beyond sending a free replacement product.

- info@maxximastyle.com
- 866-MAXXIMA (629-9462)

- www.maximastyle.com
- 125 Cabot Court Hauppauge, NY 11788
- MEW-RS100W
- www.maxximastyle.com

Documents / Resources

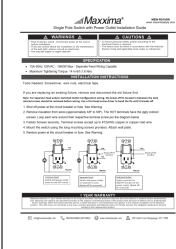	<p>Maxxima MEW-RS100W Single Pole Combination Rocker Light Switch [pdf] Installation Guide</p> <p>MEW-RS100W, Single Pole Combination Rocker Light Switch, Rocker Light Switch, Light Switch, Single Pole Combination Switch, Switch, MEW-RS100W</p>
---	--

References

- [💡 Factory Direct LED Recessed Lighting, Outdoor Wall Lights, Ceiling Fixtures and Electrical Products](#)