



Maxxima MEW-S1504W-4 4 Way On Off Light Switch Instruction Manual

[Home](#) » [Maxxima](#) » Maxxima MEW-S1504W-4 4 Way On Off Light Switch Instruction Manual 

Contents

- [1 Maxxima MEW-S1504W-4 4 Way On Off Light Switch](#)
- [2 SPECIFICATION](#)
- [3 INSTALLATION](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)



Maxxima MEW-S1504W-4 4 Way On Off Light Switch



WARNINGS

- Risk of electric shock or fire – Disconnect power at the source before installation.

- If you are unsure about the installation or the maintenance of the fixture, please consult an electrician.
- Do not make or alter any holes in the wiring enclosure or modify any electrical componentry.
- To prevent wiring damage or abrasion, do not expose wiring to the edges of sheet metal or other sharp objects.

CAUTIONS

- Use this device only with Copper or Copper-clad wire.
- The switch must be wired in accordance with the National Electric Code (N.E.C) standards and any applicable local codes or ordinances
- This switch is designed for use with 120VAC, 50/60Hz only.


SPECIFICATION

4-Way decorative switch, push-in & terminal screws; 15A, 60Hz, 120V.


INSTALLATION

1. Ensure the power has been turned off by switching the circuit breaker to the OFF position or by removing the fuse from the fuse panel. See Warning.
2. Using Side Terminal Screws:
 - Terminal screws accept up to 12AWG copper or copper-clad wire can be used.
 - Remove jacketing from wires, approximately 3/4" (1.9 cm).
 - The HOT terminals are the black screws. Loop each wire around their respective terminal screws as per the diagram below and fasten the screws securely.
 - Loop the ground wire around the GREEN terminal screw, and fasten the screw securely.
3. Use Push-In Wire Holes:
 - Push-in holes accept only 14AWG solid copper wire must be used.
 - Remove jacketing from wires, approximately 1/2" (1.3 cm).
 - HOT push-in holes are closest to black screws.
 - Insert wires into push-in holes on the back of the switch.
4. Mount the switch using the long mounting screws provided. Attach the wall plate.
5. Restore power at the circuit breaker or fuse. See Warning. The switch is now operational.

4-Way Switch

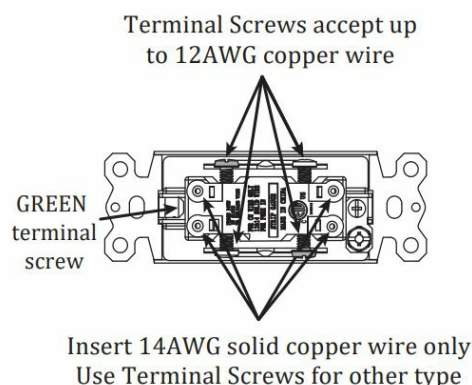


Wiring diagram for 4-Way switch installation

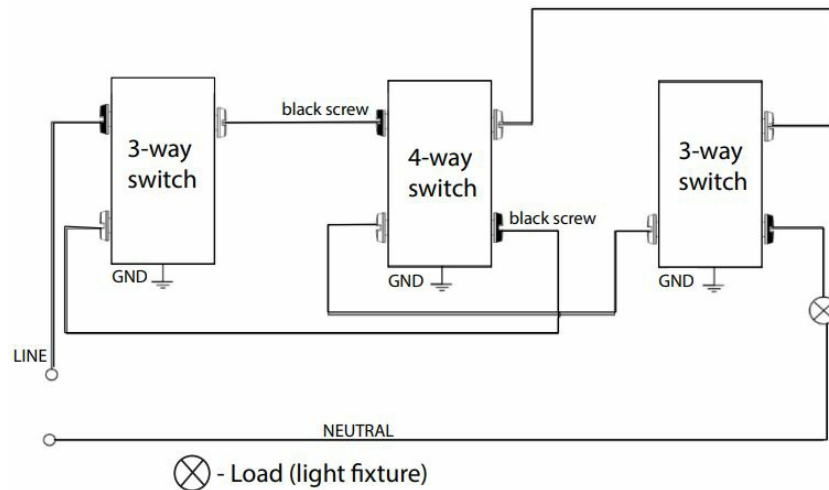

Maxxima extends a 1-year limited warranty to the original purchase that the products listed are free from defects in material and/or workmanship only. Maxxima will replace any warranted product with the original consumer/purchaser if the product fails because of defects due to workmanship and/or materials within the limited warranty period. Limited warranty is not transferable and applies to the original installation of the Maxxima product. This offer does not constitute in any way a product guarantee and Maxxima does not hereby assume any obligation whatsoever beyond sending a free replacement product.

- info@maxximastyle.com
- 866-MAXXIMA (629-9462)
- www.maxximastyle.com
- 125 Cabot Court Hauppauge, NY 11788

Documents / Resources

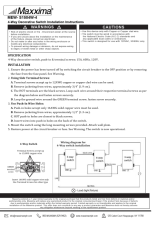	<p>Maxxima MEW-S1504W-4 4 Way On Off Light Switch [pdf] Instruction Manual MEW-S1504W-4, MEW-S1504W-4, MEW-S1504W-4 4 Way On Off Light Switch, MEW-S1504 W-4, 4 Way On Off Light Switch, On Off Light Switch, Off Light Switch, Light Switch, Switch</p>
---	---

References

- [💡 Factory Direct LED Recessed Lighting, Outdoor Wall Lights, Ceiling Fixtures and Electrical Products](#)