



MAY FLASH PS4 Magic-S Wireless Controller Adapter User Guide

[Home](#) » [MAY FLASH](#) » MAY FLASH PS4 Magic-S Wireless Controller Adapter User Guide 



Contents

- [1 MAY FLASH PS4 Magic-S Wireless Controller Adapter](#)
- [2 Buttons and LED Indicators](#)
- [3 Bluetooth Controllers Set-Up](#)
- [4 Wired Controllers Set UP](#)
- [5 Update the Software](#)
- [6 Controllers Buttons Table](#)
- [7 Documents / Resources](#)
- [8 Related Posts](#)

MAY FLASH PS4 Magic-S Wireless Controller Adapter



Buttons and LED Indicators

1. **USB A-Male:** Connect the adapter to the PS4, PS3, PC, NEOGEO mini, PS Classic system.
2. **USB A-Female:** Connect the wired PS4, PS3, Nintendo Switch Pro, Xbox One, Xbox One S, Xbox 360 controllers and fight sticks, and standard wired USB controllers to the adapter.
3. LED Indicators
 1. **LED Indicator in Blue:** PS4 System mode
 2. **LED Indicator blinks slowly:** The Bluetooth is not connected yet
 3. **LED Indicator blinks quickly:** The Bluetooth is syncing

4. **LED Indicator lights up:** The Bluetooth has been paired
5. **LED Indicator in Red:** PS3 or PC System mode
6. **LED Indicator blinks slowly:** The Bluetooth is not connected yet
7. **LED Indicator blinks quickly:** The Bluetooth is syncing
8. **LED Indicator lights up:** The Bluetooth has been paired
9. **LED Indicator in Green:** PC Xinput System mode
10. **LED Indicator blinks slowly:** The Bluetooth is not connected yet
11. **LED Indicator blinks quickly:** The Bluetooth is syncing
12. **LED Indicator lights up:** The Bluetooth has been paired
13. **LED Indicator in Purple:** NEOGEO mini mode
14. **LED Indicator blinks slowly:** The Bluetooth is not connected yet
15. **LED Indicator blinks quickly:** The Bluetooth is syncing
16. **LED Indicator lights up:** The Bluetooth has been paired
17. **LED Indicator in Cyan:** PS Classic mode
18. **LED Indicator blinks slowly:** The Bluetooth is not connected yet
19. **LED Indicator blinks quickly:** The Bluetooth is syncingLED Indicator lights up: The Bluetooth has been paired

Note:

The Bluetooth is not connected yet if LED Indicators blink slowly (around 2 times/second).

Bluetooth Controllers Set-Up

1. Firstly connect the PS4 or PS3 system to an IV. Just turn on your PC if you use the adapter on your PC system.
2. Connect the adapter to any spare USB port on your PS4, PS3, or PC system.
3. To switch the modes, press and hold the button on the side of the adapter for 3-5 seconds. The LED indicator blinks slowly in blue for the PS4 system mode, red for the PS3/Dinput mode, green for the PC Xinput mode, purple for the NEOGEO mini mode, and cyan for the PS Classic mode.
4. Turn on the Bluetooth controllers.
5. To sync the Bluetooth controller and the adapter, press the button on the side of the adapter, and then press the SYNC button on your Bluetooth controller. The LED indicator blinks quickly.
If the Bluetooth syncing failed, please conned the Bluetooth controller to the adapter using a USB cable (not included in the packaging, you can purchase it separately). As soon as the controller is identified by the system, you can remove the USB cable and stan to SYNC it again.
6. The Bluetooth has been paired if the LED indicator lights up. 7. Your controller is now ready to use.

Wired Controllers Set UP

1. Firstly connect the PS4 or PS3 system to an IV. Just turn on your PC if you use the adapter on your PC system.
2. Connect the adapter to any spare USB port on your PS4, PS3, or PC system.
3. Connect the wired controllers to the adapter. The wireless controller that comes with your console will become a wired controller by simply connecting a standard USB cable (with exception of Xbox 360 which requires an official wired Xbox 360 controller). For best results, it is recommended that you use genuine Xbox or PlayStation controllers and quality certified USB cables.

4. Your controller is now ready to use.

Update the Software

If you are having problems with the adapter, you can follow the below instructions to update

1. Download the software from <http://www.mayflash.com/Support/Download/> and install it on your Windows system.
2. Double click on the updater and leave the updater window open on your screen.
3. Press and hold the button on the side of the adapter, and connect the USB from your adapter to any spare port on your PC.
4. As soon as the driver window indicates under “Device” that the adapter has been recognized, you may release the button.
5. Select “Update”.
6. Do not disconnect the device until you are informed that the update is completed successfully.

NOTE

1. Only one Bluetooth controller is supported for one adapter.
2. A wired USB controller and a wireless Bluetooth controller can be connected at the same time, but both of them have the same functions and can only play one game character.
3. To switch A-B, B- A, X-Y, Y-X, press and hold the button “START” and “A” for 3 seconds. To switch A-A, B-B, X-X, Y-Y, press and hold the button “START” and “B” for 3 seconds. This works only when you connect your Switch Pro, Switch Joy-Con, and Wii U Pro controllers to a PC Xinput system.
4. The Capture Button of the Joy-Con and Switch Pro controller works as the TouchPad button when you connect your Joy-Con or Switch Pro controller to your PS4 system by the MAGIC-S Adapter. And if you press the button “-” and “+” of the Joy-Con or Switch Pro controller at the same time, it works as the TouchPad button as well. Please see more details about the other controllers on the “Buttons Table”.
5. Logitech wireless gamepad F710 is supported. Please make sure you connect the emitter to the adapter before using it

Controllers Buttons Table

Controllers Buttons Table																	
PS4	X	O	□	/: :	L1	All	SH AR E	OP TIO NS	L3	R3	LS	RS	PO V	L2	R2	P S	Pressing T-Pad

PS3	X	O	□	/:: :	L1	All	SE LE CT	ST AR T	L3	R3	LS	RS	PO V	L2	R2	P S	SELECT + START
Switch Pro	B	A	y	X	L	R		+	L3	R3	LS	RS	PO V	ZL	ZR	H O M E	" – " + " + " or 12]
Joy-C on	B	A	y	X	L	R		+	L3	R3	LS	RS	PO V	ZL	ZR	H O M E	" – " + " + " or 12]
Xbox One	A	B	X	y	LB	RB	VIE W	ME NU	L3	R3	LS	RS	PO V	LT	RT	H O M E	VIEW+ MENU
Xbox 360	A	B	X	y	LB	RB	BA CK	ST AR T	L3	R3	LS	RS	PO V	LT	RT	H O M E	BACK+ S TART
PC- Xi nput	C D	a >	®	@	®	®	CJ)	@	®	@	X/ Y-A xis	X/ Y C ircle	PO V	Z-	Z+	H O M E	
PC-In put	®	a >	@	C D	®	®	®	@	@	©	X/ Y-A xis	Z-A xis Cir cle	PO V	CJ)	@	@	
Wii U Pro	B	A	y	X	L	R		+	L3	R3	LS	RS	PO V	ZL	ZR	H O M E	" – " + " + "

Wii Classic Pro	B	A	Y	X	L	R		+			LS	RS	POV	ZL	ZR	HOME	" - " + " + "
Wii mote+ Nunchuck	a >	A	C D	B	C			+			LS		POV	Z+		HOME	" - " + " + "
NEO GEO mini	B	D	A	C			SELECT	START			Joy stick		Joy stick				
Genesis Mini Controller	B	A				C		START			POV		POV				
MEGA DRIVE Controller	B	A	Y	X	Z	C	MODE	START			POV		POV				
PS4 Taiko Drum	X	0	□	/:: :	L1	All	SHARE	OPTIONS	Beat the Drum Left	Beat the Drum Right			POV	Beat the Drum Left	Beat the Drum Right	PS	
Switch Taiko Drum	B	A	Y	X	L	R		+	Beat the Drum Left	Beat the Drum Right			POV	Beat the Drum Left	Beat the Drum Right	HOME	12] Capture
PS Classic	X	0	□	/:: :	L1	All	SELECT	START					POV	L2	R2		

NEOG EO Ar cade Stick PRO	B	D	A	C	W hit e Bu tton CJ ®	Gr ay Bu tton CJ ®	SE LE CT	ST AR T						Stic k	Whit e Bu tton CJ@ .	Gray Butt on CJ@ .	O pti on s	
---------------------------------------	---	---	---	---	--	-----------------------------------	----------------	---------------	--	--	--	--	--	-----------	----------------------------------	--------------------------------	---------------------	--


Wireless Controller Adapter for PS4, PS3, PC, NEOGEO mini, PS Classic Wirelessly connect your PS4, PS3, Wii U Pro, Nintendo Switch Pro, Nintendo Joy-Con, and Xbox One S Bluetooth controllers to your PS4, PS3, PC, NEOGEO mini, and PS Classic system.

The wired PS4, PS3, Nintendo Switch Pro, Xbox One, Xbox One S, Xbox 360 controllers, fight sticks, and standard wired USB controllers like Logitech rumble gamepad FSIO and F310 can be connected to your PS4, PS3, PC, NEOGEO mini and PS Classic system.

If you find any issues or have any difficulty operating the device, please reach out to us at info@[mayflash.com](mailto:info@mayflash.com) and we will be more than happy to help you out.

Quick Start Guide

Documents / Resources

	MAY FLASH PS4 Magic-S Wireless Controller Adapter [pdf] User Guide PS4, PS3, Magic-S Wireless Controller Adapter
---	---