



MAYFLASH Magic-S Pro Wireless Controller Adapter User Manual

[Home](#) » [MAYFLASH](#) » MAYFLASH Magic-S Pro Wireless Controller Adapter User Manual 

Contents

- [1 MAYFLASH Magic-S Pro Wireless Controller Adapter](#)
- [2 Controller Compatibility](#)
- [3 Buttons and LED Indicators](#)
- [4 LED Indicators](#)
- [5 Controllers Buttons Table](#)
- [6 Documents / Resources](#)
- [7 Related Posts](#)



MAYFLASH Magic-S Pro Wireless Controller Adapter



MAGIC-5 Pro

Wireless Controller Adapter for Nintendo Switch, PS4, PS3, PC, NEOGEO mini, PS Classic, NEOGEO Arcade

Stick Pro Wirelessly connect your PS4, PS3, Wii U Pro, Wiimote, Nintendo Switch Pro, Nintendo Joy-Con, Xbox One S/X and Xbox Elite Wireless Controller Series 2 Bluetooth controllers to your PS4, PS3, PC Windows , NEDGED mini, PS Classic, SEGA MEGA DRIVE and SEGA Genesis Mini entertainment system. The wired PS4, PS3, Nintendo Switch Pro, Xbox One, Xbox Elite Wireless Controller Series 2, Xbox One S/X, Xbox 360 controller and arcade sticks and standard wired USB controllers can be connected to your PS4, PS3, PC Windows, NEDGED mini, PS Classic, SEGA MEGA DRIVE and SEGA Genesis Mini entertainment system. If you find any issues or have any difficulty operating the device, please reach out to us at info@mayflash.com and we will be more than happy to help you out.

Includes

MAGIC-S Pro Adapter. USB Type C Cable. Buttons Sticker. Manual

Controller Compatibility

Bluetooth Controllers

Xbox One S/X, Xbox Elite Wireless Controller Series 2 Bluetooth controller, PS4, PS3, Wiimote, Wii U Pro, Switch Joy-Cons, Switch Pro

Wired USB Controllers

Xbox One, Xbox One S/X, Xbox Elite Wireless Controller Series 2, Xbox 360 controller, Nintendo Switch Pro, PS4, PS3, ASTRO Gaming C40 TR Controller PlayStation 4, PlayStation 4 SCUF Vantage 2 Controller, SEGA MEGA DRIVE and SEGA Genesis Mini USB Controller Pads, Logitech rumble gamepad F510 and F370, PS Classic Controller, Nintendo Switch Taiko Drum, PS4 Taiko Drum. The wireless controller that comes from your console will become a wired controller by simply connecting a standard USB cable (with exception of Xbox 360 which requires an official Microsoft wired Xbox 360 controller). For best results, it is recommended that you use original Nintendo Switch Controllers, or genuine Xbox or PlayStation controllers and quality certified USB cables.

System Compatibility

Nintendo Switch. PlayStation 4. PlayStation 3. Windows. NEDGED mini. PS Classic. SEGA MEGA DRIVE . SEGA Genesis Mini

Buttons and LED Indicators

USBA-Male

Connect the adapter to the Nintendo Switch, PS4, PS3, PC, NEDGED mini, PS Classic system.

USB A-Female

Connect the wired game controllers, fight sticks and standard wired USB controllers to the adapter.

LED Indicators

- LED Indicator in Blue: PS4 System mode
- LED Indicator in Red: PS3 or PC input System mode
- LED Indicator in Green: PC Xinput System mode
- LED Indicator in Purple: Nintendo Switch Pro mode

- LED Indicator in Yellow: NEOGEO mini mode
- LED Indicator in Cyan: PS Classic mode
- LED Indicator in White: SEGA MEGA DRIVE and SEGA Genesis Mini mode
- LED Indicator blinks slowly: The Bluetooth is not connected yet.
- LED Indicator blinks quickly: The Bluetooth is syncing.
- LED Indicator lights up: The Bluetooth has been paired.

To make sure the system can identify the adapter easily, please turn on the “Pro Controller Wired Communication” of the Nintendo Switch system once you switch the adapter to the Switch Pro mode (the LED indicator is purple)

Button on the side of the adapter

Used for the modes switching and Bluetooth pairing.

- Press the button shortly to SYNC the controllers and the adapter. The indicator blinks quickly.
- To switch the modes, press and hold the button on the side of the adapter for 3-5 seconds.
- The LED indicator blinks slowly in blue for the PS4 system mode, red for the PS3 or PC Din put mode, green for the PC Xinput mode, purple for the Switch Pro mode, yellow for the NEOGEO mini mode, cyan for the PS Classic mode and white for SEGA MEGA DRIVE and SEGA Genesis Mini mode.

Bluetooth Controllers Set Up

1. Turn on your Nintendo Switch, PS4, PS3, NEDGED mini, or PS Classic system.
2. Connect the Nintendo Switch, PS4, PS3, NEDGED mini or PS Classic to a TV. Just turn on your PC if you use the adapter on your PC system.
3. Connect the adapter into any spare USB port on your Nintendo Switch, PS4, PS3, NEOGEO mini, PS Classic or PC system.
4. To switch the modes, press and hold the button on the side of the adapter for 3-5 seconds. The LED indicator blinks slowly
5. Turn on the Bluetooth controllers.
6. To sync the Bluetooth controller and the adapter, press the Button on the side of the adapter, and then press the SYNC button on your Bluetooth controller. The LED indicator blinks quickly.
if the Bluetooth syncing failed, please connect the Bluetooth controUer to the adapter using a USB cable (not included in the packaging, you can purchase it separately). As soon as the controUer is identified by the system, you can remove the USB cable and start to SYNC it again.
7. The Bluetooth has been paired if the LED indicator lights up.
8. Your controller is now ready to use.

Special Remarks for Xbox Elite Wireless Controller Series 2

It may take a longer time to connect your Xbox Elite 2 and Magic-S Pro adapter. And the connection may be disconnected shortly (The lights on the controUer and the adapter flash) and then connect again during the Bluetooth pairing process. Please wait patiently until the LED indicators on the controller and the adapter stop flashing.

If the Bluetooth connection failed, you can repeat the above Bluetooth Controllers Set Up to try again. Before a new connection, please make sure you disconnect your adapter and the console system, and connect them

again, and restart your controller.

Wired Controllers Set UP

1. Turn on your Nintendo Switch, PS4, PS3, NEOGEO mini, or PS Classic system.
2. Connect the Nintendo Switch, PS4, PS3, NEOGEO mini or PS Classic to a TV. Just turn on your PC if you use the adapter on your PC system.
3. Connect the adapter into any spare USB port on your Nintendo Switch, PS4, PS3, NEDGED mini, PS Classic or PC system.
4. Connect the wired controller to the adapter. The wireless controller that comes from your console will become a wired controller by simply connecting a standard USB cable (with exception of Xbox 360 which requires an official Microsoft wired Xbox 360 controller).
5. Your controller is now ready to use.

I Update the Software

If you are having problems with the adapter, you can follow the below instructions to update.

1. Download the software from <http://www.mayflash.com/Support/Download/> and install it on your Windows system.
2. Double click on the updater and leave the updater window open on your screen.
3. Press and hold the button on the side of the adapter, and connect the USB from your adapter into any spare port on your PC.
4. As soon as the driver window indicates under "Device" that the adapter has been recognized, you may release the button.
5. Select "Update".
6. Does not disconnect the device until you are informed that the update is completed successfully.

Note

1. Only one Bluetooth controller is supported for one adapter.
2. A wired USB controller and a wireless Bluetooth controller can be connected at the same time, but both of them have the same functions and can only play one game character.
3. To switch A-B, B-A, X-Y, Y-X, press and hold the button "START" and "M" for 3 seconds. To switch A-A, B-B, X-X, Y-Y, press and hold the button "START" and "B" for 3 seconds. (This function is optional. It depends on the different controllers.)
4. The Capture Button of Joy-Con and Switch Pro controller works as the Touch Pad button when you connect your Joy-Con or Switch Pro controller to your PS4 system by the MAGIC-S Pro Adapter. The Touch Pad button on the PS4 Controller works as the Capture button of the Joy-Con or Switch Pro controller when you connect your PS4 controller to the Switch system by the adapter. Please see more details about the other controllers on the below "Controllers Buttons Table".
5. Logitech wireless gamepad F77 O is supported. Please make sure you connect the emitter to the adapter before using.
6. To disconnect the controller and the adapter, press the button on the side of the adapter. But if you want to

disconnect the Xbox Elite 2 and the adapter, you need to press and hold the HOME button on your controller to shut off the power.

7. To make sure the system can identify the adapter easily, please turn on the “Pro Controller Wired Communication” of the Nintendo Switch system once you switch the adapter to the Switch Pro mode (the LED indicator is purple)

Tips: _System Settings - _controllers and Sensors – Pro Controller _Wired Communication – ON

8. Adjust the vibration intensity Quick Start

1. Pressing and holding the two buttons RI /RB and R3 for 3-5 seconds until the controller keeps rumbling. {You need to keep holding these two buttons until you finish the whole process}
2. To adjust the vibration intensity, press the Directional Pad “Up” or “Down”.
3. To quit the vibration adjusting, release any button of RI /RB or R3 once you have got your
4. preferred vibration intensity.
5. There are 7 levels of the vibration intensity. The default one is 7 00%. {NEOGEO mini and PS Classic mode don't support the vibration) Switch Pro mode vibration levels: 0%, 25%, 37.5%, 50%, 62.5%, 75%, 7 00% PS4, PS3, PC Xinput vibration levels: 50%, 62.5%, 75% ,87.5%, 7 00%, 125%, 150%.

6. **Adjust the Dead Zone**

CD Press and hold the two buttons START and D-Pad Left {For the left stick) or D-Pad Right (For the right stick). The LED indicator on the adapter flash.

@To increase or decrease the dead zone, press the D-Pad “Up” or “Down”. @ As soon as you get the right dead zone value, you may release the button START to quit the Dead Zone Adjusting. @There are 7 levels of the Dead Zone Value.

1. Dead Zone Level 7: 0%
2. Dead Zone Level 2: 2.5%
3. Dead Zone Level 3: 5%
4. Dead Zone Level 4: 7.5%
5. Dead Zone Level 5: 7 0%
6. Dead Zone Level 6: 12.5%
7. Dead Zone Level 7: 15%

The default one isLevel 3.

You can know the Dead Zone Level by the times of the LED indicator flashing on the adapter during the adjusting process. For example, the LED indicator flashes 3 times then stop flashing when the Dead Zone Level is Level 3.

Controllers Buttons Table

Controllers Buttons Table																	
DUALSHOCK 4	X	○	□	△	L1	R1	SHARE	OPTIONS	L3	R3	LS	RS	POV	L2	R2	PS	Pressing Tpad
DUALSHOCK 3	X	○	□	△	L1	R1	SELECT	START	L3	R3	LS	RS	POV	L2	R2	PS	SELECT + START
Switch Pro	B	A	Y	X	L	R	—	+	L3	R3	LS	RS	POV	ZL	ZR	HOME	"-" + "+" or
Joy-Con	B	A	Y	X	L	R	—	+	L3	R3	LS	RS	POV	ZL	ZR	HOME	"-" + "+" or
Xbox One	A	B	X	Y	LB	RB	VIEW	MENU	L3	R3	LS	RS	POV	LT	RT	HOME	VIEW + MENU
Xbox 360	A	B	X	Y	LB	RB	BACK	START	L3	R3	LS	RS	POV	LT	RT	HOME	BACK + START
PC-Xinput	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	X/Y Axis	X/Y Circle	POV	Z-	Z+	HOME	
PC-Dinput	③	②	④	①	⑤	⑥	⑨	⑩	⑪	⑫	X/Y Axis	Z Axis Circle	POV	⑦	⑧	⑬	
Wii U Pro	B	A	Y	X	L	R	—	+	L3	R3	LS	RS	POV	ZL	ZR	HOME	"-" + "+"
Wii Classic Pro	B	A	Y	X	L	R	—	+			LS	RS	POV	ZL	ZR	HOME	"-" + "+"
Wii mote + Nunchuck	②	A	①	B	C		—	+			LS		POV	Z+		HOME	"-" + "+"
NEOGEO mini	B	D	A	C			SELECT	START			Joystick		Joystick				
Genesis Mini Controller	B	A				C		START			POV		POV				
MEGA DRIVE Controller	B	A	Y	X	Z	C	MODE	START			POV		POV				
PS4 Taiko Drum	X	○	□	△	L1	R1	SHARE	OPTIONS	Beat the Drum Left	Beat the Drum Right			POV	Beat the Drum Left	Beat the Drum Right	PS	
Switch Taiko Drum	B	A	Y	X	L	R	—	+	Beat the Drum Left	Beat the Drum Right			POV	Beat the Drum Left	Beat the Drum Right	HOME	Capture
PS Classic	X	○	□	△	L1	R1	SELECT	START					POV	L2	R2		
NEOGEO Arcade Stick PRO	B	D	A	C			SELECT	START					Stick			Options	

Documents / Resources

	MAYFLASH Magic-S Pro Wireless Controller Adapter [pdf] User Manual Magic-S Pro, Wireless Controller Adapter
--	--