



MAYFLASH Magic-S Wireless Controller Adapter User Manual

[Home](#) » [MAYFLASH](#) » MAYFLASH Magic-S Wireless Controller Adapter User Manual 

Contents

- [1 MAYFLASH Magic-S Wireless Controller Adapter User Manual](#)
- [2 MAGIC-5 Rev 1.1](#)
- [3 Quick Start Guide](#)
- [4 Note:](#)
- [5 Bluetooth Controllers Set Up:](#)
- [6 Wired Controllers Set UP](#)
- [7 Update the Software](#)
- [8 Note:](#)
- [9 Read More About This Manual & Download PDF:](#)
- [10 Documents / Resources](#)
- [11 Related Posts](#)

MAYFLASH Magic-S Wireless Controller Adapter User Manual



MAGIC-5 Rev 1.1

Wireless Controller Adapter for PS4, PS3, PC, NEOGEO mini, PS Classic

Wirelessly connect your PS4, PS3, Wii U Pro, Nintendo Switch Pro, Nintendo Joy-Con and Xbox One S Bluetooth controllers to your PS4, PS3, PC, NEOGEO mini and PS Classic system.

The wired PS4, PS3, Nintendo Switch Pro, Xbox One, Xbox One S, Xbox 360 controllers and fight sticks, and standard wired USB controllers like Logitech rumble gamepad FSIO and F310 can be connected to your PS4, PS3, PC, NEOGEO mini and PS Classic system.

If you find any issues or have any difficulty operating the device, please reach out to us at info@mayflash.com and we will be more than happy to help you out.

Quick Start Guide

Buttons and LED Indicators

1. USB A-Male:

Connect the adapter to the PS4, PS3, PC, NEOGEO mini, PS Classic system.

2. USB A-Female:

Connect the wired PS4, PS3, Nintendo Switch Pro, Xbox One, Xbox One S, Xbox 360 controllers and fight sticks, and standard wired USB controllers to the adapter.

3. LED Indicators

LED Indicator in Blue: PS4 System mode

LED Indicator blinks slowly: The Bluetooth is not connected yet

LED Indicator blinks quickly: The Bluetooth is syncing

LED Indicator lights up: The Bluetooth has been paired

LED Indicator in Red: PS3 or PC System mode

LED Indicator blinks slowly: The Bluetooth is not connected yet

LED Indicator blinks quickly: The Bluetooth is syncing

LED Indicator lights up: The Bluetooth has been paired

LED Indicator in Green: PC Xinput System mode

LED Indicator blinks slowly: The Bluetooth is not connected yet

LED Indicator blinks quickly: The Bluetooth is syncing
LED Indicator lights up: The Bluetooth has been paired
LED Indicator in Purple: NEOGEO mini mode
LED Indicator blinks slowly: The Bluetooth is not connected yet
LED Indicator blinks quickly: The Bluetooth is syncing
LED Indicator lights up: The Bluetooth has been paired
LED Indicator in Cyan: PS Classic mode
LED Indicator blinks slowly: The Bluetooth is not connected yet
LED Indicator blinks quickly: The Bluetooth is syncing
LED Indicator lights up: The Bluetooth has been paired

Note:

The Bluetooth is not connected yet if LED Indicators blink slowly (around 2 times/second).

Bluetooth Controllers Set Up:

1. Firstly connect the PS4 or PS3 system to a IV. Just turn on your PC if you use the adapter on your PC system.
2. Connect the adapter into any spare USB port on your PS4,PS3 or PC system.
3. To switch the modes, press and hold the button on the side of the adapter for 3-5 seconds.The LED indicator blinks slowly in blue for the PS4 system mode, red for the PS3/Dinput mode,green for the PC Xinput mode, purple for the NEOGEO mini mode, cyan for the PS Classic mode.
4. Turn on the Bluetooth controllers.
5. To sync the Bluetooth controller and the adapter, press the Button on the side of the adapter,and then press the SYNC button on your Bluetooth controller. The LED indicator blinks quickly.
If the Bluetooth syncing failed, please conned the Bluetooth controller to the adapter using a USB cable (not included in the packaging, you can purchase it separately). As soon as the controller is identified by the system, you can remove the USB cable and stan to SYNC it again.
6. The Bluetooth has been paired if the LED indicator lights up.
7. Your controller is now ready to use.

Wired Controllers Set UP

1. Firstly connect the PS4 or PS3 system to a IV. Just turn on your PC if you use the adapter on your PC system.
2. Connect the adapter into any spare USB port on your PS4,PS3 or PC system.
3. Connect the wired controllers to the adapter.The wireless controller that comes with your console will become a wired controller by simply connecting a standard USB cable (with exception of Xbox 360 which requires an official wired Xbox 360 controller).For best results, it is recommended that you use genuine Xbox or PlayStation controllers and quality certified USB cables.
4. .Your controller is now ready to use.

Update the Software

If you are having problems with the adapter, you can follow the below instructions to update

1. Download the software from <http://www.mayflash.com/Support/Download/> and install it on your Windows system.
2. Double click on the updater and leave the updater window open on your screen.
3. Press and hold the button on the side of the adapter, and connect the USB from your adapter into any spare port on your PC.
4. As soon as the driver window indicates under "Device" that the adapter has been recognized, you may release the button.
5. Select "Update".
6. Does not disconnect the device until you are informed that the update is completed successfully.


Note:

1. Only one Bluetooth controller is supported for one adapter.
2. A wired USB controller and a wireless Bluetooth controller can be connected at the same time, but both of them have the same functions and can only play one game character.
3. To switch A-B, B-A, X-Y, Y-X, press and hold the button "START" and "A" for 3 seconds. To switch A-A, B-B, X-X, Y-Y, press and hold the button "START" and "B" for 3 seconds. This works only when you connect your Switch Pro, Switch Joy-Con and Wii U Pro controllers to a PC Xinput system.
4. The Capture Button of Joy-Con and Switch Pro controller works as the Touch Pad button when you connect your Joy-Con or Switch Pro controller to your PS4 system by the MAGIC-S Adapter. And if you press the button "-" and "+" of the Joy-Con or Switch Pro controller at the same time, it works as the Touch Pad button as well. Please see more details about the other controllers on the "Buttons Table".
5. Logitech wireless gamepad F710 is supported. Please make sure you connect the emitter to the adapter before using.

Controllers Buttons Table																	
PS4	X	○	□	△	L1	R1	SHARE	OPTIONS	L3	R3	L5	R5	POV	L2	R2	PS	Pressing T-Pad
PS3	X	○	□	△	L1	R1	SELECT	START	L3	R3	L5	R5	POV	L2	R2	PS	SELECT + START
Switch Pro	B	A	Y	X	L	R	—	+	L3	R3	L5	R5	POV	ZL	ZR	HOME	"-" + "+" or [B]
Joy-Con	B	A	Y	X	L	R	—	+	L3	R3	L5	R5	POV	ZL	ZR	HOME	"-" + "+" or [B]
Xbox One	A	B	X	Y	LB	RB	VIEW	MENU	L3	R3	L5	R5	POV	LT	RT	HOME	VIEW + MENU
Xbox 360	A	B	X	Y	LB	RB	BACK	START	L3	R3	L5	R5	POV	LT	RT	HOME	BACK + START
PC-Input	①	②	③	④	⑤	⑥	⑦	⑧	⑨	⑩	X/Y Axis	X/Y Circle	POV	Z+	Z+	HOME	
PC-Output	③	②	④	①	⑤	⑥	⑧	⑨	⑩	⑪	X/Y Axis	Z Axis Circle	POV	⑦	⑧	⑩	
Wii U Pro	B	A	Y	X	L	R	—	+	L3	R3	L5	R5	POV	ZL	ZR	HOME	"-" + "+"
WS Classic Pro	B	A	Y	X	L	R	—	+			L5	R5	POV	ZL	ZR	HOME	"-" + "+"
Wi mote + Nunchuck	②	A	①	B	C		—	+			L5		POV	Z+		HOME	"-" + "+"
NEGEO mini	B	D	A	C			SELECT	START				Joystick	Joystick				
Genesis Mini Controller	B	A				C		START				POV	POV				
MEGA DRIVE Controller	B	A	Y	X	Z	C	MODE	START				POV	POV				
PS4 Talkie Drum	X	○	□	△	L1	R1	SHARE	OPTIONS	Beat the Drum Left	Beat the Drum Right			POV	Beat the Drum Left	Beat the Drum Right	PS	
Switch Talkie Drum	B	A	Y	X	L	R	—	+	Beat the Drum Left	Beat the Drum Right			POV	Beat the Drum Left	Beat the Drum Right	HOME	[B] Capture
PS Classic	X	○	□	△	L1	R1	SELECT	START					POV	L2	R2		
NEGEO Arcade Stick PRO	B	D	A	C	White Buttons	Grey Buttons	SELECT	START					Stick	White Buttons	Grey Buttons	Options	

Read More About This Manual & Download PDF:

Documents / Resources

	<p>MAYFLASH Magic-S Wireless Controller Adapter [pdf] User Manual Magic-S, Wireless Controller Adapter</p>
---	--