

**MAYTAG**  
**45 Multi Load**  
**Stack Dryer**



## MAYTAG 45 Multi Load Stack Dryer User Guide

[Home](#) » [Maytag](#) » MAYTAG 45 Multi Load Stack Dryer User Guide 

### Contents

- [1 MAYTAG 45 Multi Load Stack Dryer](#)
- [2 Product Usage Instructions](#)
- [3 OPERATING INSTRUCTIONS](#)
- [4 CONTROL PANEL AND FEATURES](#)
- [5 BUTTON DESCRIPTIONS](#)
- [6 Cycle Guide – Normal Cycle](#)
- [7 Assistance or Service and Additional Information](#)
- [8 FAQ](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)

**MAYTAG**

**MAYTAG 45 Multi Load Stack Dryer**



## Product Usage Instructions

- **Step 1: Clean Lint Screen**

Before each use, make sure to clean the lint screen to ensure proper airflow and efficient drying.

- **Step 2: Load Clothes**

Load your laundry into the dryer, making sure not to overload it for optimal drying performance.

- **Step 3: Turn Power On**

Turn on the dryer using the POWER/CANCEL button on the control panel.

- **Step 4: Select Cycle and Settings**

Close the door and choose a suitable cycle and settings using the CYCLE CONTROL KNOB. Refer to the online Cycle Guide for detailed information.

- **Step 5: Start Drying**

Press the START/PAUSE button to begin the drying cycle. The dryer will start after a countdown or resume if paused.

## OPERATING INSTRUCTIONS

### Fire Hazard

No washer can completely remove oil.

Do not dry anything that has ever had any type of oil on it (including cooking oils).

Items containing foam, rubber, or plastic must be dried on a clothesline or by using an Air Cycle.

Failure to follow these instructions can result in death or fire.

### Explosion Hazard

 
Keep flammable materials and vapors, such as gasoline, away from dryer.

Do not dry anything that has ever had anything flammable on it (even after washing).  
Failure to follow these instructions can result in death, explosion, or fire.


**WARNING:** To reduce the risk of fire, electric shock, or injury to persons, read the IMPORTANT SAFETY INSTRUCTIONS, located in your appliance's Owner's Manual, before operating this appliance.

1. Step 1. Clean Lint Screen
2. Step 1. Clean Lint Screen
3. Step 3. Turn Power On
4. Step 4. Close Door; then Select Cycle and Settings
5. Step 5. Press START/PAUSE

### Step 1. Clean Lint Screen

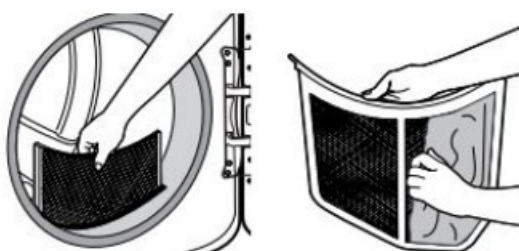


### Step 2. Load Clothes

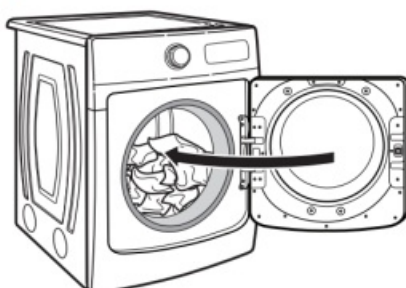 

### Step 3. Turn Power On


 
### Step 4. Close Door; then Select Cycle and Settings

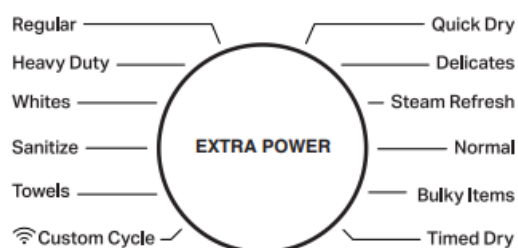


### Step 5. Press START/PAUSE



Not all features, cycles, and options are available on all models. Appearance may vary.

 NOTE: The control panel features a sensitive surface that responds to a light touch of your finger. To ensure your selections are registered, touch the control panel with your finger tip, not your fingernail. When selecting a setting or option, simply touch its name.

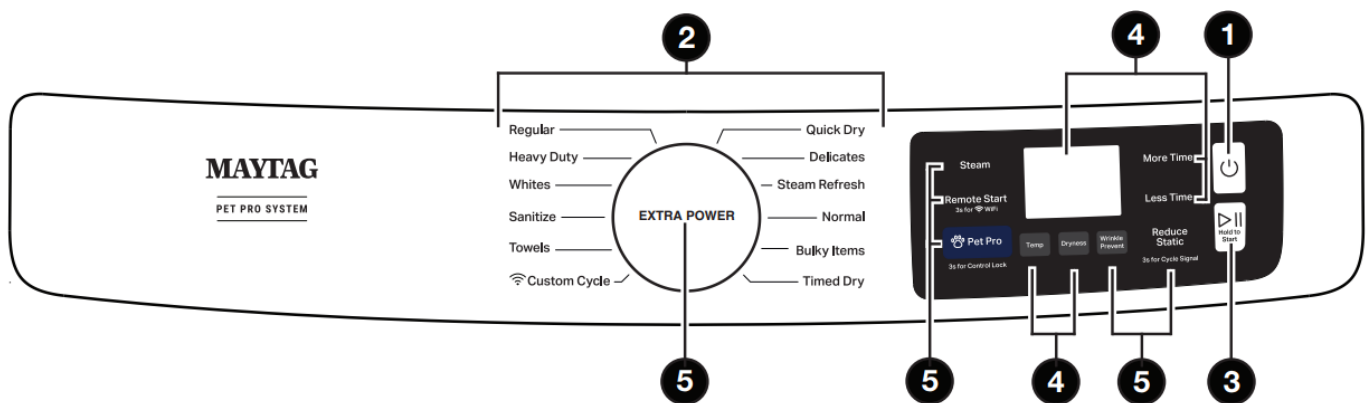

## BUTTON DESCRIPTIONS

### POWER/CANCEL

Touch to turn the dryer on/off or to stop/cancel a cycle.

### CYCLE CONTROL KNOB

Turn the knob to select a cycle for your laundry load. See the online “Cycle Guide” for details.

Activate the Extra Power option for harder-to-dry loads. See the “Options” section for more information.

### START/PAUSE

Touch and hold until LED counts down and the dryer starts; or touch once while a cycle is in process to pause it, touch again to resume.

### LED DISPLAY AND SETTINGS

Display LCD will show the cycle settings and estimated time remaining. Adding or changing default options will also affect time shown in the display.

See online “Cycle Guide” for details.

Not all settings are available with all cycles.

- **More Time/Less Time**

Touch to increase or decrease the length of a Timed Dry or Quick Dry cycle.

- **Temp**

When using any cycle except Sanitize, you may select a dry temperature based on the type of load you are drying. Use the warmest setting acceptable for the garments in the load. Follow garment label instructions.

- **Dryness**

When using Sensor Cycles, you may select a Dryness level based on the type of load you are drying (except for the Sanitize cycle).

- **Cycle Status**

The Cycle Status indicators show the progress of a cycle. Touch a button for the desired drying cycle. Not all indicators are available on all models. See the online “Cycle Guide” for cycle details.

- **Sensing**

The Sensing indicator will light during Sensor Cycles to indicate that the moisture sensor on the dryer is operating. This indicator will not light during Timed Cycles or options such as Wrinkle Prevent.

- **Wet**

The load is still wet and/or the cycle just started.

- **Damp**

The load still has moisture remaining, a good point in the cycle to remove a garment to air dry or iron.

- **Cool Down**

The dryer has finished drying with heat and is now tumbling without heat to cool it down and reduce wrinkling.

- **End**

This indicates that the selected cycle has ended and the load may be removed from the dryer. If Wrinkle Prevent has been selected, the dryer may continue to tumble the load, even if “End” is displayed.

### **Check Vent**

The Check Vent indicator is a feature available for Sensor Cycles only. This alert will show the status of airflow through the dryer and the dryer vent system for the dryer’s life. During the sensing phase at the beginning of the cycle if it detects a blocked vent or low pressure it will display “Check Vent”. Clean lint screen or vent for better performance. This light will stay on for the entire cycle. Refer to the online “Troubleshooting” section for potential solutions to the issue. The light will be cleared upon completion of the cycle, touching Power, or opening the door. It will continue to illuminate during the cycle until the vent is cleared.

NOTE: The dryer will continue to operate even while the indicator is lit, but poor airflow can impact dry times and overall performance.

### **OPTIONS**

Use it to select available options for your dryer. Not all cycles and options are available on all models.

- **Wrinkle Prevent**

Touch to turn on/off and on with Steam (select models). Wrinkle Prevent adds up to 150 minutes of periodic tumbling and heat to help reduce wrinkling. Wrinkle Prevent with Steam will add a short steam cycle after 60 minutes to help smooth wrinkles.

- **Reduce Static (on some models)**

Touch to add this option to selected Sensor Cycles. The dryer will automatically tumble, pause, and introduce a small amount of moisture into the load to help reduce static. This option adds approximately 3 minutes to the total cycle time.

- **Steam (steam models only)**

Touch to add steam to the end of certain Sensor Cycles to help smooth wrinkles. It is not available on Sanitize, Delicates, Steam Refresh, or Timed Cycles (Timed Dry, Quick Dry). Steam can be used with High or Medium heat settings. This option adds approximately 15 minutes to the total cycle time.

- **Pet Pro**

The Pet Pro option uses a low heat, and extended dry time to lift pet hair from clothes and capture it in the lint trap.

- **Remote Start**

Touch each time you want to remotely control via the Maytag™ app. Follow the instructions in the “GET THE MAYTAG™ APP AND GET CONNECTED” section for more details

Note: Once Remote Enable has been selected, certain interactions will cause it to cancel “Remote Enable. Example: Opening the door.

- **Extra Power**

The Extra Power option can be used with both Sensor and Timed Dry Cycles. Press the knob to activate the Extra Power option, for an additional 10 minutes of cycle time (including additional heat and tumbling, where

applicable). When activated, the Cycle Control knob will illuminate and the estimated time remaining on the display will show an additional 10 minutes.

## Cycle Guide – Normal Cycle

If settings are changed, the new settings will be remembered. If there is a power failure, settings will return to the default. Not all features and cycles are available on all models. Not all settings and options are available on each cycle.

### Use Sensor Cycle for better fabric care and energy savings.

The dryer senses moisture in the load or air temperature and shuts off when the load reaches the selected dryness level. The exact cycle times will vary, depending on the load size and type. Options shown in bold are default settings for that cycle.

Items to Dry:	Cycle:	“How to Dry”:	Description:
Work clothes, casual wear, mixed cottons, sheets, corduroys	Normal	Medium	Uses Medium heat to dry large loads of mixed fabrics and items. Normal is the most efficient cycle.

### For Electric Models

NOTE: These clothes dryers’ Government energy certifications were based on the Normal Cycle, Highest Temperature setting and Normal Dryness Level. The as-shipped defaults of Normal, Medium Temperature and Wrinkle Prevent Off were used except the Temperature Setting was changed from Medium to High. Cycles that are available for post-sale download may use more energy than the Normal cycle, upon which the energy use rating of this dryer is based upon.

### For Gas Models

NOTE: These clothes dryers’ Government energy certifications were based on the Normal Cycle, Highest Temperature setting and More Dryness Level. The as-shipped defaults of Normal, Medium Temperature and Wrinkle Prevent Off were used except the Temperature Setting was changed from Medium to High and the Dryness level was changed from Normal to More. Cycles that are available for post-sale download may use more energy than the Normal cycle, upon which the energy use rating of this dryer is based.

## Assistance or Service and Additional Information

For detailed installation instructions and maintenance information, winter storage, and transportation tips, please see the Owner’s Manual included with your machine.

For information on any of the following items, the full cycle guide, warranty, detailed product dimensions, or for complete instructions for use and installation, please visit [www.maytag.com/owners](http://www.maytag.com/owners), or in Canada [www.maytag.ca/owners](http://www.maytag.ca/owners). This may save you the cost of a service call.



REGISTER PRODUCT



ADD SERVICE PLAN



MANUALS & DOWNLOADS



SCHEDULE SERVICE



TROUBLESHOOTING & FAQ



FILTERS



REPLACEMENT PARTS



REBATES & PROMOS

However, if you need to contact us, use the information listed below for the appropriate region.

### United States

1-800-344-1274

Maytag Brand Appliances Customer eXperience Center 553 Benson Road

Benton Harbor, MI 49022-2692

### Canada

1-800-807-6777

Maytag Brand Appliances Customer eXperience Centre 200-6750 Century Ave. Mississauga, Ontario L5N 0B7

## FAQ

 
### Q: Can I dry items that have had oil on them?

A: No, it is not safe to dry anything that has ever had any type of oil on it, as it can pose a fire hazard. Items with oil residue should be dried using alternative methods.

### Q: What is the Extra Power option for?

A: The Extra Power option is designed for harder-to-dry loads. Activate this option for improved drying performance on stubborn items.

## Documents / Resources

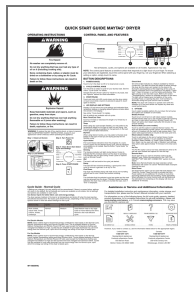

[MAYTAG 45 Multi Load Stack Dryer \[pdf\] User Guide](#)

41, 45, 45 Multi Load Stack Dryer, 45, Multi Load Stack Dryer, Load Stack Dryer, Stack Dryer, Dryer

## References

- [Service & Support Owners Center | Maytag](#)
- [User Manual](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.