



MAYTAG Top Loading Washing Machine User Guide

[Home](#) » [Maytag](#) » MAYTAG Top Loading Washing Machine User Guide

 
MAYTAG Top Loading Washing Machine User Guide

QUICK REFERENCE GUIDE MAYTAG® TOP LOADING WASHING MACHINE

Contents [[hide](#)

- 1 CONTROL PANEL AND FEATURES
- 2 CYCLE GUIDE
- 3 GET THE MAYTAG™ APP AND GET CONNECTED
- 4 WASHER ICONS
- 5 ASSISTANCE OR SERVICE AND ADDITIONAL INFORMATION
- 6 Documents / Resources
 - 6.1 References
- 7 Related Posts

CONTROL PANEL AND FEATURES

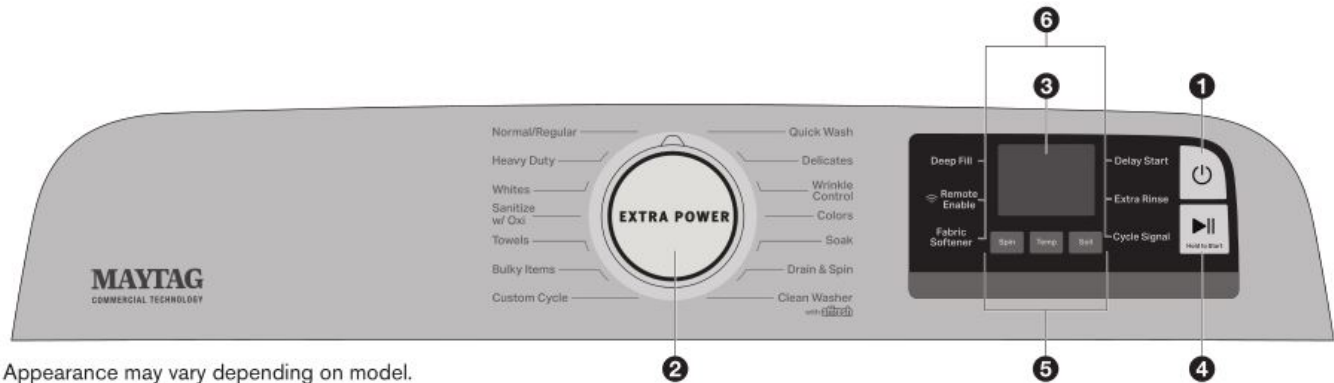

Appearance may vary depending on model.

1. POWER

Touch to turn on/off or to stop/cancel a cycle.

2. **CYCLE KNOB**

Turn knob to select desired cycle.

EXTRA POWER

Press to boost stain fighting on selected cycle.

3. **DISPLAY LCD**

The display shows the time required for the cycle to complete. Factors such as load size and water pressure may affect the time shown in the display. Tightly packed loads, unbalanced loads, or excessive suds may cause the washer to adjust cycle time as well.

ADD GARMENT

When Add Garment is lit, you may open the lid, which automatically pauses the cycle, and add items. To resume, close the lid and hold the START/PAUSE button to start the washer again.

4. **START/PAUSE**

Touch and hold the START/PAUSE button to start cycle. Touch during a cycle to pause cycle and unlock lid.

NOTE: If machine is spinning it may take longer to unlock lid.

5. **CYCLE MODIFIERS** (Not all modifiers are available on all cycles)

SPIN

Touch to modify the cycle's available spin speeds (Off, Medium, Fast).

TEMP

Touch to modify the cycle's available temperatures (Tap Cold, Cold, Cool, Warm, Hot).

SOIL

Touch to modify the cycle's available soil levels. Increase soil level for heavily soiled items and decrease soil level for lightly soiled items (Extra Light, Light, Normal, Heavy, Extra Heavy).

6. **CYCLE OPTIONS** (Not all options are available on all cycles).

DEEP FILL

Touch to add more water to the washer from the cycle's auto sensed level (Auto, Medium, High, Max Fill).

REMOTE ENABLE

Touch each time you want to remotely control via the Maytag™ app. Follow the instructions in the "GET THE MAYTAG™ APP AND GET CONNECTED" section below for more details. Opening the lid cancels "Remote Enable".

FABRIC SOFTENER

Touch to let the machine know when you have added fabric softener to the dispenser drawer.

DELAY START

Touch to delay the start of the wash cycle for up to 12 hours.

EXTRA RINSE

 
Touch to automatically add a second rinse available on most cycles.

CYCLE SIGNAL


Touch to turn the end of cycle signal on/off and adjust the tone volume when a button is touched.



***NOTE:** Not all cycles, settings or options are available with all models.

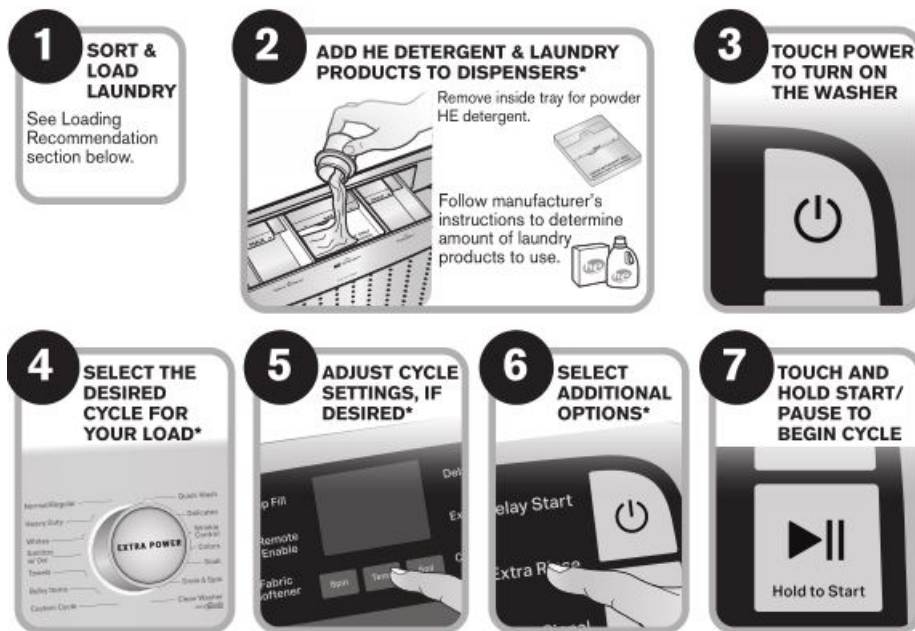


Loading Recommendation

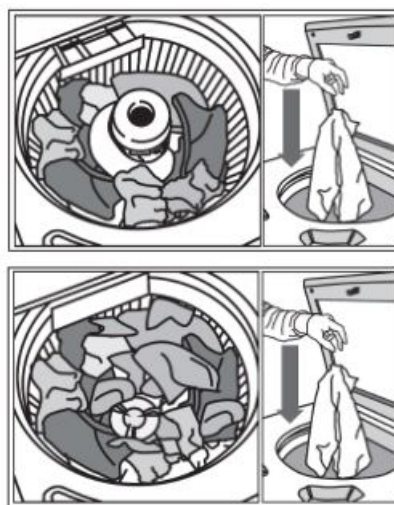 

For best performance, it is recommended to load items by dropping them in loose heaps evenly around the washplate and agitator. Do not lay items length-wise around the washplate or agitator.

 
More Water When You Want It

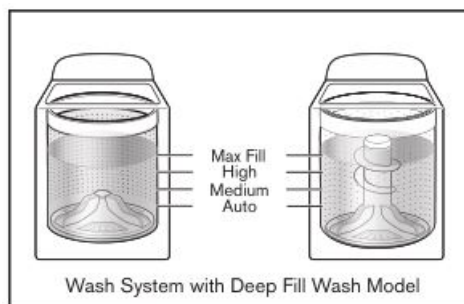

AUTO SENSING & DEEP FILL

- The washer will adjust the water level to the optimal amount for a High Efficiency wash of the detected load size.
- Touch “DEEP FILL” to add more water to the wash load.
- There are four levels of deep water “Auto”, “Medium”, “High”, “Max Fill”.
- Not all levels available on all cycles.

 Cleaning with Less Water

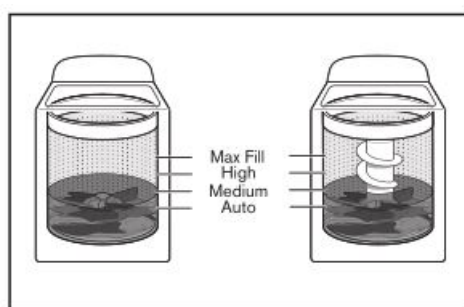

As the washer dampens and moves the load, the level of the items will settle in the basket. This is normal, and does not indicate that more items should be added.

IMPORTANT: You will not see a washer basket full of water as with your past agitator-style washer. It is normal for some of the load to be above the water line.

Boost Stain Fighting (on selected cycles)

 


EXTRA POWER Option

- Press the knob to select EXTRA POWER.
- When Extra Power is active the cycle control knob will illuminate.

- Extra Power will increase cleaning power in the cycle selected.

Rinsing Before Running a Wash Cycle

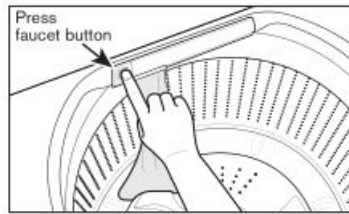

WATER FAUCET OPERATION

- Press the faucet button once to turn on.
- To turn the faucet off press the button again.
- Faucet will automatically shut off after 10 minutes or when max water level is reached.
- Water will automatically drain if water level becomes too high or if the lid is left open for 10 minutes.

CYCLE GUIDE

Settings shown are selectable for that cycle. Factory default settings are shown in **Bold**. Once you select a cycle, the default modifiers or the previous set modifiers for that cycle will be shown in the Display LCD. For best fabric care, choose the cycle that best fits the load being washed. Not all cycles and options are available on all models. Please refer to garment label instructions for best care.


Items to wash:	Cycle:	Temperature*:	Soil Level:	Spin Speed:	Water Level:	Cycle Details:
Overly soiled garments, items that need additional cleaning effort	Heavy Duty	Hot Warm Cool Cold Tap Cold	Extra Heavy Heavy Normal Light Extra Light	Fast Medium Off	Max Fill High Medium Auto	Use this cycle for heavily soiled or sturdy items. Water Level Sensing process may take longer for some items than others because they will absorb more water than other fabric types.
Bright or darkly colored, casual and mixed loads	Colors	Hot Warm Cool Cold Tap Cold	Extra Heavy Heavy Normal Light Extra Light	Fast Medium Off	Max Fill High Medium Auto	Use this cycle to wash darks and colors, including mixed loads and active wear.
Large items such as sheets, sleeping bags, small comforters, jackets, small washable rugs	Bulky Items	Hot Warm Cool Cold Tap Cold	Extra Heavy Heavy Normal Light Extra Light	Fast Medium Off	Max Fill	Use this cycle to wash large items such as jackets and small comforters. The washer will fill with enough water to wet down the load before the wash portion of the cycle begins, and uses a higher water level than other cycles.
Heavily soiled, colorfast fabrics	Sanitize with Oxi	Hot	Extra Heavy	Fast Medium Off	Max Fill High Medium Auto	Use this cycle to eliminate 99.9% of bacteria when used in conjunction with Oxi additives. Preset cycle settings must be used to achieve proper sanitization. Be sure to add an Oxi product to the basket before starting cycle.
Swimsuits and items requiring rinsing without detergent	Drain & Spin / Rinse & Spin	N/A	N/A	Fast Medium Off	N/A	Combines a high speed spin with the option of a rinse only cycle for loads requiring an additional spin-out to reduce drying times or an additional rinse cycle to refresh a load or complete a cycle after power interruption. If you wish to run only the Drain & Spin Cycle, select the DRAIN & SPIN cycle. If you wish to run a Rinse & Spin, select the DRAIN & SPIN cycle, and then select EXTRA RINSE.
Cottons, linens, and mixed garment loads	Normal/Regular	Hot Warm Cool Cold Tap Cold	Extra Heavy Heavy Normal Light Extra Light	Fast Off	High Medium Auto	Use this cycle for normally soiled cottons and mixed fabric loads.
No-iron fabrics, perm press, synthetics	Wrinkle Control	Hot Warm Cool Cold Tap Cold	Extra Heavy Heavy Normal Light Extra Light	Fast Medium Off	Max Fill High Medium Auto	Use this cycle to wash loads of no-iron fabrics such as sports shirts, blouses, casual business clothes, perm press, and blends.
Machine-wash silks, handwash fabrics	Delicates	Hot Warm Cool Cold Tap Cold	Extra Heavy Heavy Normal Light Extra Light	Fast Medium Off	Max Fill High Medium Auto	Use this cycle to wash lightly soiled items indicating "Machine Washable Silks" or "Gentle" cycle on the care label. Place small items in mesh garment bags before washing. This cycle uses a higher pre-set water level.
Lightly soiled, small-sized mixed garment loads	Quick Wash	Hot Warm Cool Cold Tap Cold	Extra Heavy Heavy Normal Light Extra Light	Fast Medium Off	Max Fill High Medium Auto	Use this cycle to quickly wash lightly soiled garments and small loads. The Quick Wash cycle uses shorter periods of more intense washing to clean items quickly.
No clothes in washer	Clean Washer with affresh®	N/A	N/A	N/A	N/A	Use this cycle every 30 washes to keep the inside of your washer fresh and clean. This cycle uses a higher water level. Use with affresh® Washer Cleaner tablet or liquid chlorine bleach to thoroughly clean the inside of your washer. This cycle should not be interrupted. See "Washer Care". IMPORTANT: Do not place garments or other items in the washer during the Clean Washer with affresh® cycle. Use this cycle with an empty basket.
Towels, jeans, casual, and mixed loads. Sturdy fabrics	Towels	Hot Warm Cool Cold Tap Cold	Extra Heavy Heavy Normal Light Extra Light	Fast Medium Off	Max Fill High Medium Auto	Provides additional water and alternating wash action for heavily soiled mixed loads.
Heavily soiled white fabrics	Whites	Hot Warm Cool Cold Tap Cold	Extra Heavy Heavy Normal Light Extra Light	Fast Medium Off	Max Fill High Medium Auto	This cycle, when used with chlorine bleach, improves whitening of soiled white fabrics.
Heavily soiled fabrics	Soak	Hot Warm Cool Cold Tap Cold	Extra Heavy Heavy Normal Light Extra Light	Off	Max Fill High Medium Auto	Use this cycle to soak small spots of set- in stains on fabrics. The washer will use intermittent agitation and soaking. After time has expired, water will drain, but the washer will not spin. Cycle is complete.

 *All rinses are cold.







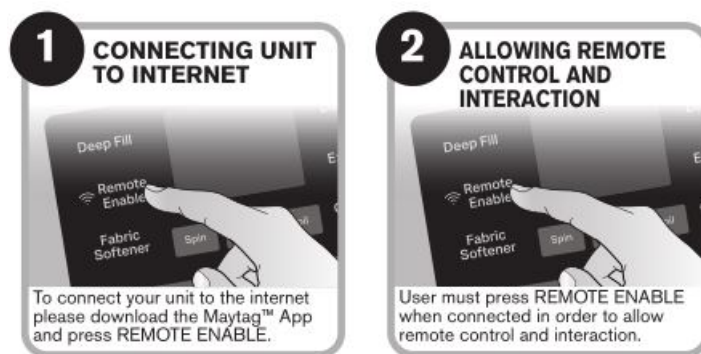







GET THE MAYTAG™ APP AND GET CONNECTED













With your mobile device download the Maytag™ app. You can get subscription and connectivity instructions, terms or use, and privacy policy at www.maytag.com/connect or in Canada www.maytag.ca/connect or www.maytag.ca/connect.

Once installed, launch the app and you will be guided through the steps to subscribe and create your user account to connect to your appliance. If you have any problems or questions, call Maytag® Connected Appliances at 1-866-333-4591.



WASHER ICONS

Image	Description	Status
	Door Locked	Alert State
	Remote Enable	On
	Delay Start	On
	Deep Fill	On - Auto
		On - Auto Medium
		On - Auto High
		On - Max Fill
	Fabric Softener	On
	Extra Rinse	On
	Smartgrid, Peak rates in effect	On
		Smart Delay
		Smart Pause
	WiFi Status Indicator Note: When the WiFi is disconnected, the priority goes to the first, then as other options added, it goes to the least again.	Connected
		Disconnected

	Fabric Softener	Off
	Extra Rinse	Off
	Custom Cycle	
	Download & Go Cycle	
	Cycle Signal	Off
		Low
		Medium
		High
	Clean Washer	
	Remote Enable	Off
	Faucet	On
		Off

NOTE: Not all features and options are available on all models.

ASSISTANCE OR SERVICE AND ADDITIONAL INFORMATION



For detailed installation instructions and maintenance information, winter storage and transportation, please see the INSTALLATION AND CARE INSTRUCTIONS MANUAL included with your machine. For detailed product dimensions, please see the DIMENSION GUIDE that can be found at www.maytag.com/owners or in Canada www.maytag.ca/owners.

For information on any of the following items please visit www.maytag.com/owners or in Canada www.maytag.ca/owners. This may save you the cost of a service call.





REGISTER PRODUCT	SCHEDULE SERVICE	TROUBLESHOOTING	MANUALS & DOWNLOADS	ADD SERVICE PLAN	PARTS	ACCESSORIES
						
 <p>Model & Serial Number Tag location</p>		<p>To speak with a customer service representative or if you have additional questions, call us toll free at 1-800-344-1274 or in Canada call 1-800-688-2002.</p> <p>You can write with any questions or concerns at:</p> <div> <div> Maytag Brand Appliances Customer eXperience Center 533 Benson Road Benton Harbor, MI 49022-2692 </div> <div> Maytag Brand Appliances Customer eXperience Center Unit 200-6750 Century Ave Mississauga, Ontario L5N 0B7 </div> </div> <p>Please include a daytime phone number in your correspondence.</p>				

® / TM ©2020 All rights reserved.

Documents / Resources

	MAYTAG Top Loading Washing Machine [pdf] User Guide Top Loading Washing Machine
	MAYTAG Top Loading Washing Machine [pdf] User Guide Top Loading Washing Machine

References

-  [connect | Maytag](#)
-  [Service & Support Owners Center | Maytag](#)
-  [How to Connect Your Smart Appliance | Maytag](#)
-  [Service & Support Owners Center | Maytag](#)