



# McLED ML-910.141.22.0 RF and Wi-Fi Receiver Instruction Manual

[Home](#) » [McLED](#) » McLED ML-910.141.22.0 RF and Wi-Fi Receiver Instruction Manual 

## Contents

- [1 McLED ML-910.141.22.0 RF and Wi-Fi Receiver](#)
- [2 Safety & Warnings](#)
- [3 Operation](#)
- [4 Delete the pairing](#)
- [5 Product data](#)
- [6 MASTER/SLAVE jumper](#)
- [7 Wiring diagram](#)
- [8 Operation](#)
- [9 Documents / Resources](#)
  - [9.1 References](#)
- [10 Related Posts](#)

# McLED®

## McLED ML-910.141.22.0 RF and Wi-Fi Receiver



## Safety & Warnings

- DO NOT install with power applied to the device.
- DO NOT expose the device to moisture.

## Operation

Do wiring according to the connection diagram.

### Pair RF Receiver with RF remote:

1. Connect and wire up the RF receiver correctly, power on.
2. Turn on the remote, short click the „Learning Switch“ button on receiver, immediately click a zone number to pair the receiver to the specified zone if the remote is a multi-zone controller (if it is a single zone remote, this step is unnecessary), then touch the color wheel or slider bar on the remote (if the remote does not have color wheel or slider bar, click or touch any keys), the connected led light on receiver flickers twice, which means well paired.

**Note:** one receiver can be paired with max 8 remote controls.

### Delete the pairing

 
1. Wire up the RF receiver correctly, power on.
2. Hold down the „Reset Switch“ button on receiver for over 3 seconds until the connected led light on receiver flickers twice, which means well deleted.

### Product data

1. Input/output voltage 12-36VDC
2. Output Current max. 4 x 5A
3. Total output power 240W/12V 480W/24V 720W/36V
4. Operation frequency 868 MHz
5. Remarks Constant voltage
6. Waterproof grade IP20
7. Size (L x W x H) 178 x 57 x 21 mm

### MASTER/SLAVE jumper


In a group of multiple receivers, in order to get a good sync of RGB running effect, please set only 1 receiver as MASTER, the other receivers as SLAVE. After setting the Master, the Master receiver need to power off and on once to make the Master function take effect.  
IOS or android system connection to the receiver Please check „Easylighting“ application manual. WiFi password: 0123456789

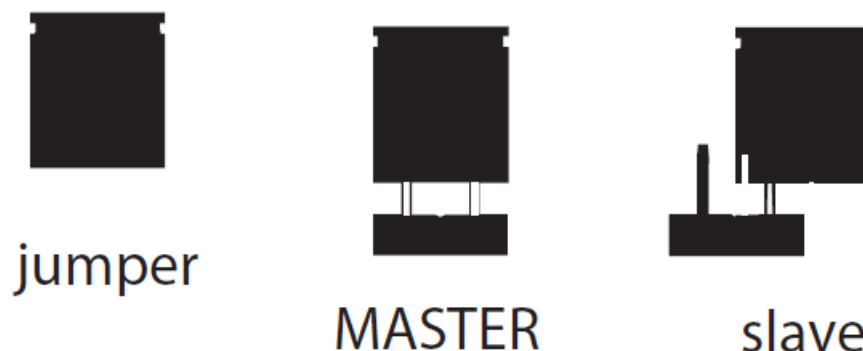


\*When the lifetime of this product will run out, please hand it in to the places for electro-waste.

## RF and WiFi Receiver of adjustable brightness, CCT, RGBW ML-910.141.22.0

 
Congratulations on buying a McLED RF and WiFi receiver! To ensure that your product serves you well and long time, please read this manual carefully prior to installing it.  
Installation may only be performed by qualified persons.

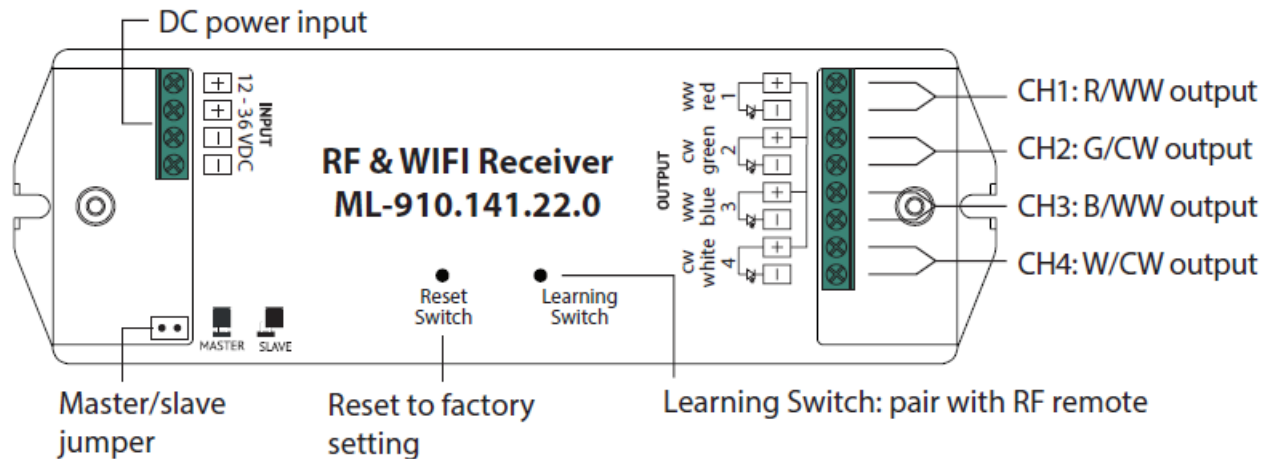


### Wiring diagram

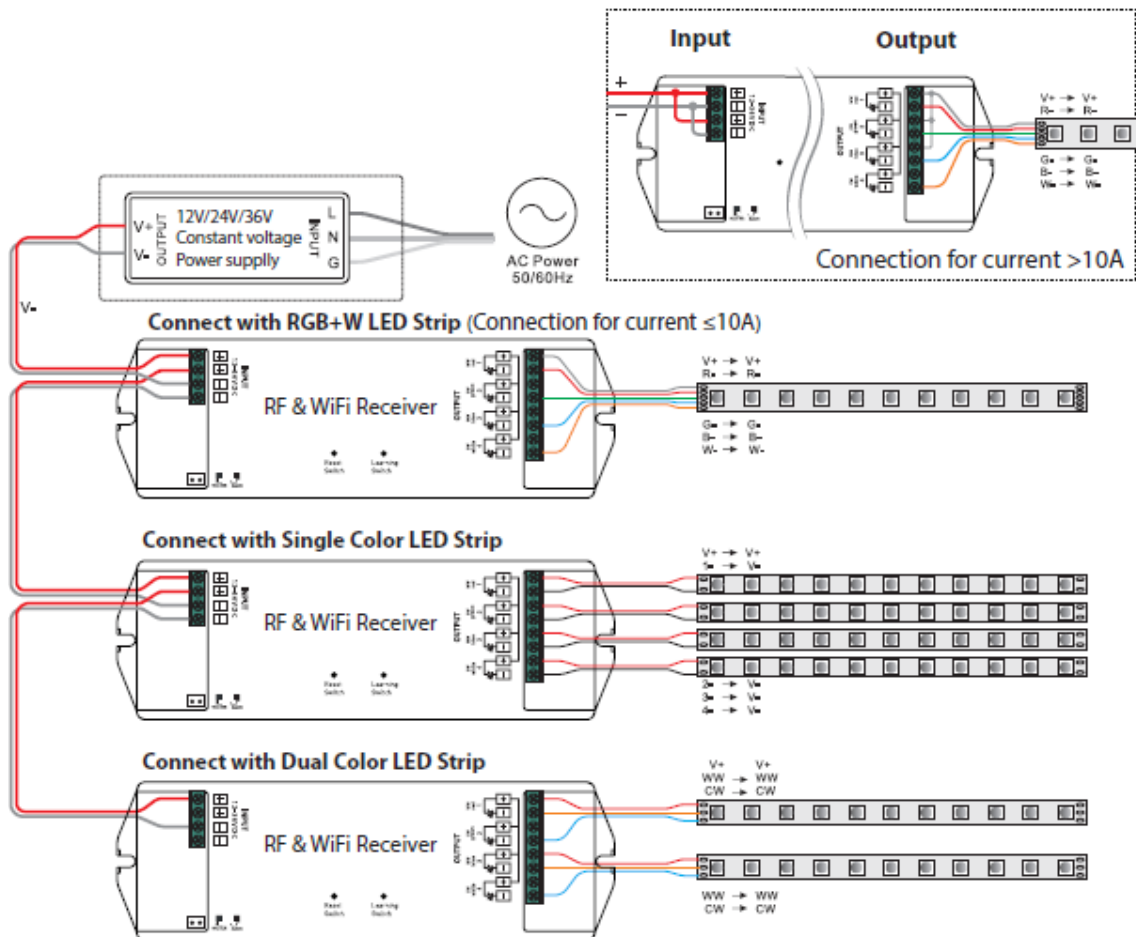 

 If you use multiple receivers, you have two choices:

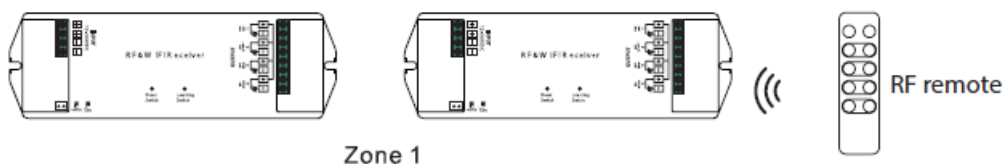

 1. have all the receivers in the same zone, like zone1

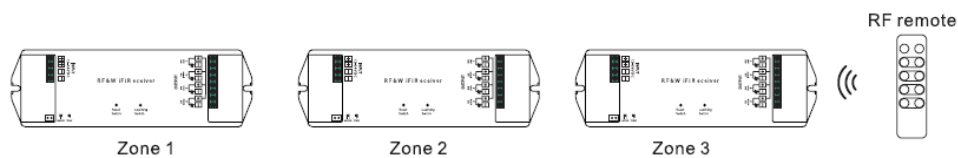

2. have each receiver in a different zone, like zone 1, 2, 3 or 4


## Operation

 Download application from 'app store' or 'google play' by searching 'easy lighting' or scanning following QR codes. The RF and WiFi receiver can be controlled by only one mobile phone.



- Android
- IOS

## Documents / Resources

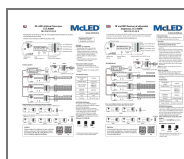

[McLED ML-910.141.22.0 RF and Wi-Fi Receiver](#) [pdf] Instruction Manual  
ML-910.141.22.0 RF and Wi-Fi Receiver, ML-910.141.22.0, RF and Wi-Fi Receiver

## References

- [M McLED](#)
- [M McLED](#)
- [M McLED](#)