



 
McLED ML-910.521.22.0 RF Remote Controller CCT Instructions

 
[Home](#) » [McLED](#) » [McLED ML-910.521.22.0 RF Remote Controller CCT Instructions](#) 



RF Remote Controller CCT ML-910.521.22.0

Important: Read All Instructions Prior to Installation. Installation may only be performed by qualified persons

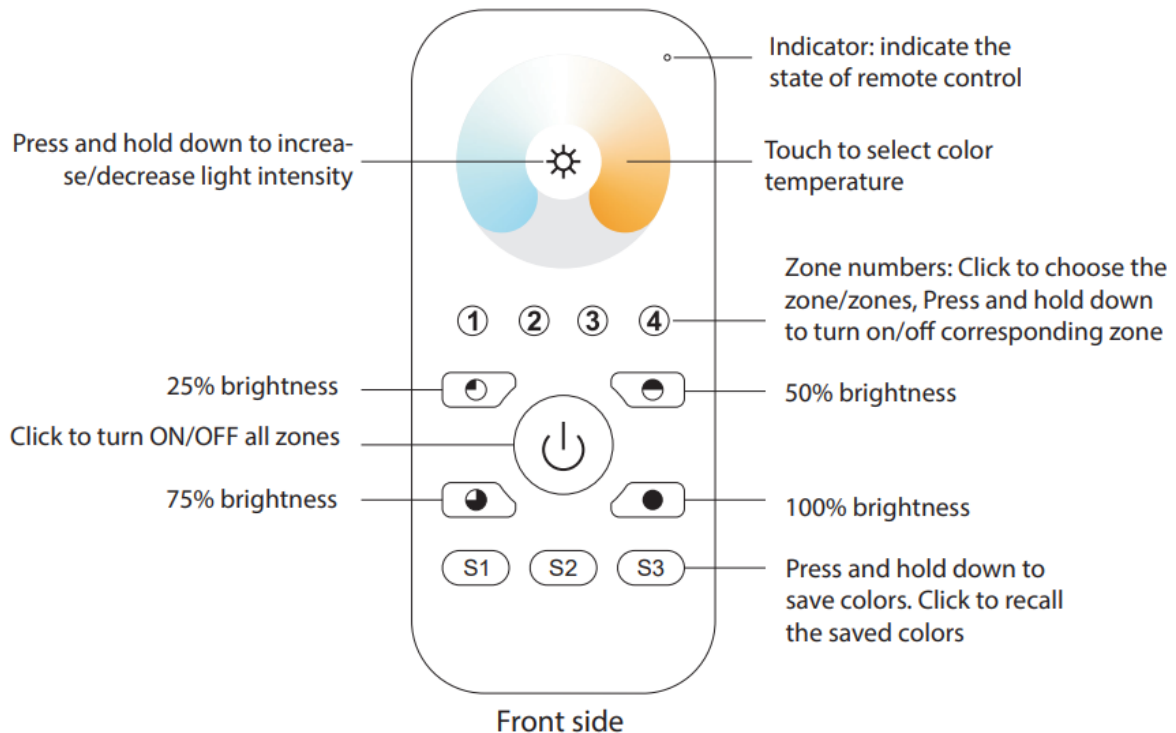

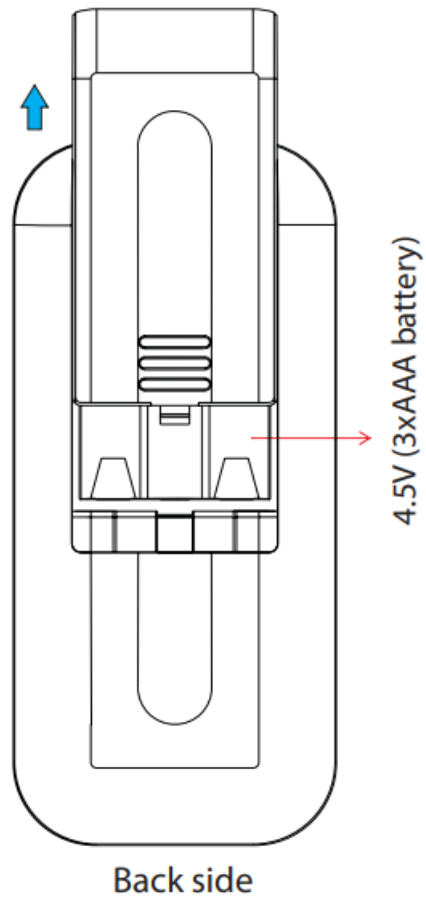

Contents

- [1 Product data](#)
- [2 Safety & Warnings](#)
- [3 Operation](#)
- [4 Documents / Resources](#)
 - [4.1 References](#)
- [5 Related Posts](#)

Product data

Output	RF signal
Operation Frequency	868 MHz
Power Supply	4,5V (3xAAA battery)
Operating temperature	0-40°C
Relative humidity	8% to 80%
Dimensions	120 x 55 x 17 mm

- Control 4 zones of RF receivers separately

- CCT color controller
- High sensitive & high stable touch color wheel, fast & precise color control
- Compatible with all universal series RF receivers
- 1 receiver can be paired by max 8 different remote controls Waterproof grade: IP20

Safety & Warnings

This device contains AAA batteries that shall be stored and disposed of properly
DO NOT expose the device to moisture

Operation

1. Pair with RF receivers:

- Short-click „Learning Key“ on the RF receiver.
- Click a zone number of 1-4
- Touch color wheel on RF remote
- LED lights connected with the RF receiver will flicker once

2. How to delete the pairing

 
Press and hold down „Learning Key“ the receiver for over 3 seconds until connected LED lights twice, which means the pairing is deleted successfully.

3. Play the remote after pairing


- Click the paired zone number/numbers
- Touch the color wheel or other buttons to do the controlling

If you use multiple receivers, you have two choices


1. Have all the receivers in the same zone, like zone 1

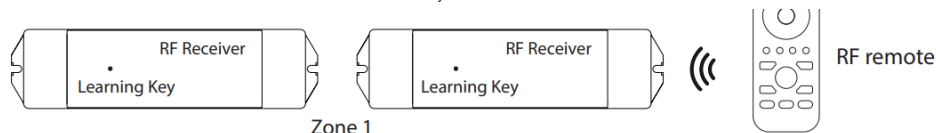

 2. Have each receiver in a different zone, like zone 1, 2, 3 or 4

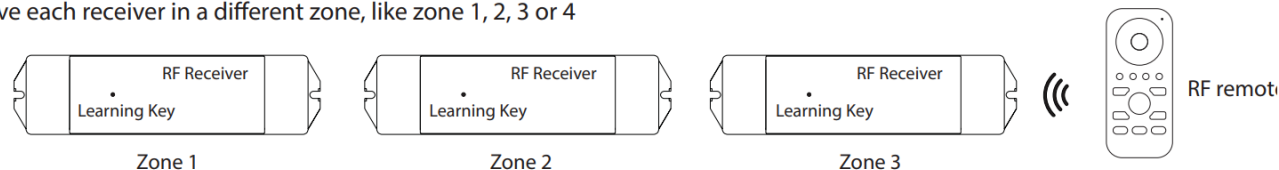

 
*When the lifetime of this product will run out, please hand it into the places for electro-waste.

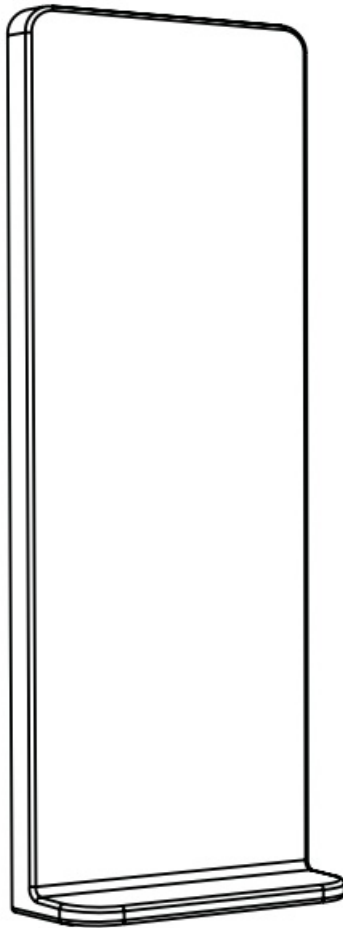

www.mcled.eu

McLED®

 Documents / Resources

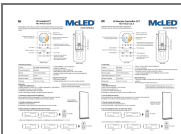

[McLED ML-910.521.22.0 RF Remote Controller CCT](#) [pdf] Instructions
ML-910.521.22.0, RF Remote Controller CCT

References

- [M McLED](#)
- [M McLED](#)
- [M McLED](#)

[Manuals+](#).