



**RSP-3000 Series
3000W Power
Supply With Single
Output**



MEAN WELL RSP-3000 Series 3000W Power Supply With Single Output Owner's Manual

[Home](#) » [MEAN WELL](#) » MEAN WELL RSP-3000 Series 3000W Power Supply With Single Output Owner's Manual



Contents

- [1 MEAN WELL RSP-3000 Series 3000W Power Supply With Single Output](#)
- [2 Dimension](#)
- [3 Features](#)
- [4 Applications](#)
- [5 Description](#)
- [6 SPECIFICATION](#)
- [7 Block Diagram](#)
- [8 Static Characteristics](#)
- [9 Function Manual](#)
- [10 Current Sharing with Remote Sense](#)
- [11 Documents / Resources](#)
 - [11.1 References](#)
- [12 Related Posts](#)



MEAN WELL RSP-3000 Series 3000W Power Supply With Single Output



Dimension

L

- 278
- 10.9

W

- 177.8
- 7

H

- 63.5 (2U) mm
- 2.5 (2U) inch

Symbol



Features

- AC input 180~264 VAC
- Built-in active PFC function
- High efficiency up to 91.5%
- Forced air cooling by built-in DC fan
- Output voltage programmable
- Active current sharing up to 9000W (2+1)
- Built-in remote ON-OFF control / remote sense / auxiliary power/power OK signal
- Protections: Short circuit / Overload / Over voltage
 - / Over temperature
- Optional conformal coating
- 5 years warranty

Applications

- Factory control or automation apparatus
- Test and measurement instrument
- Laser related machine
- Burn-in facility
- Digital broadcasting
- RF application


GTIN CODE

MW Search: <https://www.meanwell.com/serviceGTIN.aspx>

Description

RSP-3000 is a 3KW single-output enclosed type AC/DC power supply. This series operates for 180~264VAC input voltage and offers the models with the DC output mostly demanded from the industry. Each model is cooled by the built-in fan with fan speed control, working for a temperature up to 70°C. Moreover, RSP-3000 provides vast design flexibility by equipping various built-in functions such as the output programming, active current sharing, remote ON-OFF control, auxiliary power, etc.

Model Encoding / Order Information

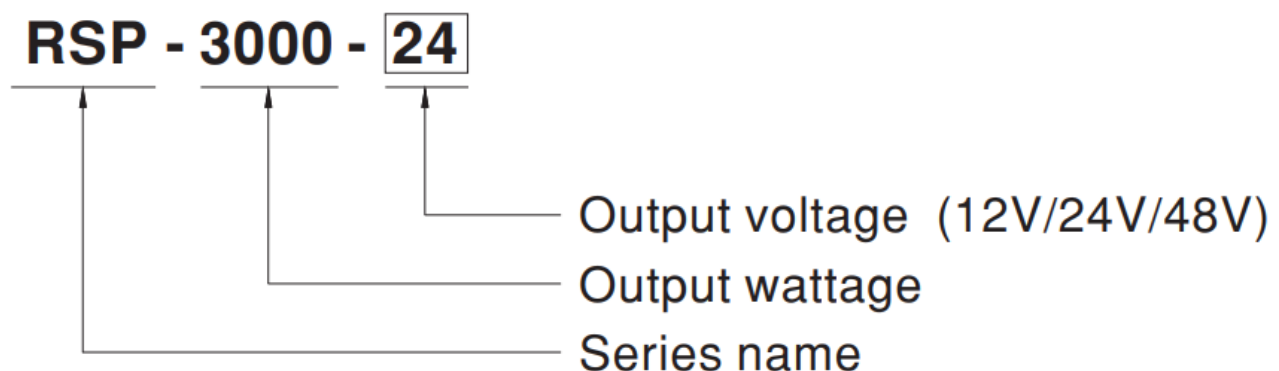


SPECIFICATION

MODEL		RSP-3000-12	RSP-3000-24	RSP-3000-48
OUTPUT	DC VOLTAGE	12V	24V	48V
	RATED CURRENT	200A	125A	62.5A
	CURRENT RANGE	0 ~ 200A	0 ~ 125A	0 ~ 62.5A
	RATED POWER	2400W	3000W	3000W
	RIPPLE & NOISE (max.) Note.2	150mVp-p	150mVp-p	200mVp-p
	VOLTAGE ADJ. RANGE	10.8 ~ 13.2V	22 ~ 28V	43 ~ 56V
	VOLTAGE TOLERANCE Note.3	±1.0%	±1.0%	±1.0%
	LINE REGULATION	±0.5%	±0.5%	±0.5%
	LOAD REGULATION	±0.5%	±0.5%	±0.5%
	SETUP, RISE TIME	1000ms, 80ms at full load		
	HOLD UP TIME (Typ.)	10ms at full load		
INPUT	VOLTAGE RANGE	180 ~ 264VAC 254 ~ 370VDC		
	FREQUENCY RANGE	47 ~ 63Hz		
	POWER FACTOR (Typ.)	0.95/230VAC at full load		
	EFFICIENCY (Typ.)	87.5%	90%	91.5%
	AC CURRENT (Typ.)	20A/180VAC 16A/230VAC		
	INRUSH CURRENT (Typ.)	60A/230VAC		
	LEAKAGE CURRENT	<2.0mA / 240VAC		
	OVERLOAD	100 ~ 112% rated output power		
		User adjustable continuous constant current limiting or constant current limiting with delay shutdown after 5 seconds, re-power on to recover		
		13.8 ~ 16.8V	28.8 ~ 33.6V	57.6 ~ 67.2V

PROTECTION	OVER VOLTAGE	Protection type : Shut down o/p voltage, re-power on to recover		
	OVER TEMPERATURE	Shut down o/p voltage, recovers automatically after temperature goes down		
FUNCTION	OUTPUT VOLTAGE PROGRAMMABLE(PV)	2.4 ~ 13.2V	4.8 ~ 28V	9.6 ~ 56V
		Please refer to the Function Manual.		
	CURRENT SHARING	Up to 9000W or (2+1) units. Please refer to the Function Manual.		
	AUXILIARY POWER(AUX)	12V@0.1A(Only for Remote ON/OFF control)		
	REMOTE ON-OFF CONTROL	Please refer to the Function Manual		
	REMOTE SENSE	Compensate voltage drop on the load wiring up to 0.25V. Please refer to the Function Manual.		
	ALARM SIGNAL OUTPUT	Power OK signal. Please refer to the Function Manual		
ENVIRONMENT	WORKING TEMP.	-20 ~ +70°C (Refer to “Derating Curve”)		
	WORKING HUMIDITY	20 ~ 90% RH non-condensing		
	STORAGE TEMP., HUMIDITY	-40 ~ +85°C, 10 ~ 95% RH non-condensing		
	TEMP. COEFFICIENT	±0.05%/°C (0 ~ 50°C)		
	VIBRATION	10 ~ 500Hz, 2G 10min./1cycle, 60min. each along X, Y, Z axes		
	SAFETY STANDARDS	UL62368-1, CSA C22.2 No. 62368-1, TUV BS EN/EN62368-1, BSMI CNS14336-1, AS/NZS62368.1, IS13252(Part1)/IEC60950-1, EAC TP TC 004 approved		
	WITHSTAND VOLTAGE	I/P-O/P:3KVAC I/P-FG:2KVAC O/P-FG:0.5KVAC		
	ISOLATION RESISTANCE	I/P-O/P, I/P-FG, O/P-FG:100M Ohms / 500VDC / 25°C/ 70% RH		
	EMC EMISSION	Parameter	Standard	Test Level / Note
		Conducted	BS EN/EN55032 (CISPR 32)	Class B
		Radiated	BS EN/EN55032 (CISPR 32)	Class A
		Harmonic Current	BS EN/EN61000-3-2	—
		Voltage Flicker	BS EN/EN61000-3-3	—
		BS EN/EN55035, BS EN/EN61000-6-2, BSMI CNS13438		

SAFE TY & EMC (Note 4)	EMC IMMUNITY	Parameter	Standard	Test Level / Note
		ESD	BS EN/EN61000-4-2	Level 3, 8KV air ; Level 2, 4KV contact
		Radiated	BS EN/EN61000-4-3	Level 3
		EFT / Burst	BS EN/EN61000-4-4	Level 3
		Surge	BS EN/EN61000-4-5	Level 3, 2KV/Line-Earth ; Level 2, 1KV/Line-Line
		Conducted	BS EN/EN61000-4-6	Level 3
		Magnetic Field	BS EN/EN61000-4-8	Level 4
		Voltage Dips and Interrup tions	BS EN/EN61000-4-11	>95% dip 0.5 periods, 30 % dip 25 periods, >95% interruptions 250 p eriods
OTHE RS	MTBF	677.3K hrs min. Telcordia SR-332 (Bellcore) ; 75.2K hrs min. MIL-HDBK-2 17F (25°C)		
	DIMENSION	278*177.8*63.5mm (L*W*H)		
	PACKING	4Kg; 4pcs/16Kg/2.04CUFT		
NOTE	<p>1. All parameters NOT specially mentioned are measured at 230VAC input, rated load and 25°C of ambient temperature.</p> <p>2. Ripple & noise are measured at 20MHz of bandwidth by using a 12" twisted pair-wire terminated with a 0.1uf & 47uf parallel capacitor.</p> <p>3. Tolerance : includes set up tolerance, line regulation and load regulation.</p> <p>4. The power supply is considered a component which will be installed into a final equipment. All the EMC tests are been executed by mounting the unit on a 720mm*360mm metal plate with 1mm of thickness. The final equipment must be re-confirmed that it still meets EMC directives. For guidance on how to perform these EMC tests, please refer to "EMI testing of component power supplies."</p> <p>(as available on https://www.meanwell.com//Upload/PDF/EMI_statement_en.pdf)</p> <p>5. The ambient temperature derating of 3.5°C/1000m with fanless models and of 5°C/1000m with fan models for operating altitude higher than 2000m(6500ft).</p> <p>※ Product Liability Disclaimer For detailed information, please refer to https://www.meanwell.com/serviceDisclaimer.aspx</p>			

Block Diagram

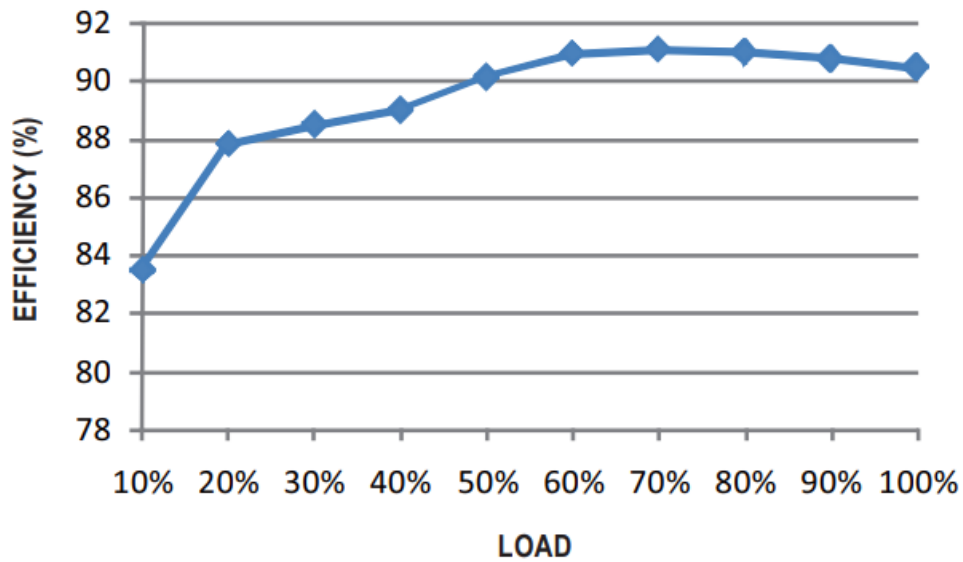


※ The curve above is measured at 230VAC.

- The curve above is measured at 230 VAC.

Function Manual

Remote Sense


- * The Remote Sense compensates voltage drop on the load wiring up to 0.25V

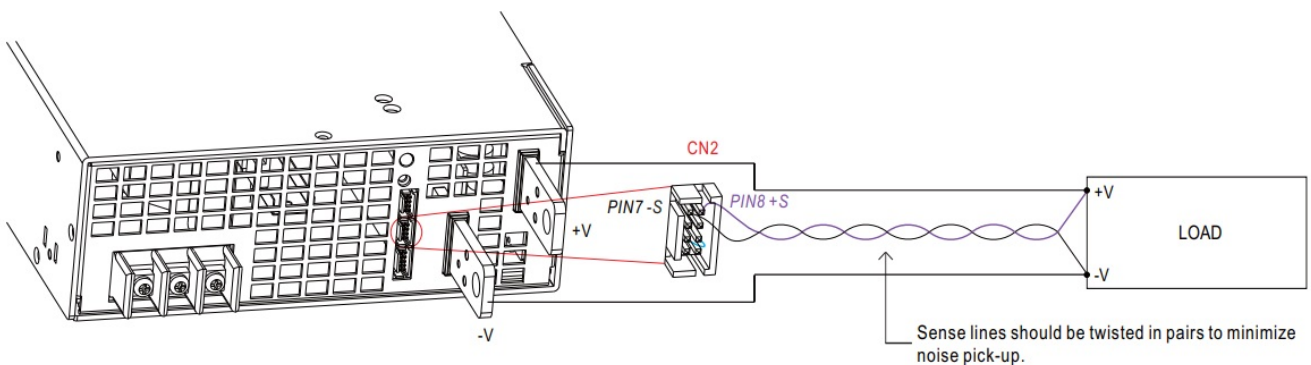


- * Caution: The power supply, by factory default(also the assumption for other sections), is shipped with, -S & -V on CN2, as well as +S & +V, shorted by connector. When activating the Remote Sense, the +S signal should be connected to the positive terminal of the load whereas -S signal to the negative terminal of the load.

Output Voltage Programming (or, PV / remote voltage programming / remote adjust / margin programming / dynamic voltage trim)


- * In addition to the adjustment via the built-in potentiometer, the output voltage can be trimmed to 20~110% (Typ.) of the nominal voltage by applying EXTERNAL VOLTAGE.

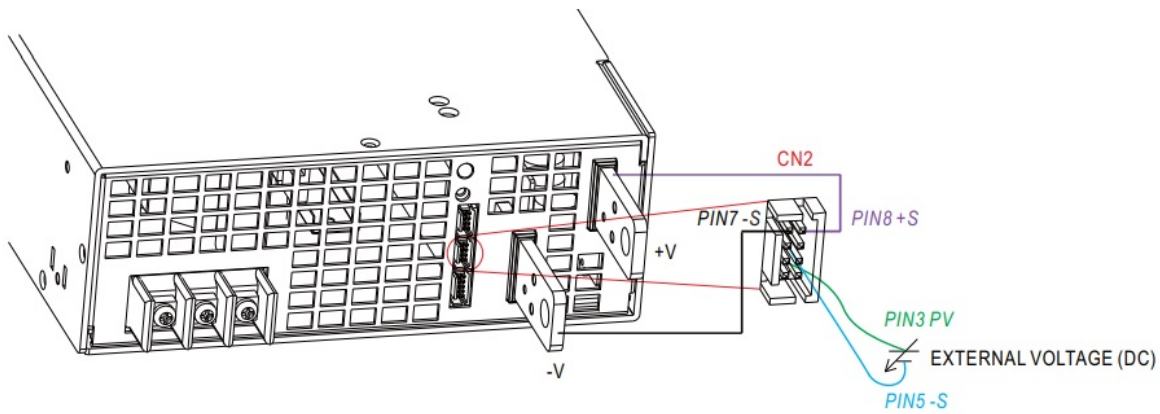

- Connecting an external DC source between PV & -S on CN2, and +S & +V, -S & -V also need to be connected.

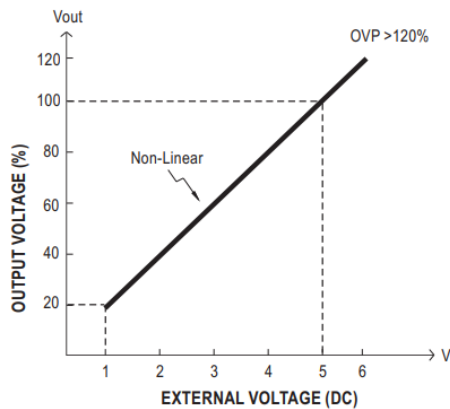

⊙ Please do not adopt PWM signal as the EXTERNAL VOLTAGE.

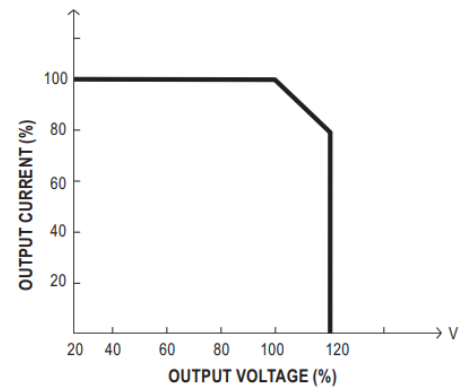


⊙ The rated current should change with the Output Voltage Programming accordingly.


* Caution: (1) By factory default, the Output Voltage Programming is not activated, and PV(PIN3) and PS(PIN4) of CN2 are shorted by connector. Whenever this function is not needed to activate, as assumed in other sections' diagrams, please keep PV(PIN3) and PS(PIN4) of CN2 shorted; otherwise, the power supply will have no output. (2) PV(PIN3) and PS (PIN4) of CN1 or CN2 must be disconnected if "Output Voltage Programming" function is used; otherwise, the internal electrical components may be damaged, and the power supply unit may thus be out of order.

Remote ON-OFF


* Remote ON-OFF is activated by the configuration with respect to CN1, CN2 and CN3 as shown in the following diagram.

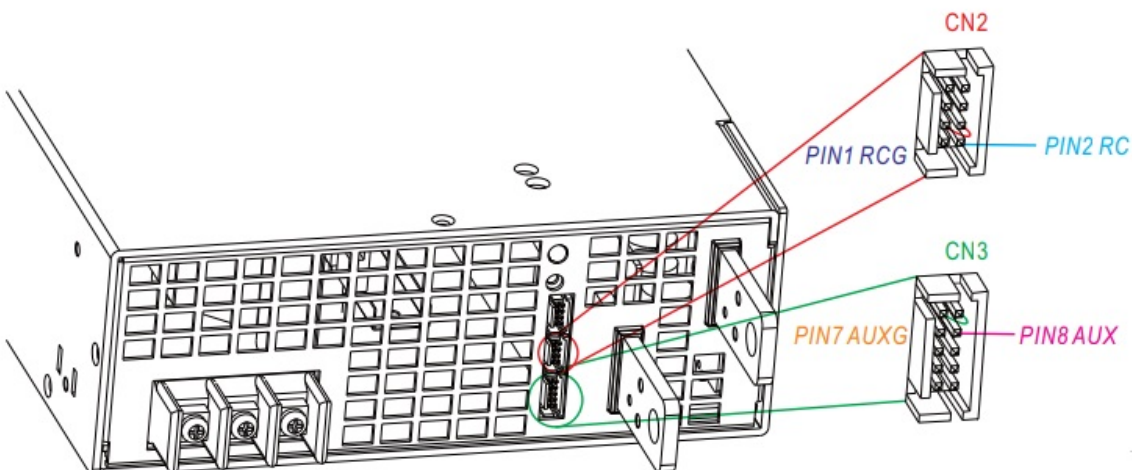


Example 3.2(A): Using external voltage source

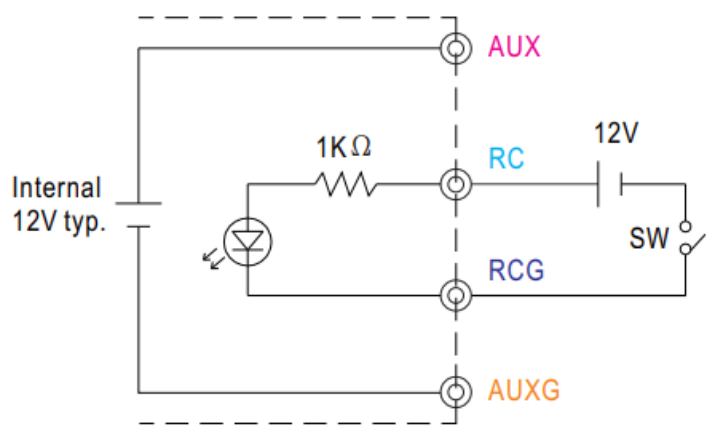

Example 3.2(B): Using internal 12V auxiliary output

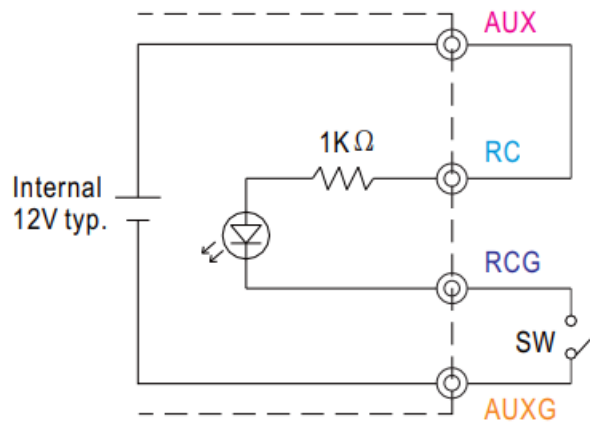

Example 3.2(C): Using internal 12V auxiliary output

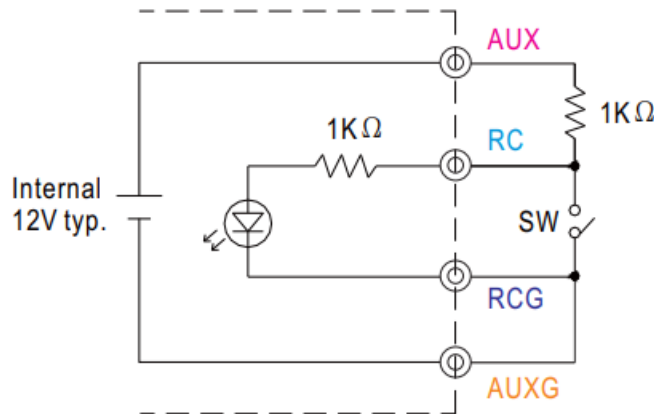


Connection Method

		Example 3.2(A)	Example 3.2(B)	Example 3.2(C)
SW Logic	Power supply output ON	SW Open	SW Open	SW Close
	Power supply output OFF	SW Close	SW Close	SW Open

Alarm Signal Output

* Alarm signal is sent out through “POK” & “P OK GND” and P OK2 & P OK GND2 pins on CN3. Please acknowledge an external voltage source is required for this function.

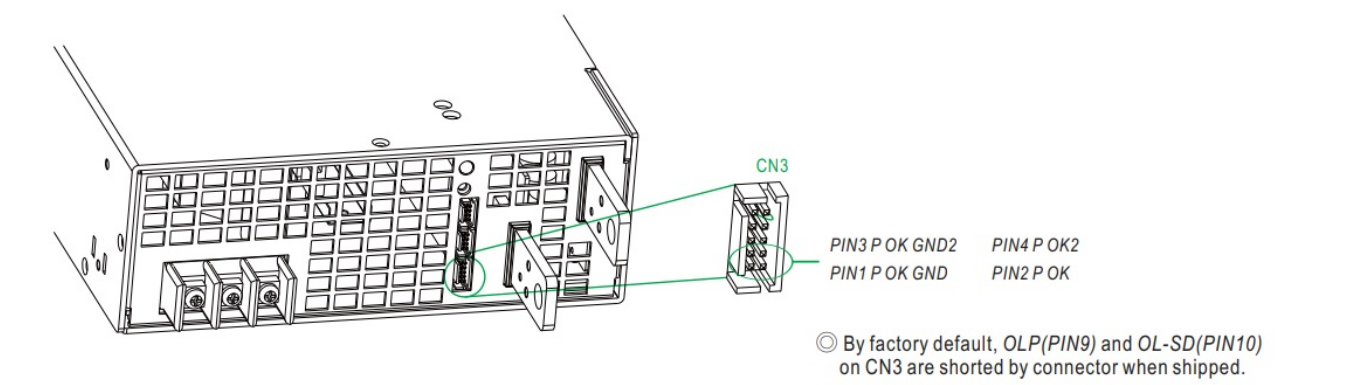

Function	Description	Output of alarm(P OK, Relay Contact)	Output of alarm(P OK2, TTL Signal)
P OK	The signal is “Low” when the power supply is above 80% of the rated output voltage, or, say, Power OK	Low (0.5V max at 500mA)	Low (0.5V max at 10mA)
	The signal turns to be “High” when the power supply is under 80% of the rated output voltage, or, say, Power Fail	High or open (External applied voltage, 500mA max.)	High or open (External applied voltage, 10mA max.)

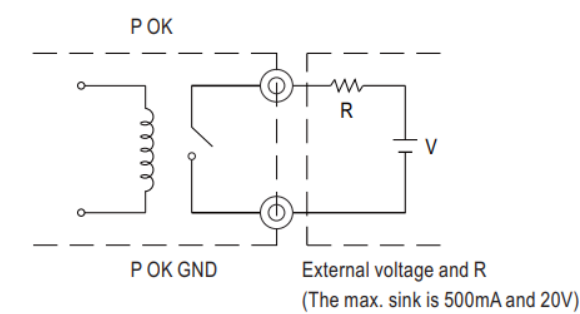


Fig. 4.2 Internal circuit of P OK (Relay, total is 10W)

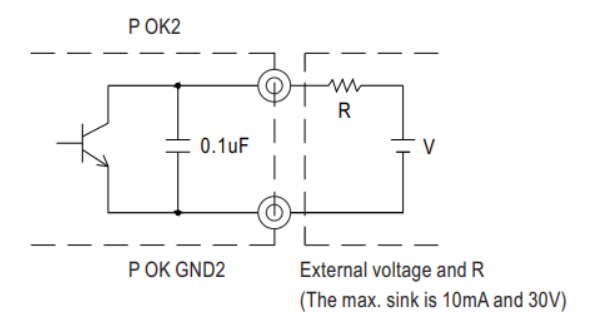


Fig. 4.3 Internal circuit of P OK2 (Open collector method)

Select Overload Protection Type

1. Insert the shorting connector on CN3 that is shown in Fig 5.2, the Overload Protection Type will be “constant current limiting with delay shutdown after 5 seconds, re-power on to recover”. This is the factory default.
2. Remove the shorting connector on CN3 that is shown in Fig 5.1, the Overload Protection Type will be “continuous constant current limiting”.

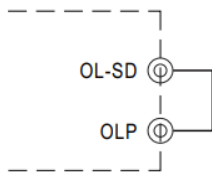


Fig. 5.1 Insert the CN3

Overload Protection Type : constant current limiting with delay shutdown after 5 seconds

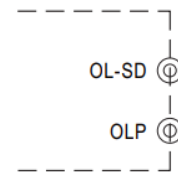



Fig. 5.2 Remove the CN3

Overload Protection Type : constant current limiting

Current Sharing with Remote Sense

RSP-3000 has the built-in active current sharing function and can be connected in parallel, up to 3 units, to provide higher output power as exhibited below :

- The power supplies should be paralleled using short and large-diameter wiring and then connected to the load.
- Difference of output voltages among parallel units should be less than 0.2V.
- The total output current must not exceed the value determined by the following equation: Maximum output current at parallel operation= Rated current per unit) X (Number of unit) X0.9
- When the total output current is less than 3% of the total rated current, or say (3% of Rated current per unit) X (Number of unit) the current shared among units may not be fully balanced.

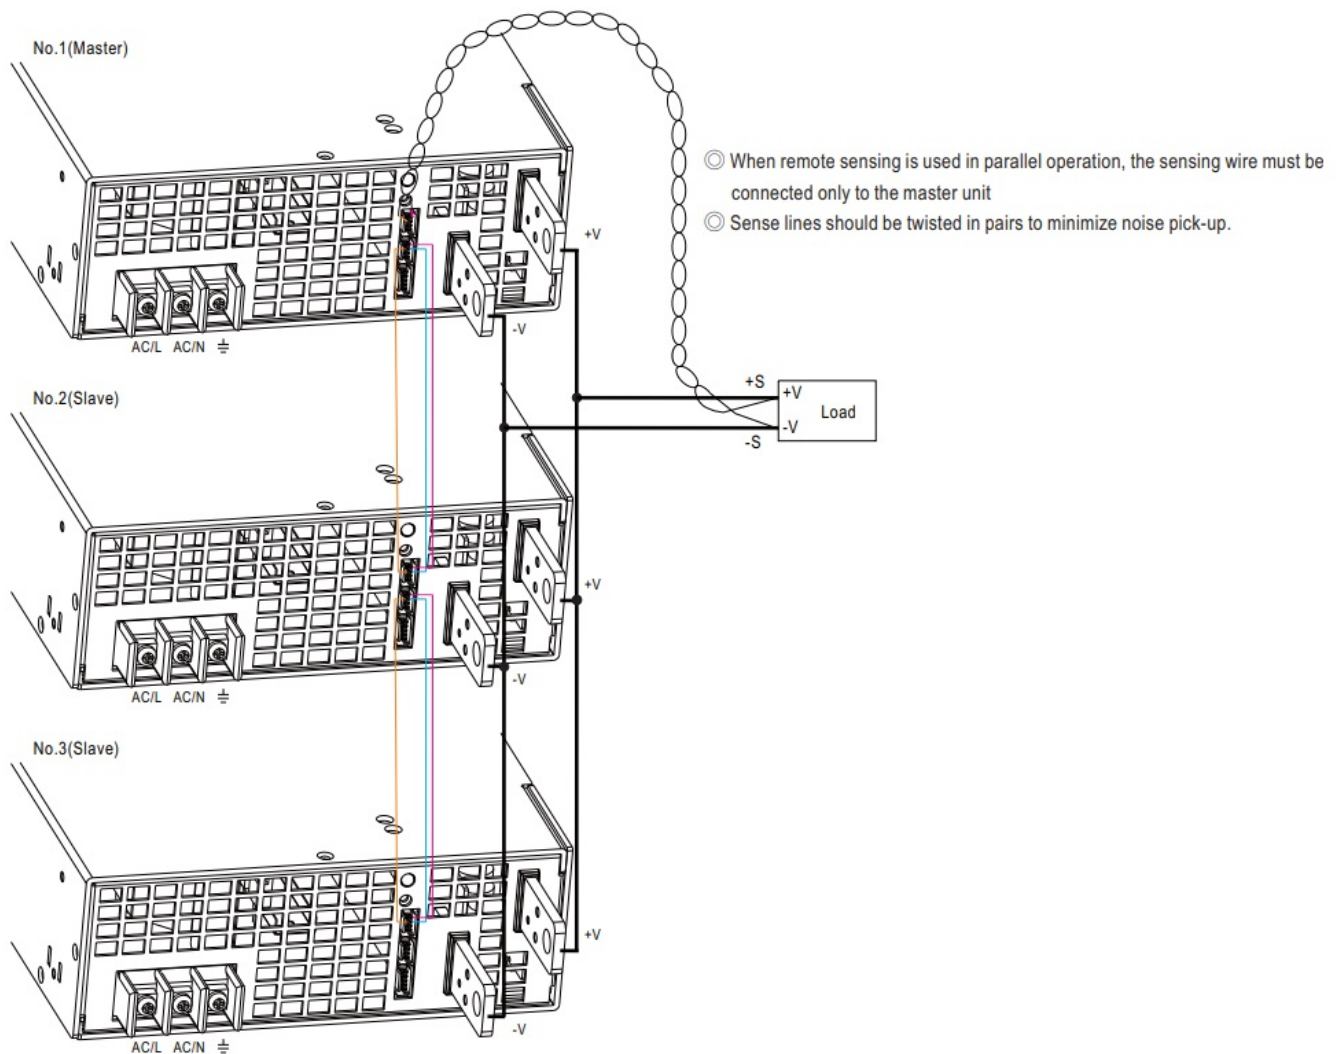

- ⊙ +S, -S and CS on CN1 or CN2 are connected mutually in parallel.
- ⊙ Under parallel operation, the "output voltage programming" function is not available.

Three Phase Connect

Users can exploit three units of RSP-3000(unit 1 ,unit 2, unit 3) to work with 3 ϕ power system. Please refer to following diagrams for configuration.

FIG. A: 3 ψ 3W 220VAC SYSTEM

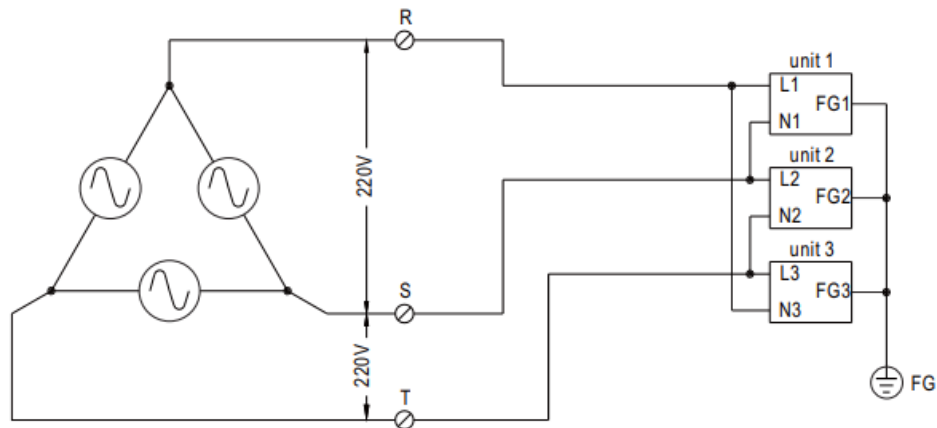


FIG. B: 3 ψ 4W 220/380VAC SYSTEM



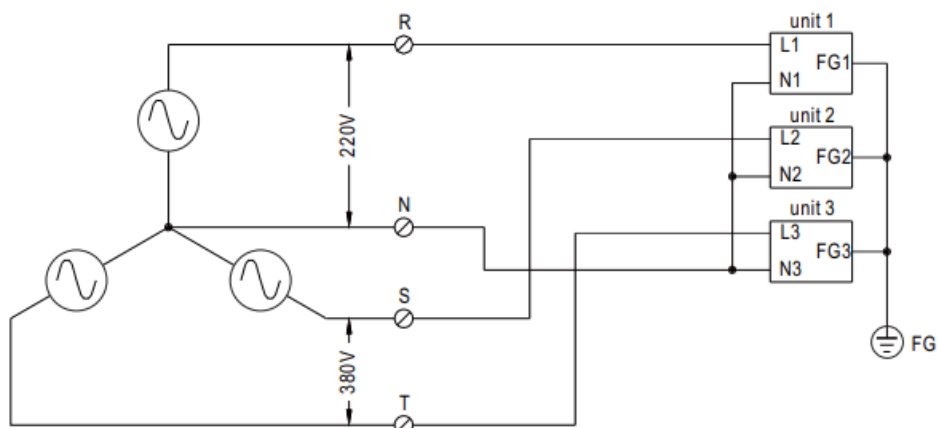


FIG. C: 3 ψ 4W 190/110VAC SYSTEM

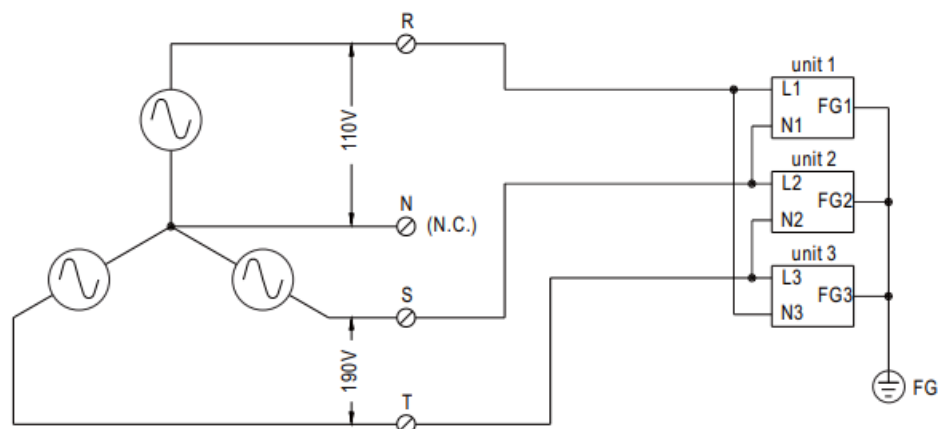


Mechanical Specification

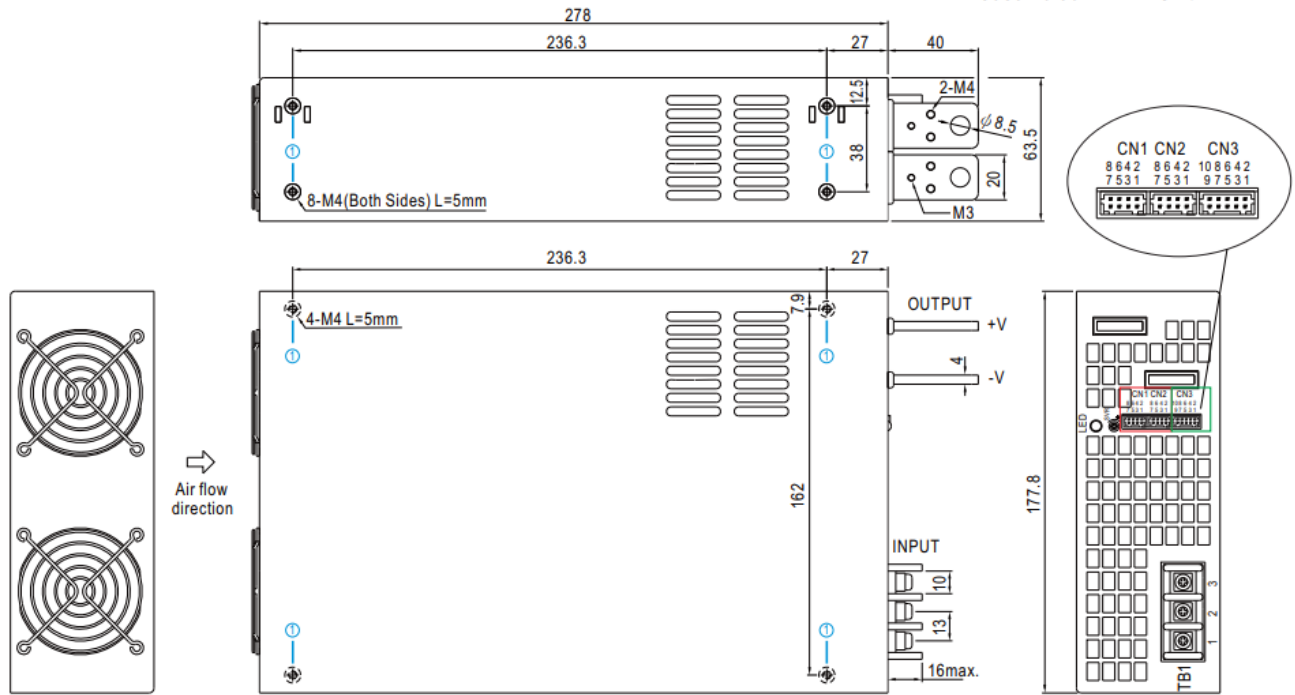


Mounting Instruction

Hole No	Recommended Screw Size	MAX. Penetration Depth L	Recommended mounting torque
1	M4	5mm	7~10Kgf-cm

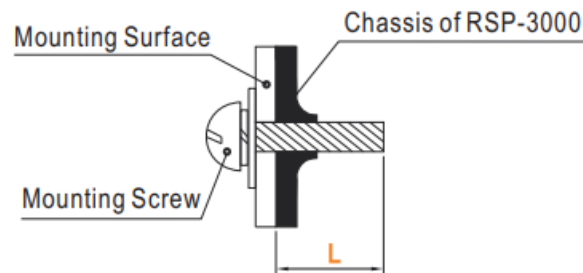

Control Pin No. Assignment (CN1,CN2) : HRS DF11-8DP-2DS or equivalent

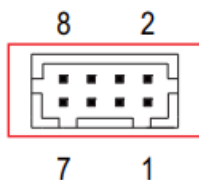


Mating Housing	HRS DF11-8DS or equivalent
Terminal	HRS DF11-**SC or equivalent

- CN1 and CN2 are connected internally.

Pin No	Function	Description
1	RCG	Remote ON-OFF Ground
2	RC	Remote ON-OFF
3	PV	Connection for output voltage programming
4	PS	Reference Voltage Terminal
5,7	-S	Negative sensing for remote sense
6	CS(Current Share)	Current Share
8	+S	Postive sensing for remote sense

Control Pin No. Assignment (CN3) : HRS DF 11-10DP-2DS or equivalent

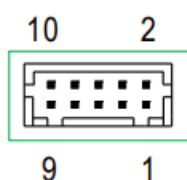

Mating Housing	HRS DF11-10DS or equivalent
Terminal	HRS DF11-10SC or equivalent

Pin No	Function	Description
1	P OK GND	Power OK Ground
2	P OK	Power OK Signal (Relay Contact)
3	P OK GND 2	Power OK Ground
4	P OK2	Power OK Signal (TTL Signal)
5	RCG	Remote ON-OFF Ground
6	RC	Remote ON-OFF
7	AUXG	Auxiliary Ground
8	AUX	Auxiliary Output
9	OLP	Overload(OLP) type select
10	OL-SD	

AC Input Terminal Pin No. Assignment

Pin No.	Assignment	Diagram	Maximum mounting torque
1	AC/L		18Kgf-cm
2	AC/N		
3	FG \perp		

Installation Manual


Please refer to: <http://www.meanwell.com/manual.html>

- Downloaded from Arrow.com

User’s Manual



Documents / Resources

	<p>MEAN WELL RSP-3000 Series 3000W Power Supply With Single Output [pdf] Owner's Manual</p> <p>RSP-3000 Series 3000W Power Supply With Single Output, RSP-3000 Series, 3000W Power Supply With Single Output, Power Supply With Single Output, With Single Output, Single Output, Output</p>
--	--

References

- [TÜV Rheinland - Home | AU | TÜV Rheinland](#)
- [User Manual](#)

[Manuals+.](#) [Privacy Policy](#)

This website is an independent publication and is neither affiliated with nor endorsed by any of the trademark owners. The "Bluetooth®" word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. The "Wi-Fi®" word mark and logos are registered trademarks owned by the Wi-Fi Alliance. Any use of these marks on this website does not imply any affiliation with or endorsement.