



MECHEN M3 Digital Player User Manual

[Home](#) » [MECHEN](#) » MECHEN M3 Digital Player User Manual

Contents [[hide](#)]

- 1 MECHEN M3 Digital Player
- 2 Getting Started
 - 2.1 Switch the Unit On/Off
 - 2.2 Basic Audio Functions
 - 2.3 Data Transfer
 - 2.4 Headphones and Speaker
- 3 Main Functions
 - 3.1 Music
- 4 Video
- 5 FM Radio
 - 5.1 FM Recording
 - 5.2 How to choose the FM Band?
- 6 Bluetooth
 - 6.1 How to pair M3 with Bluetooth speaker or Bluetooth headset?
 - 6.2 E-Book
- 7 Settings
 - 7.1 Folder
 - 7.2 Recorder
- 8 Additional Functions
- 9 Specifications
- 10 FCC Statement
- 11 Documents / Resources
 - 11.1 References
- 12 Related Posts

MECHEN

MECHEN M3 Digital Player



For easy reference, download the Pocket Guide from www.mechen.com.cn

This is version 1.0 of the M3 Music Player Manual. The latest version of the manuals in your preferred language and various tutorials can be found at www.mechen.com.cn/product-manuals/

Introduction

Thank you for choosing the MECHEN M3 Music Player!

We wish you a great music experience and encourage you to write to us at mechenservice@hotmail.com regarding any questions, suggestions or comments you may have.


Getting Started

Getting to Know Your M3



Charging the M3

Using the supplied USB cable, connect your computer or wall charger to the USB port on your M3.

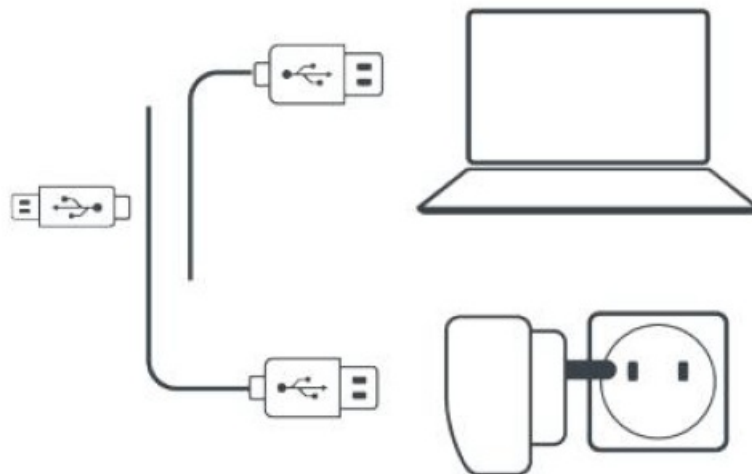

While charging, check the battery icon on the top right corner of M3, indicates as follows:




The power bar is moving from one to four: Charging



Four grid power and stopped moving: Full Charged

Attention: Use only the 5V/500mA charger for charging or it may lead to product failure.

Switch the Unit On/Off

To switch on: Tap on the  button for 3s.

To switch off: Tap on the  button, the screen shows “Bye Bye” confirming that your unit is switching off.

Basic Audio Functions

Volume up: Tap on the button +

Volume down: Tap on the button –


Data Transfer

Using the supplied USB cable, connect your computer and copy over media files as if it was a flash driver or use music management software such as Windows Media Player to transfer the files (not work for iTunes).

Attention:

If your computer cannot detect the MP3 Player, pls update your USB driver or try another cable. If it doesn't help, pls email to mechenservice@hotmail.com

Back

While the music is being played, Tap on the button  to exit.

Headphones and Speaker

ONLY Headphones with impedance 16Ω or 32Ω are supported. Built-in Speaker could be turn OFF, see “Settings”.

Reset

Poke the reset hole with a thin needle or hold the power button for 15s.

Main Functions


M3 makes it easy for you to listen to music in a convenient and joyful manner.

Music

Tap on the icon of Music, then you'll find the related lists:





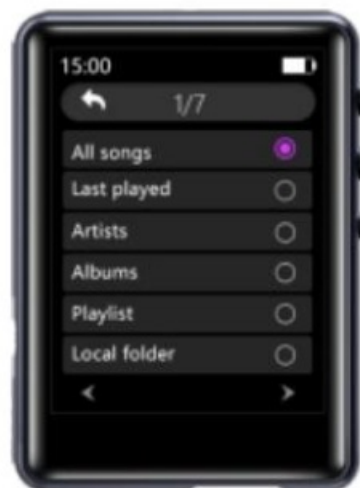








(Without TF card insert)



(With TF card insert)

1. Music Control

Icon	Operation	Function
	Tap on the button	Exit
	Tap on the button	Select each option from menu list
	Tap on the button	Play the Music
	Tap on the button	Pause the Music
	Tap on the button	Play the Previous Song
	Tap on the button	Play the Next Song
	Hold the button	Rewind the currently playing song
	Hold the button	Fast forward the currently playing song
	Tap on the button	Change the play speed from -7~+7
	Tap on the button	Add the song to the list of your favorite song
	Tap on the button	Enter the settings menu of the song

2. Playback Mode



Sequential Play



Single Cycle



All Repeat



Shuffle

3. Music Formats

Music Format	Bitrate	Sampling Rate
MP3	8Kbps~320Kbps	8MHz~48MHz
WMA	5Kbps~384Kbps	8MHz~48MHz
APE	800Kbps~1000Kbps	8MHz~48MHz
WAV	32Kbps~384Kbps	8MHz~48MHz
FLAC	1000Kbps~1200Kbps	8MHz~48MHz
ACC-LC	8Kbps~320Kbps	8MHz~48MHz

Video

Tap on the icon of Video and the lists pop up:




Without TF Card	All the videos listed
With TF Card	Local Folder & Card Folder Listed

FM Radio



FM Recording

Tap on the FM icon, check the menu of settings and choose the option “Start FM radio recording”.

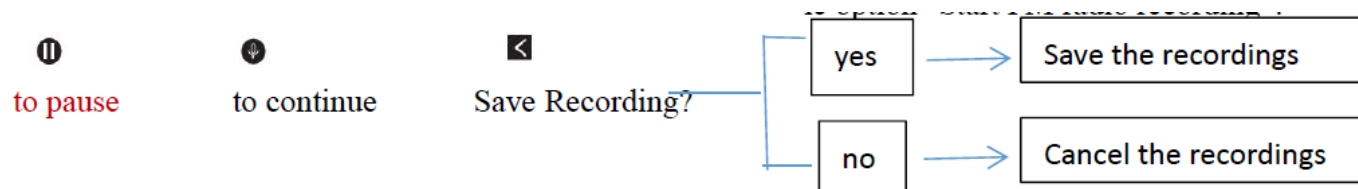 

How to choose the FM Band?

- Enter the settings menu of FM , Tap on the “Tuner Region” Common Band: 87.0 MHZ ~ 108.0 MHZ
- Japan Band: 76MHZ ~ 90MHZ
- Euro Band: 87.0 MHZ ~ 108.0 MHZ

Bluetooth

How to pair M3 with Bluetooth speaker or Bluetooth headset?

1. Turn on the Bluetooth speaker or Bluetooth headset and open the Bluetooth mode.
2. Turn on the Bluetooth mode of M3, and start to search for the Bluetooth device around.
3. After successful search, choose the Bluetooth device to start to pair with Bluetooth speaker or Bluetooth headset.

Attention:

1. M3 cannot pair with Smart Phones.
2. The ACC-LC music format is not supported under the Bluetooth playing mode.
3. When listen to radio by Bluetooth, wired headphones are needed as radio antenna.
4. Video, Photo, Recorder can not be used under the Bluetooth Mode.

 
E-Book

Tap on the icon and all the e-book files will be listed in the menu.



Attention: ONLY TXT files are supported.

Settings

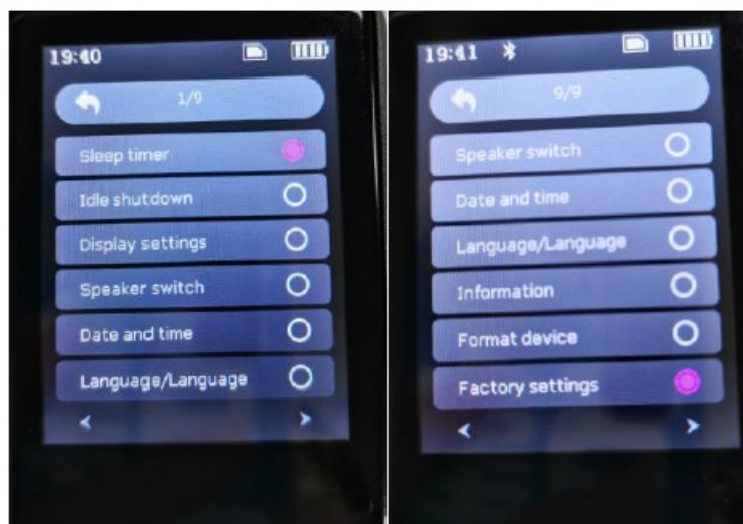

Visit www.mechen.com.cn/product-manuals/ to get tutorials

Folder

 


Attention:

- MP3 and SD card's memory will be sorted by edit time, the first file be dropped in will be listed at the top.
- If you renamed the file or do some other modifications, the file goes to the bottom of the list. This trick only works for "Folder", not "Music".
- Don't forget to add a bookmark when you use audiobook.

Recorder

Recorder is a good helper for class, speech, meetings

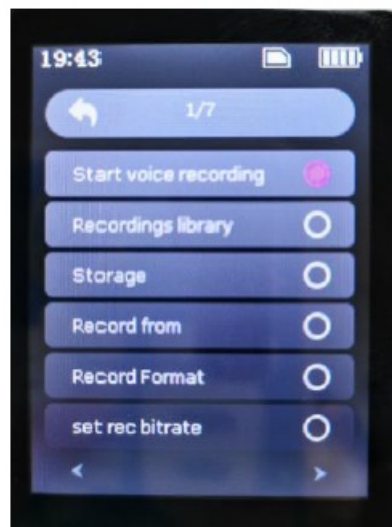

Additional Functions

Photo, Stopwatch, Alarm, Calendar, Theme

Specifications

Screen Size	2.4 Inch
Screen Resolution	240 x 320 LCD
Weight	2.75oz (78g)
Dimension	2*2.8*0.38 Inch (51.5*71.5*9.6 mm)
Flash memory	32GB
Audio format	MP3/WAV/APE/WMA/FLAC/ACC-LC
Video format	AMV/AVI
Recording format	MP3/WAV
Battery	3.7 V/400 mAh
Charging time	1-3 hours
SD card expansion	Up to 128G
Lyric Format	LRC

Support

For additional information:

www.mechen.com.cn

mechenservice@hotmail.com

All rights reserved. MECHEN, the MECHEN logo and other MECHEN marks are owned by MECHEN and may be registered. All other trademarks are the property of their respective owners. MECHEN assumes no responsibility for any errors that may appear in this document. Information contained herein is subject to change without notice.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Documents / Resources

<div><div>MECHEN</div><div>USER MANUAL</div><div>M3 Digital Player</div></div>	<div><div>MECHEN M3 Digital Player [pdf] User Manual</div><div>M3, 2A4U6-M3, 2A4U6M3, M3 Digital Player, Digital Player</div></div>
--	---

References

- MECHEN

[Mei Qin](#)