



media-tech MT1123 VERTIC RF Vertical Wireless Optical Mouse Instruction Manual

[Home](#) » [media-tech](#) » media-tech MT1123 VERTIC RF Vertical Wireless Optical Mouse Instruction Manual 

media-tech


MT1123 VERTIC RF Vertical Wireless Optical Mouse Instruction Manual

Contents

- [1 Buttons and functions](#)
- [2 Use](#)
- [3 Documents / Resources](#)
- [4 Related Posts](#)

Buttons and functions

1. Left button
2. Right button
3. Middle button, scrolling wheel, charging LED
4. Forward button
5. Back button
6. DPI adjustment
7. Power & illumination switch
8. IR optical sensor
9. RF receiver
10. Micro USB charging socket

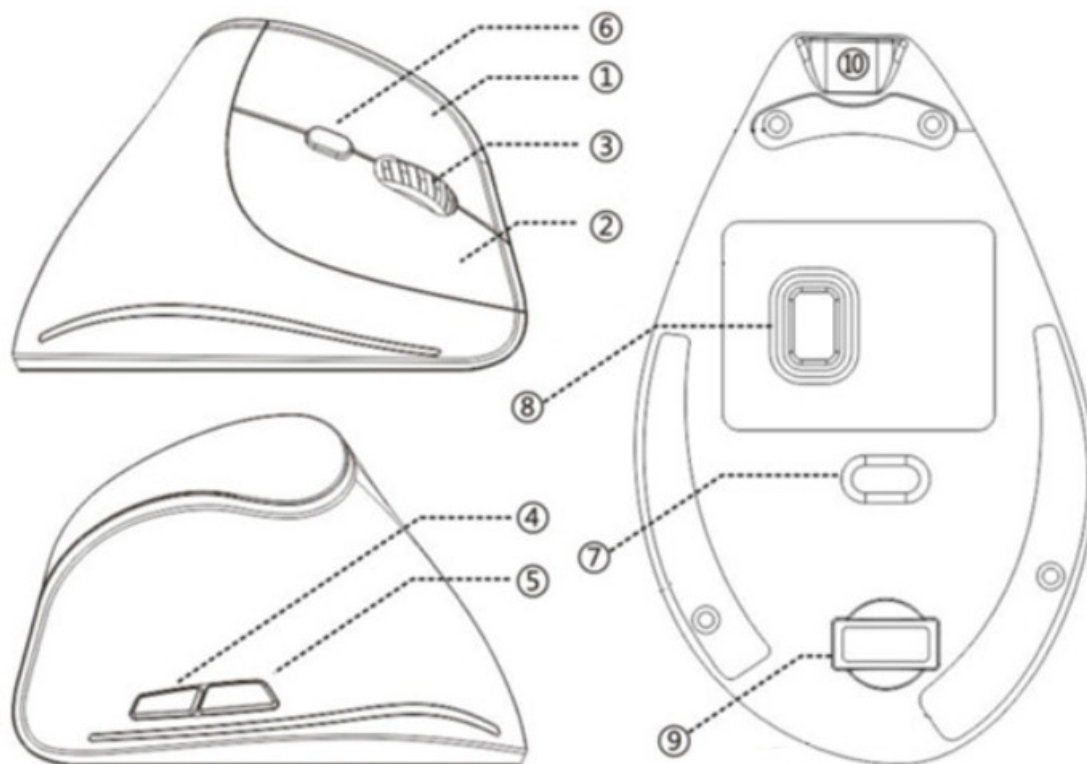

Use

1. Charging: BLUE LIGHT (3) > LIGHT OFF > 100% charged
2. DPI changing: press (6) button to set 1000, 1600, 2400DPI.
3. Illumination ON/OFF: use (7) switch to enable or disable mouse illumination

NOTE. Mouse illumination make higher battery consumption > need charging earlier.

Due to continuous development specification and appearance of product are subject to change without prior notice. For technical support please visit www.media-tech.eu.

Note on environmental protection:



After the implementation of the European Directive 2012/19/UE in the national legal system, the following applies: Electrical and electronic devices may not be disposed of with domestic waste. Consumers are obliged by law to return electrical and electronic devices at the end of their service lives to the public collecting points set up for this purpose or point of sale. Details to this are defined by the national law of the respective country. This symbol on the product, the instruction manual or the package indicates that a product is subject to these regulations. By recycling, reusing the materials or other forms of utilizing old devices, you are making an important contribution to protecting our environment.

media-tech

Documents / Resources

