



## media-tech PARTYBOX UNI BT MT3174 Bluetooth Speaker User Manual

[Home](#) » [media-tech](#) » media-tech PARTYBOX UNI BT MT3174 Bluetooth Speaker User Manual 





## Contents

- [1 FANCTIONS](#)
- [2 Specification](#)
- [3 BLUETOOTH MODE](#)
- [4 Documents / Resources](#)
- [5 Related Posts](#)

## FANCTIONS

1. Volume knob
2. Microphone jack
3. Power switch
4. Micro USB charging socket and LED
5. Previous track / volume – / previous FM station
6. Play / pause, automatic search for all FM radio stations
7. Next track / volume + / next FM station
8. M – selection of operating modes
9. AUX socket
10. USB socket for USB flash drive (MP3 player)
11. microSD memory slot (MP3 player)

## Specification

- Compact Bluetooth stereo speaker

- KARAOKE function, cable microphone included
- Bluetooth 5,0
- FM radio with automatic station search 87,6-108MHz
- Mp3 player
- Support for micro SD cards and USB storage devices
- Volume control
- AUX socket
- 6.3mm jack microphone socket
- 5V power supply via USB / micro USB cable
- Built-in rechargeable lithium-ion battery, up to 6 hours of operation
- Power: RMS 30W, PMPO 750W
- Two 4 „speakers
- Transmission frequency: 150 — 20000 Hz
- LED information display
- Dimensions: 155x398mm
- Weight: 1,4 kg

## BLUETOOTH MODE

Make sure you have switched to Bluetooth mode, use your smart-‘phone and search for Bluetooth devices. Select „MT3174“ in the list to pair the device. The device does not require any password. After successful pairing, you can play music. You can use the buttons to play/pause/select previous or next song.

## FM RADIO MODE

After switching to radio mode, press Play/Pause button (6) to automatically search for radio stations. After completing the search, you can switch channels using the Previous (5)/Next (7) buttons.

## AUX TYPE

Switching to this mode allows you to play audio from an external device connected to the AUX jack.

## MP3 PLAYBACK

Connecting the pen drive to the USB (10) port or inserting a microSD card containing MP3 files will switch the speaker to MP3 player mode. You can control the playback by Previous (5)/Next song (7) buttons.

## BATTERY CHARGING

The speaker is equipped with a lithium-ion battery. Charge it at least once every 30 days and do not allow deep discharge. When the device is charging, the red LED is ON. The LED will turn off when the speaker is fully charged.

Due to continuous development specification and appearance of product are subject to change without prior notice. For technical support please visit [www.mediatech.eu](http://www.mediatech.eu).

## Environmental guidance:




The device is marked with the symbol of a crossed out waste container, in accordance with the European Directive 2012/19/EC on waste electrical and electronic equipment. Products marked with this symbol should not be disposed of or disposed of after the end of their useful life together with other household waste. The user is obliged to dispose of waste electrical and electronic equipment by delivering it to a designated point where such hazardous waste is recycled. The collection of this type of waste in separate places and the proper process of their recovery contribute to the protection of natural resources. Proper recycling of waste electrical and electronic

equipment has a beneficial effect on human health and the environment. In order to obtain information on where and how to dispose of waste electrical and electronic equipment in an environmentally safe way, the user should contact the relevant local authority, the waste collection point or the point of sale where he purchased the equipment.

Media-Tech Polska sp. z o.o. declares that this device complies with the essential requirements and relevant provisions of Directive 2014/53/EU of the European Parliament and of the Council of 16 April 2014 on the harmonization of the laws of the Member States relating to the making available on the market of radio equipment and repealing Directive 1999/5/EC. The full text of the CE declaration is available at [www.media-tech.eu](http://www.media-tech.eu)



## Documents / Resources

 <p><b>PARTYBOX UNI BT</b> PL Instrukcja obsługi Funkcje:</p> <ol style="list-style-type: none"><li>1. Funkcja głośnika</li><li>2. Funkcja słuchawek</li><li>3. Funkcja słuchawek bezprzewodowych</li><li>4. Funkcja słuchawek bezprzewodowych z podświetleniem LED</li><li>5. Funkcja słuchawek bezprzewodowych z podświetleniem LED i podświetleniem LED</li><li>6. Funkcja słuchawek bezprzewodowych z podświetleniem LED i podświetleniem LED</li><li>7. Funkcja słuchawek bezprzewodowych z podświetleniem LED i podświetleniem LED</li><li>8. Funkcja słuchawek bezprzewodowych z podświetleniem LED i podświetleniem LED</li><li>9. Funkcja słuchawek bezprzewodowych z podświetleniem LED i podświetleniem LED</li><li>10. Funkcja słuchawek bezprzewodowych z podświetleniem LED i podświetleniem LED</li><li>11. Funkcja słuchawek bezprzewodowych z podświetleniem LED i podświetleniem LED</li></ol>	<p><a href="#">media-tech PARTYBOX UNI BT MT3174 Bluetooth Speaker</a> [pdf] User Manual MT3174, PARTYBOX UNI BT MT3174 Bluetooth Speaker, PARTYBOX UNI BT MT3174, Bluetooth Speaker, Speaker</p>
---	---